

DP0, AL4

Page 2: Hydraulic Distributor Installation.


Page 3: Application Chart & Solenoid Information.



TECHNICAL INFORMATION BULLETIN

Installation DP0 Hydraulic Distributors

There is some uncertainty concerning the correct procedure for adjusting the leaf spring. The photograph should clarify the adjustment procedure.

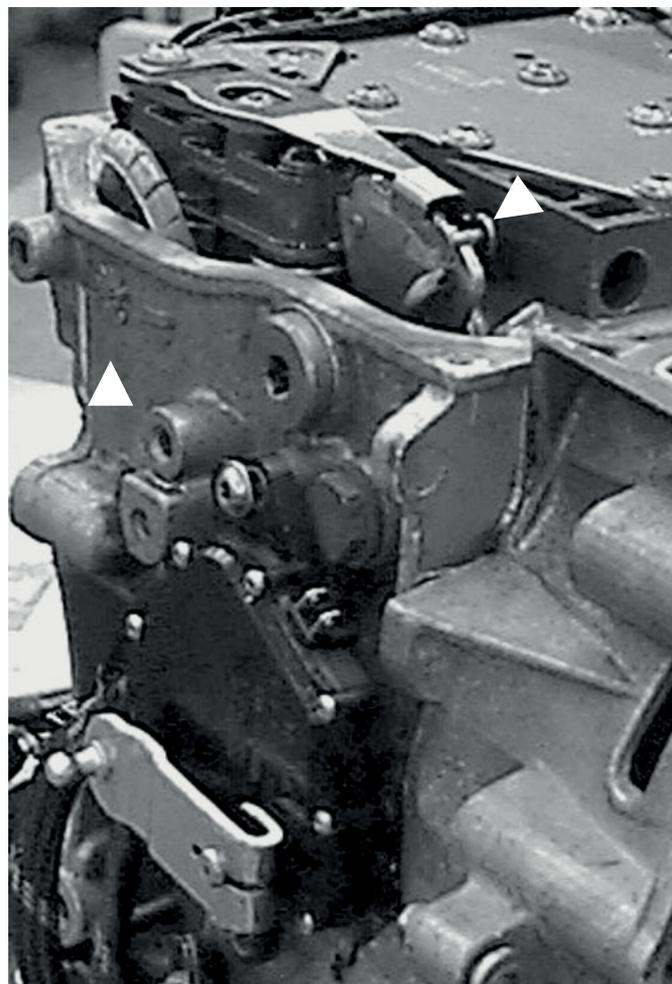

Adjust leaf spring so that the roller is positioned exactly in the 1st gear notch.

When selector lever is held fully clockwise (In direction of arrow) the leaf spring roller must sit exactly in the 1st gear notch.



TECHNICAL INFORMATION BULLETIN

DP0 Clutch, Brake Solenoid Application Chart

Gear Selection	Clutches		Brakes			Solenoids					
	E1	E2	F1	F2	F3	EV1	EV2	EV3	EV4	EV5	EV6
R	X			X						*	*
N	X									*	*
D1	X				X			X	X	*	*
D2		X			X		X		X	*	*
D3	X	X								*	*
D4		X	X			X	X			*	*

* EV5 & EV6 Pulse before and after shifts to regulate accumulation pressures

