

Automatic Transaxle and Transfer Workshop Manual AW6A-EL AW6AX-EL

CONTENTS

Title	Section	
	FEATURES	SERVICE
GENERAL INFORMATION	00	00
DRIVELINE/AXLE	03	03
TRANSMISSION/TRANSAXLE	05	05

© 2006 Mazda Motor Corporation
PRINTED IN U.S.A., FEBRUARY 2006
Form No. 1874-1U-06B
Part No. 9999-95-0AW6-07

FOREWORD

This manual explains the service points for the above-indicated automotive system. This manual covers all models with the above-indicated automotive system, not any one specific model.

In order to do these procedures safely, quickly, and correctly, you must first read this manual and any other relevant service materials carefully.

All the contents of this manual, including drawings and specifications, are the latest available at the time of printing.

As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Mazda dealers.


This manual should be kept up-to-date. Mazda Motor Corporation reserves the right to alter the specifications and contents of this manual without obligation or advance notice.

All rights reserved.

No part of this book may be reproduced or used in any form or by any means, electronic or mechanical-including photocopying and recording and the use of any kind of information storage and retrieval system-without permission in writing.

Mazda Motor Corporation
HIROSHIMA, JAPAN

FEATURES

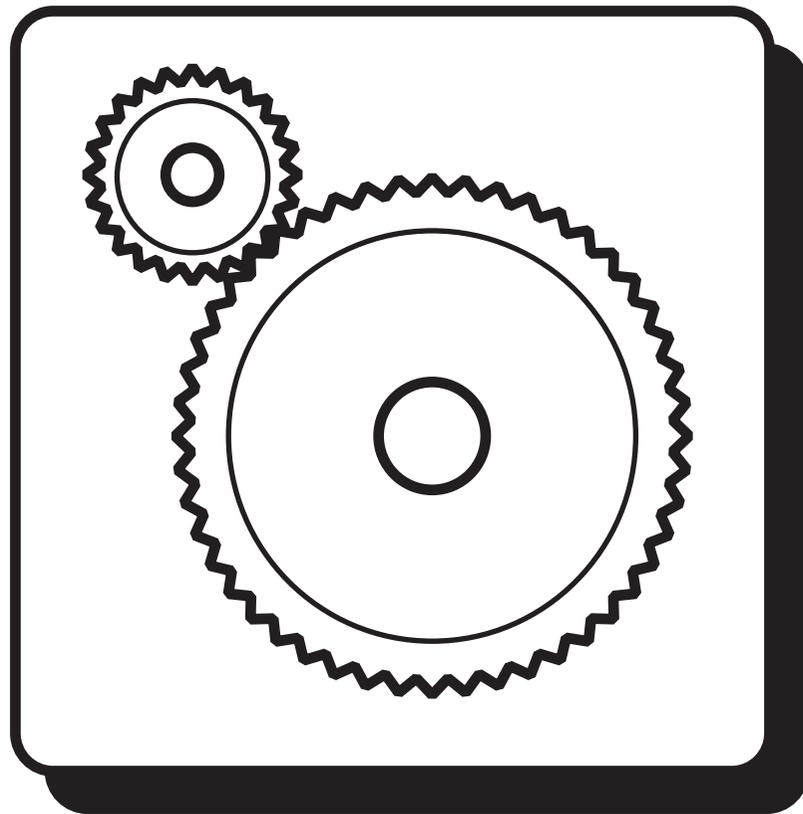

DRIVELINE/AXLE

03

SECTION

03-00

OUTLINE 03-00 TRANSFER 03-16

03-00 OUTLINE

DRIVELINE/AXLE FEATURES 03-00-1 DRIVELINE/AXLE SPECIFICATIONS... 03-00-1

DRIVELINE/AXLE FEATURES

id030000100100

Improved reliability	• Separate oil pump and oil cooler have been adopted to the transfer
----------------------	--

DRIVELINE/AXLE SPECIFICATIONS

id030000100200

Item		Specification
Transfer oil	Type	API service GL-5
	Grade	SAE 80W-90
	Viscosity	
Oil capacity (approx. quantity)	(L {US qt, Imp qt})	1.2 {1.3,1.1}

03-16 TRANSFER


TRANSFER STRUCTURAL VIEW 03-16-1
TRANSFER CROSS-SECTIONAL
VIEW 03-16-1

TRANSFER POWER FLOW 03-16-2
TRANSFER OIL COOLER
CONSTRUCTION 03-16-2

03-16

TRANSFER STRUCTURAL VIEW


id031600100100

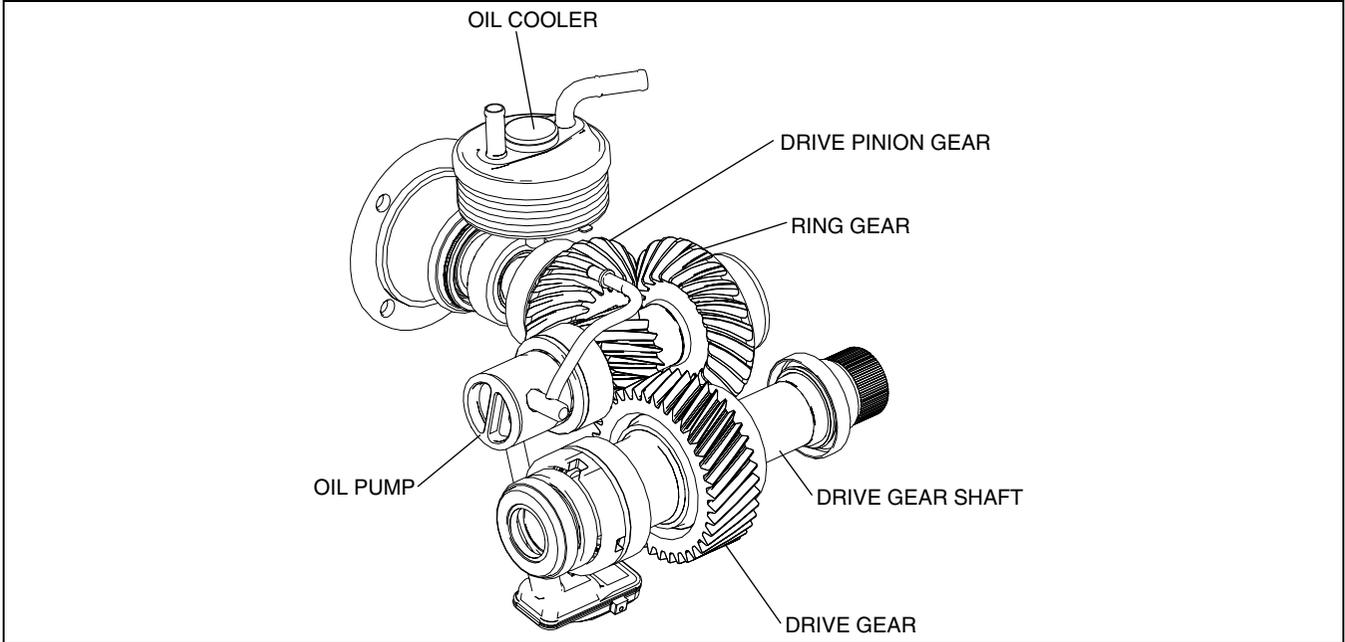

acxuun0000598

TRANSFER CROSS-SECTIONAL VIEW

id031600100200

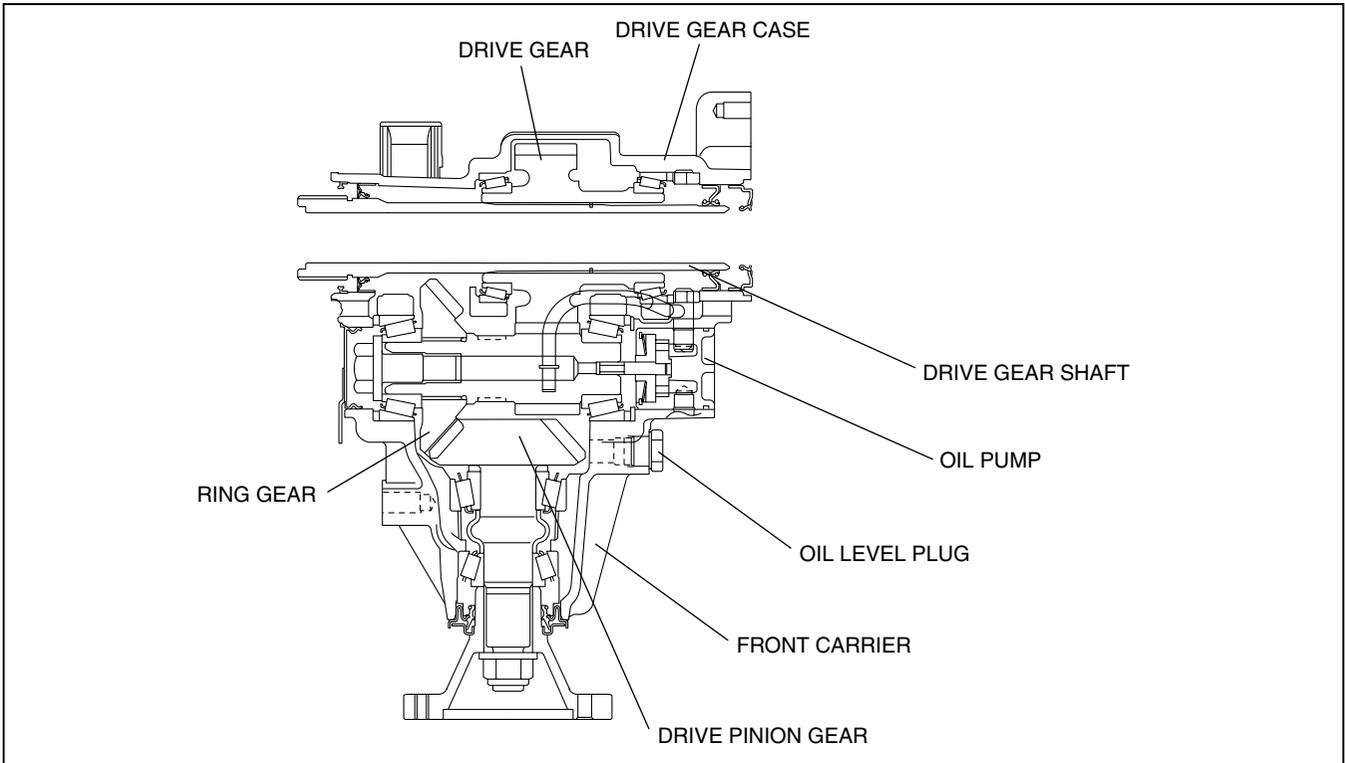


acxuun0000599

TRANSFER

TRANSFER POWER FLOW


id031600100300

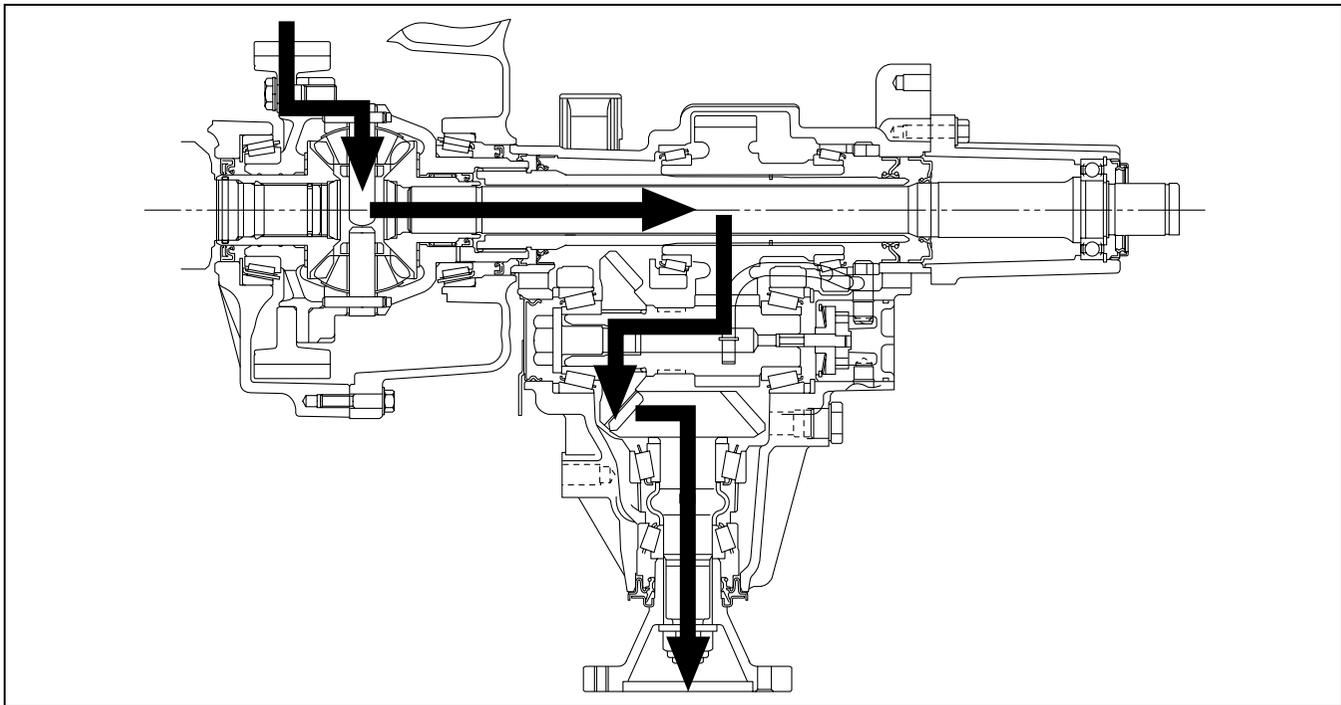

acxuun00000600

TRANSFER OIL COOLER CONSTRUCTION

id031600100400

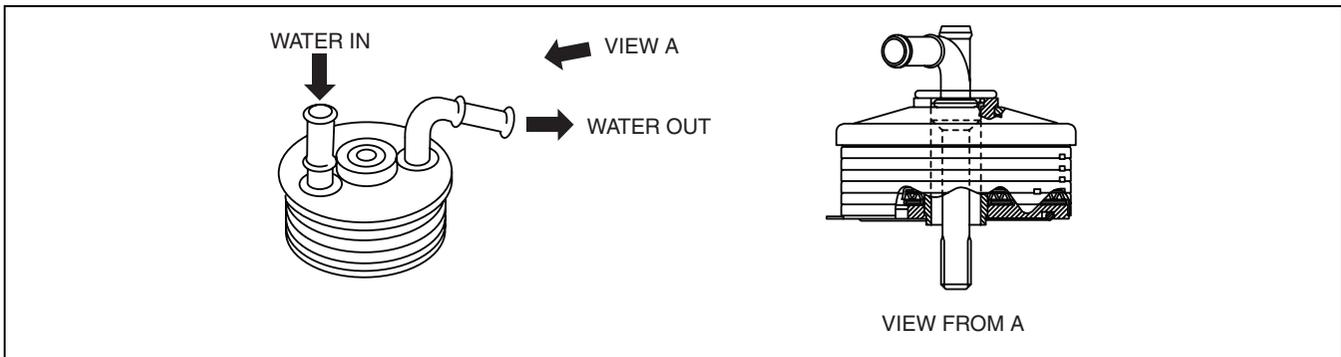

acxuun00000601

TRANSMISSION/TRANSAXLE

05

SECTION

OUTLINE 05-00

AUTOMATIC TRANSAXLE ... 05-17

05-00

05-00 OUTLINE

TRANSMISSION/TRANSAXLE
FEATURES 05-00-1

AUTOMATIC TRANSAXLE
SPECIFICATIONS 05-00-1

TRANSMISSION/TRANSAXLE FEATURES

id050000100200

ATX [AW6A-EL, AW6AX-EL]

Superior shift quality • Centrifugal hydraulic pressure cancel clutch has been adopted.

AUTOMATIC TRANSAXLE SPECIFICATIONS

id050000100300

Item		Specifications
Transaxle type		AW6A-EL, AW6AX-EL
Gear ratio	1GR	4.148
	2GR	2.370
	3GR	1.555
	4GR	1.154
	5GR	0.859
	6GR	0.685
	Reverse	3.393
Final gear ratio		3.749
ATF	Type	JWS3309
	Capacity (approx. quantity) (L {US qt, Imp qt})	7.0 {7.4, 6.2}
Torque converter stall torque ratio		2.15
Hydraulic system (Number of drive/driven plates)	C1 clutch	7/7
	C2 clutch	4/4
	C3 clutch	4/4
	B2 brake	7/6
Band servo (mm {in})	Servo diameter (piston outer dia./retainer outer dia.)	61.3/66.0 {2.41/2.60}
Front planetary gear (Number of teeth)	Ring gear	81
	Sun gear	45
	Pinion gear	17
Rear planetary gear (Number of teeth)	Ring gear	72
	Middle sun gear	33
	Rear sun gear	27
	Long pinion gear	18
	Short pinion gear	17
Counter drive gear (Number of teeth)		52
Counter gear (Number of teeth)	Driven gear	49
	Drive gear	15
Ring gear (Number of teeth)		53

- The example of automatic transaxle specifications. (specifications of the CX-7)

05-17 **AUTOMATIC TRANSAXLE**

<p>AUTOMATIC TRANSAXLE OUTLINE .. 05-17-1</p> <p>AUTOMATIC TRANSAXLE</p> <p> CROSS-SECTIONAL VIEW 05-17-2</p> <p>POWERFLOW STRUCTURE 05-17-4</p> <p> Description of Components 05-17-4</p> <p>POWERFLOW OPERATION 05-17-5</p> <p> 1GR (D range) 05-17-6</p> <p> 1GR (M range)..... 05-17-7</p> <p> 2GR 05-17-8</p>	<p> 3GR.....05-17-9</p> <p> 4GR.....05-17-10</p> <p> 5GR.....05-17-11</p> <p> 6GR.....05-17-12</p> <p> R position05-17-13</p> <p>CENTRIFUGAL HYDRAULIC PRESSURE</p> <p> CANCEL CLUTCH OUTLINE05-17-15</p> <p>TORQUE CONVERTER OUTLINE.....05-17-17</p>
--	---

05-17

AUTOMATIC TRANSAXLE OUTLINE

id051700101700


- The AW6A (X) -EL automatic transaxle is a compact, lightweight, next-generation electronically controlled FF 6-speed automatic transaxle that employs a Ravigneaux-type planetary gear. It employs a high-precision clutch hydraulic control system for smooth, highly responsive gear shift feel.

AUTOMATIC TRANSAXLE

AUTOMATIC TRANSAXLE CROSS-SECTIONAL VIEW

id051700101900


AW6A-EL

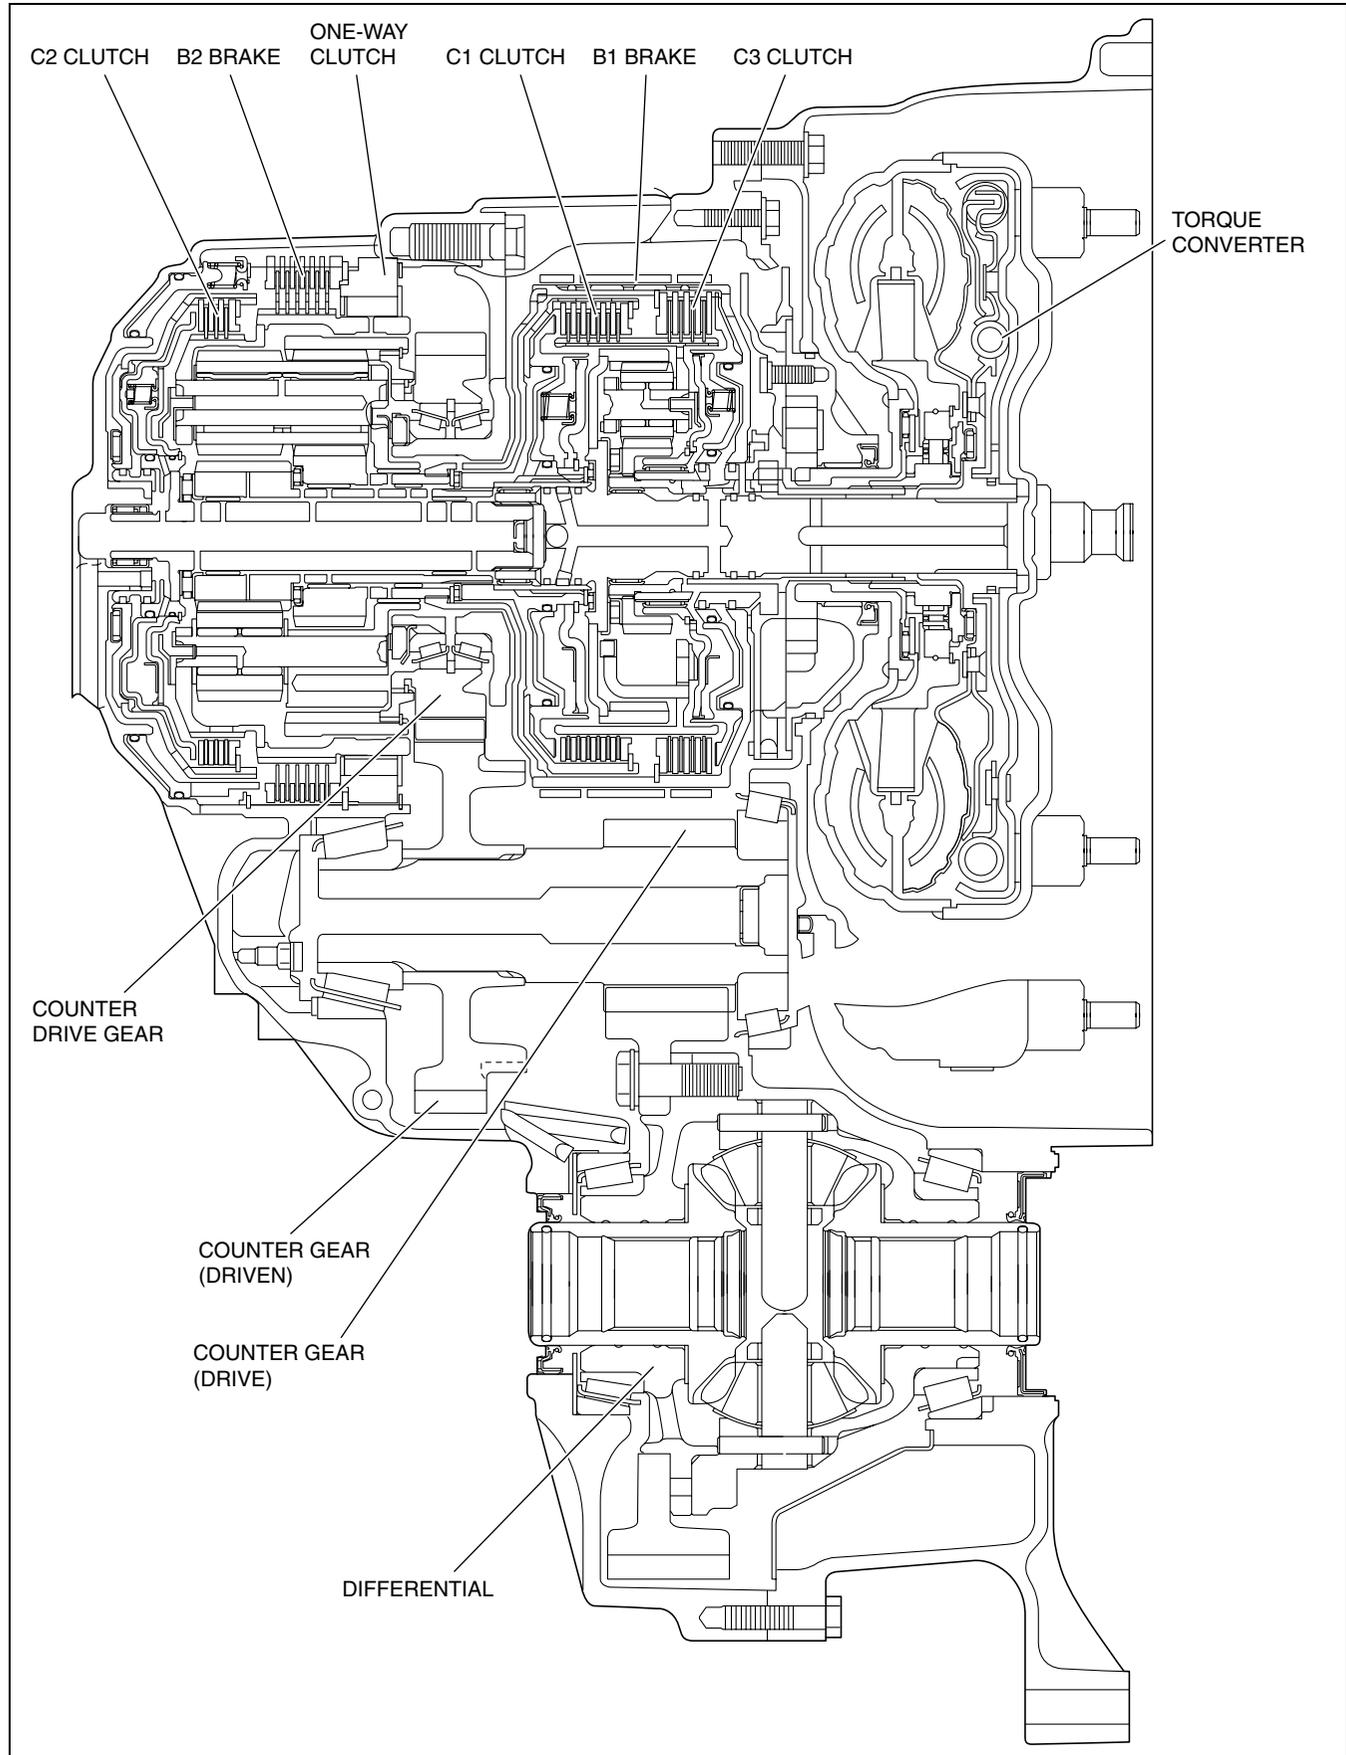

acxuun00000612

AUTOMATIC TRANSAXLE

AW6AX-EL

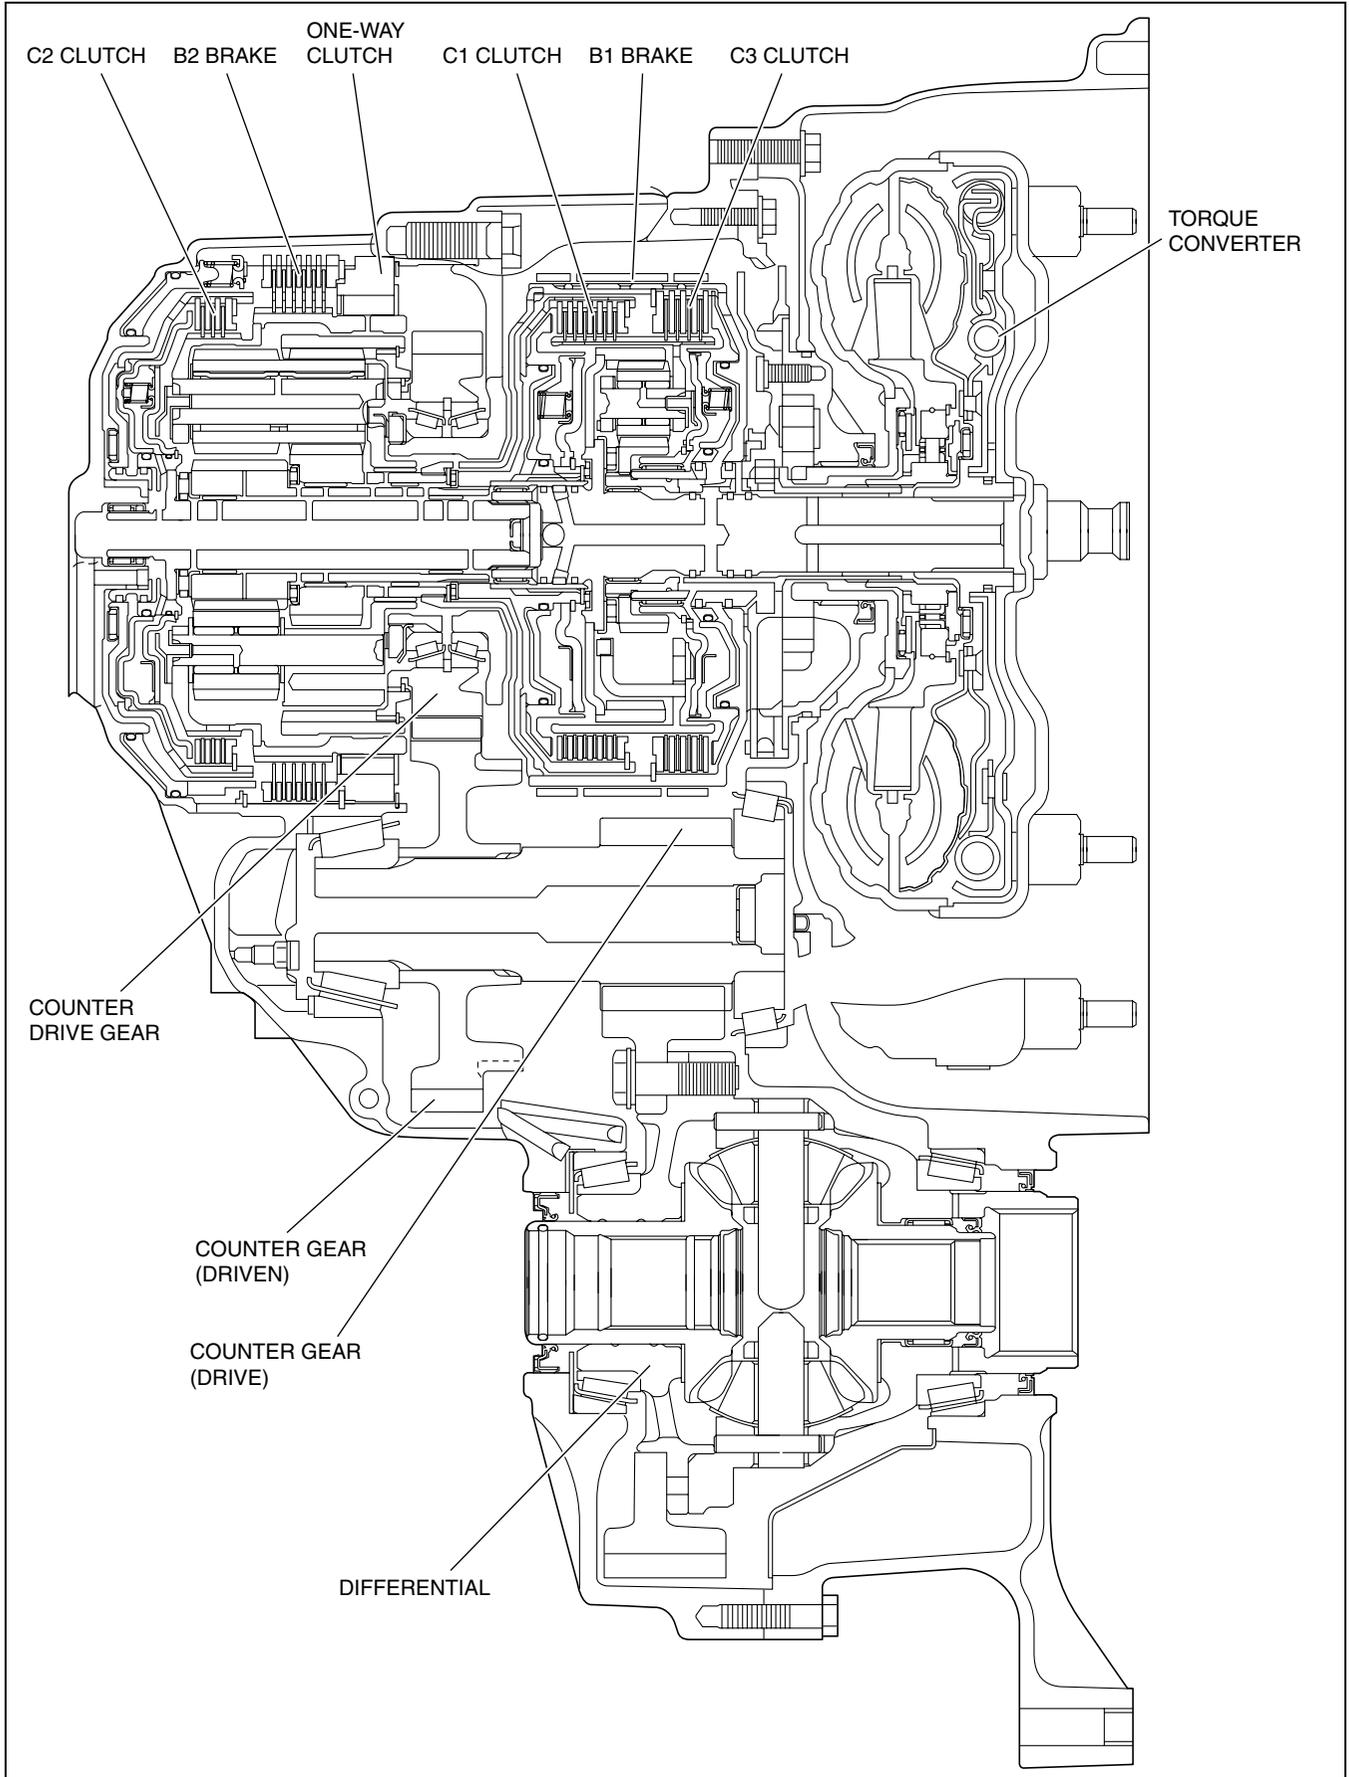

05-17


acxuun0000613

AUTOMATIC TRANSAXLE

POWERFLOW STRUCTURE

id051700102200


Description of Components

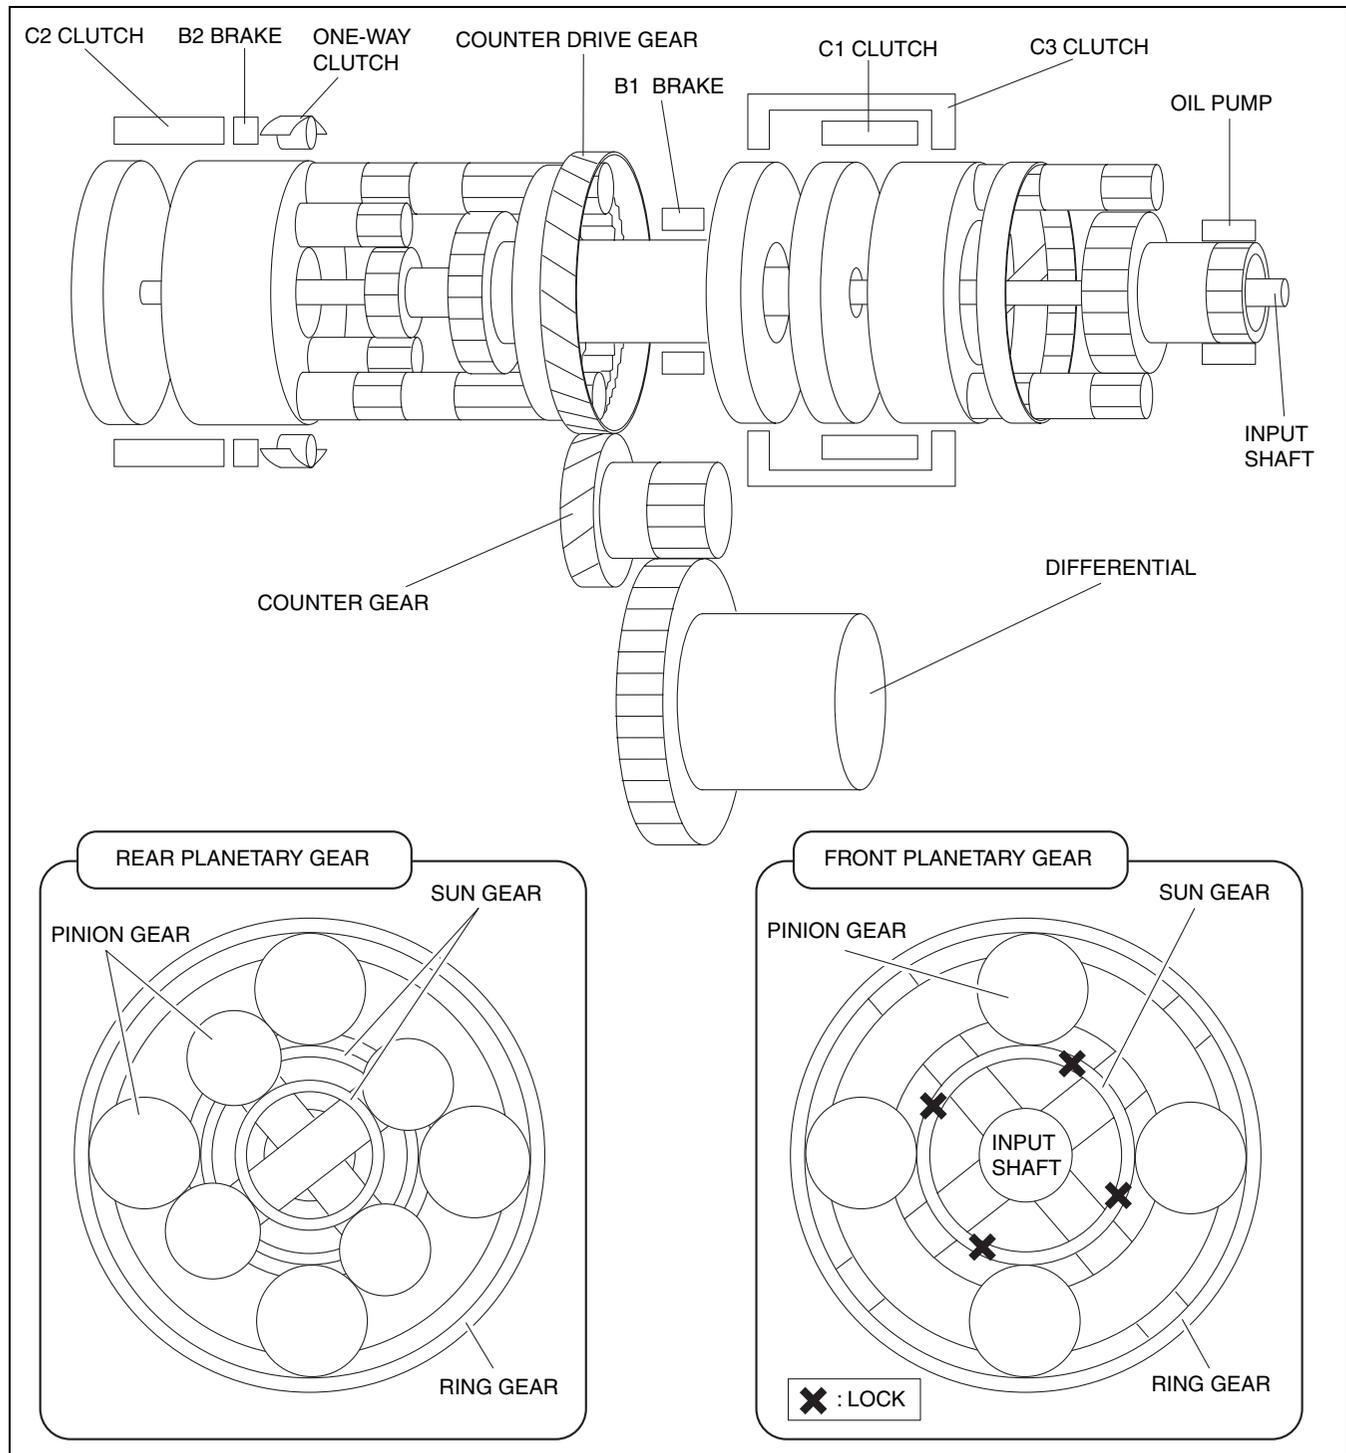

acxuun0000680

- The number of pinion gears differs depending on the engine displacement and vehicle.
 - Mazda6
 - Front: 3 pinions
 - Rear: 3 pinions
 - CX-7
 - Front: 5 pinions
 - Rear: 3 pinions

AUTOMATIC TRANSAXLE

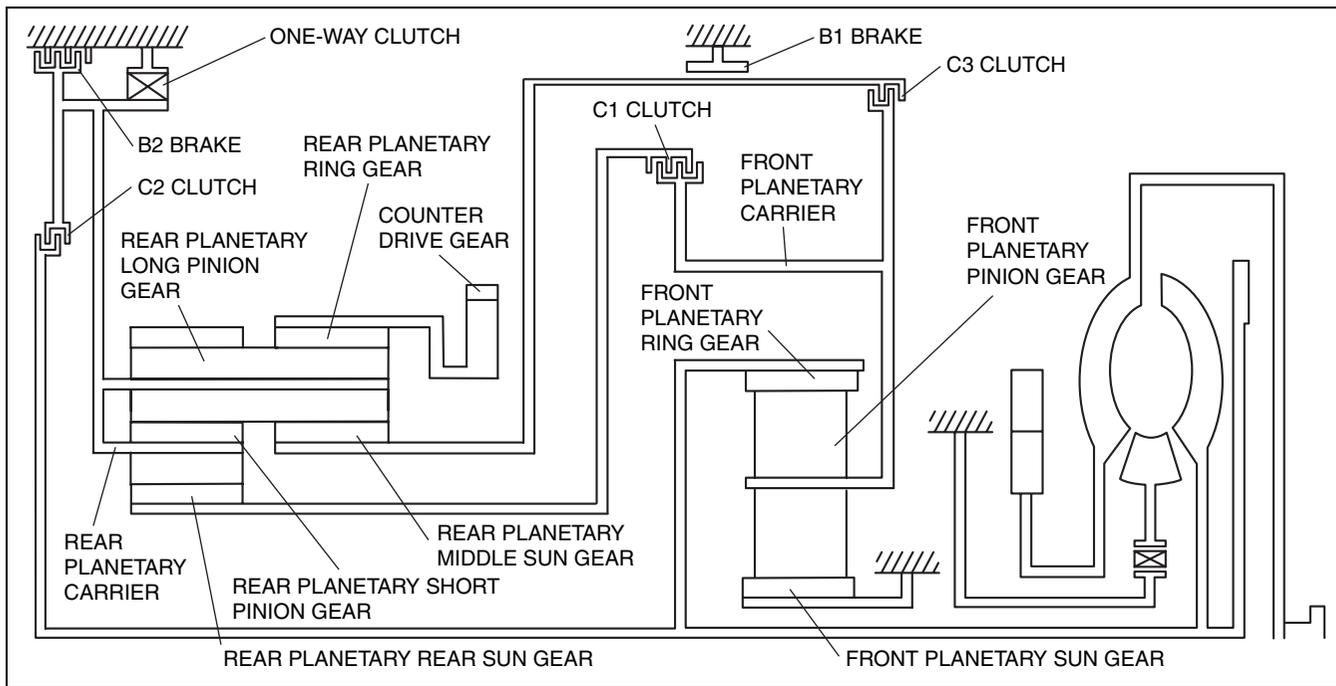

05-17

acxuun00000681

POWERFLOW OPERATION


id051700102300

List of operating components

Clutch / Brake	Operation
C1 clutch	<ul style="list-style-type: none"> • Connects front planetary carrier to rear planetary rear sun gear
C2 clutch	<ul style="list-style-type: none"> • Connects intermediate shaft to rear planetary carrier
C3 clutch	<ul style="list-style-type: none"> • Connects front planetary carrier to rear planetary middle sun gear
B1 brake	<ul style="list-style-type: none"> • Locks rear planetary middle sun gear
B2 brake	<ul style="list-style-type: none"> • Locks rear planetary carrier
One-way clutch	<ul style="list-style-type: none"> • Locks counterclockwise rotation of rear planetary carrier

AUTOMATIC TRANSAXLE

1GR (D range)

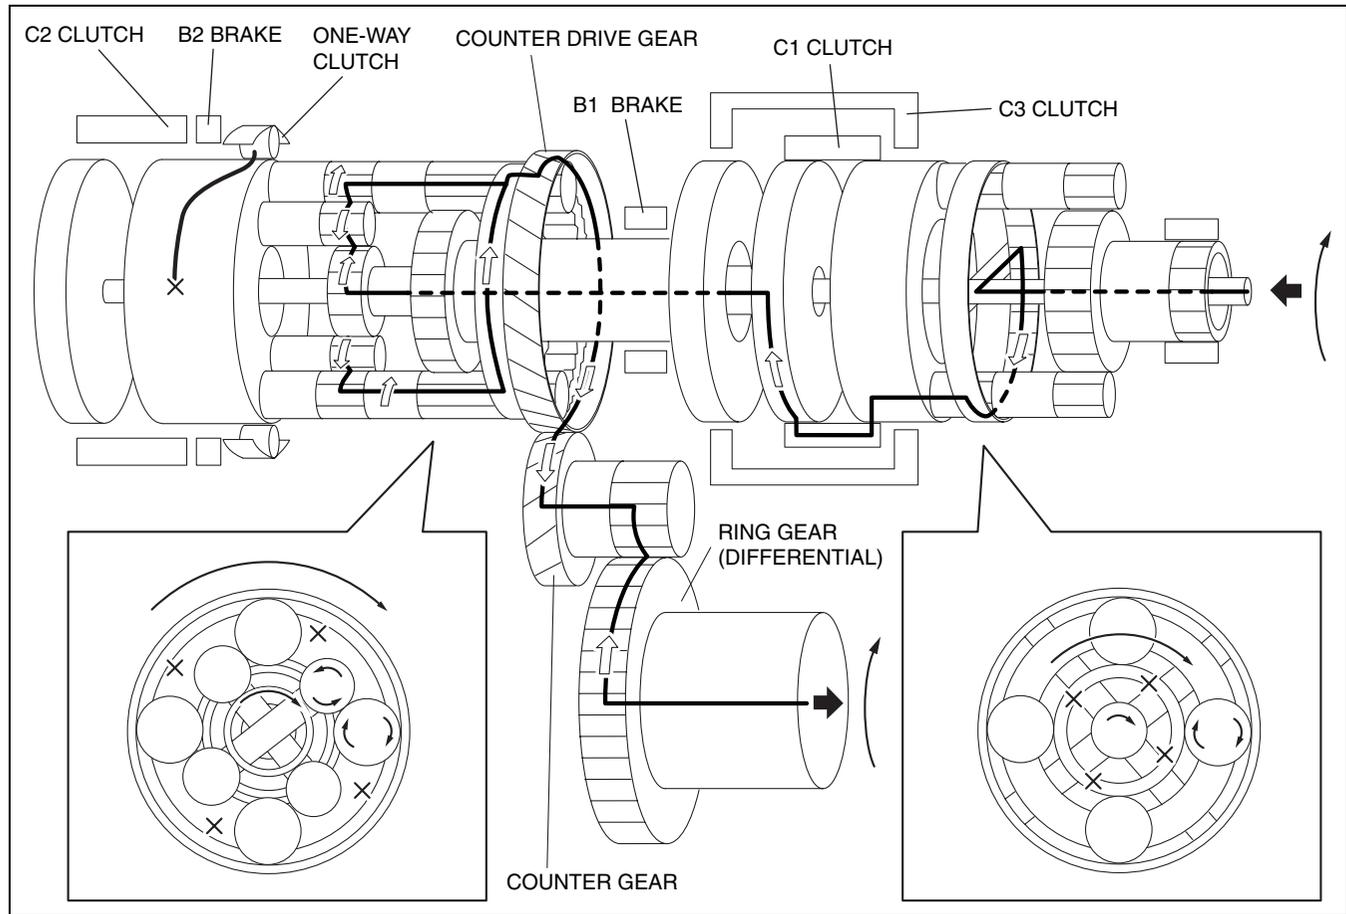

acxuun0000620

Power transmission pathway

[Operating components: C1 clutch, One-way clutch]

- Operating components:
C1 clutch, One-way clutch (counterclockwise rotation is locked), B2 brake (ON when engine brake is operating)


Planetary gear unit	Input, Locked, Output
Front	Input: Ring gear Locked: Sun gear Output: Carrier
Rear	Input: Rear sun gear Locked: Carrier Output: Ring gear

- Input shaft (rotates clockwise) [same revolutions as the torque converter's turbine runner]
- Front planetary ring gear (rotates clockwise) [same revolutions as the input shaft]
- Front planetary pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the front planetary sun gear is locked by the oil pump, it is pressed against the front planetary ring gear and orbits the sun gear while rotating on its axis (because the front planetary ring gear has internal gears, the rotational direction does not change)]
- Front planetary carrier (rotates clockwise)
[reduction: same revolution as the front planetary pinion gear orbit revolution]
- C1 clutch (rotates clockwise) [connects the front planetary carrier and the rear planetary rear sun gear]
- Rear planetary rear sun gear (rotates clockwise) [same revolution as the front planetary carrier]
- Rear planetary short pinion gear (rotates counterclockwise on its axis)
[the rear planetary carrier tries to rotate counterclockwise, but the counterclockwise rotation is locked by one-way clutch.]
- Rear planetary long pinion gear (rotates clockwise on its axis)
[the rear planetary middle sun gear rotates counterclockwise (idling)]

AUTOMATIC TRANSAXLE

9. Rear planetary ring gear (rotates clockwise)
[the rear planetary ring gear is rotated by the rear planetary long pinion gear (because the rear planetary ring gear has internal gears, the rotational direction does not change)]
10. Counter drive gear (rotates clockwise)
[because the rear planetary ring gear is installed on the counter drive gear, the rotational direction and the revolution are the same as the rear planetary ring gear]
11. Counter gear (rotates counterclockwise)
12. Differential ring gear (rotates clockwise)

1GR (M range)

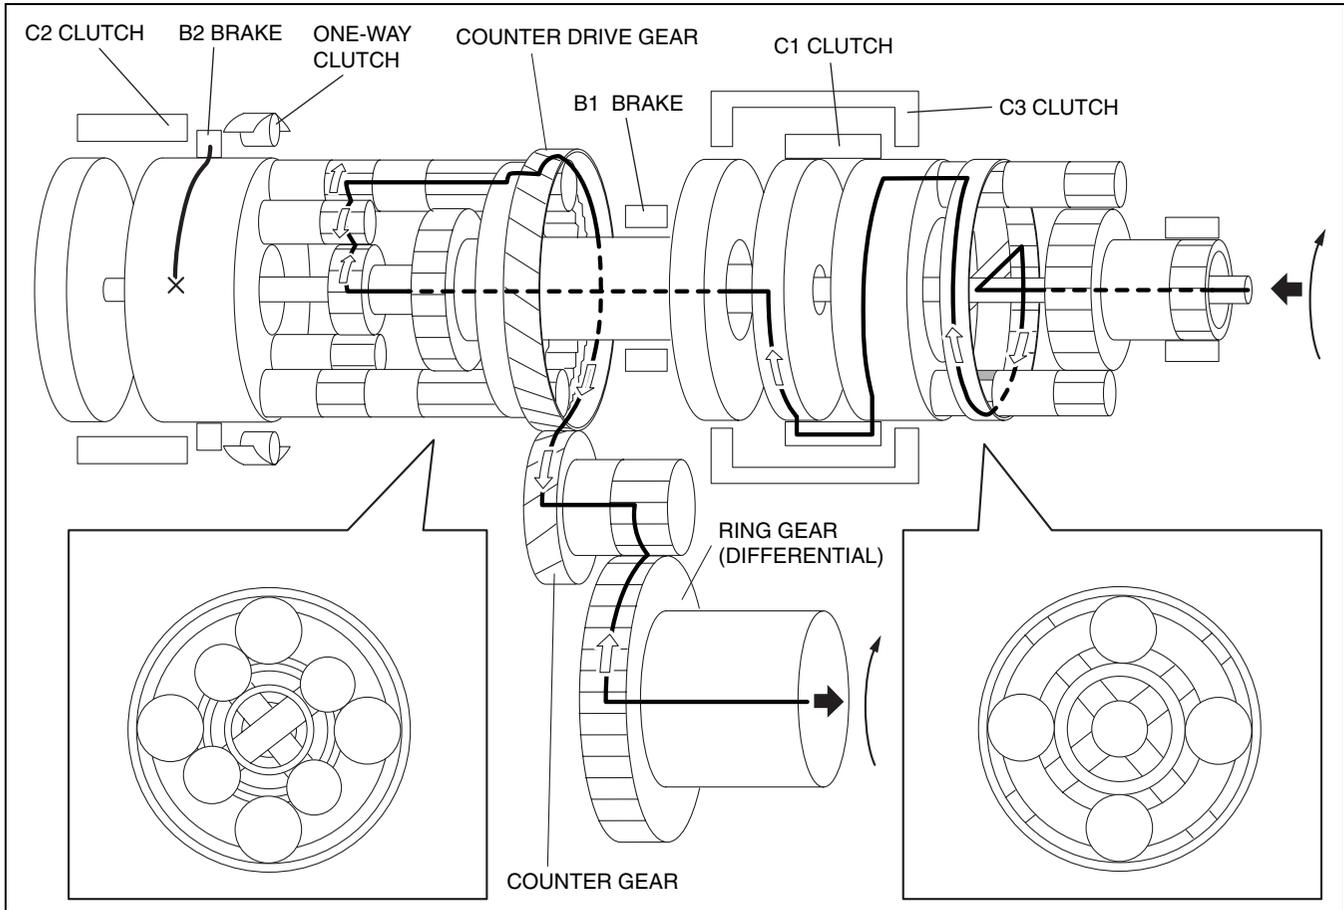

05-17


acxuun0000621

[Operating components: C1 clutch, B2 brake]

- When the engine brake is operating, driving force is transmitted from the tires. Because the rear planetary carrier, which is locked in its counterclockwise rotation by the one-way clutch, tries to rotate clockwise, B2 brake is turned ON and the rear planetary carrier is locked, and kinematic energy is transmitted from the tires to the engine.

AUTOMATIC TRANSAXLE

2GR

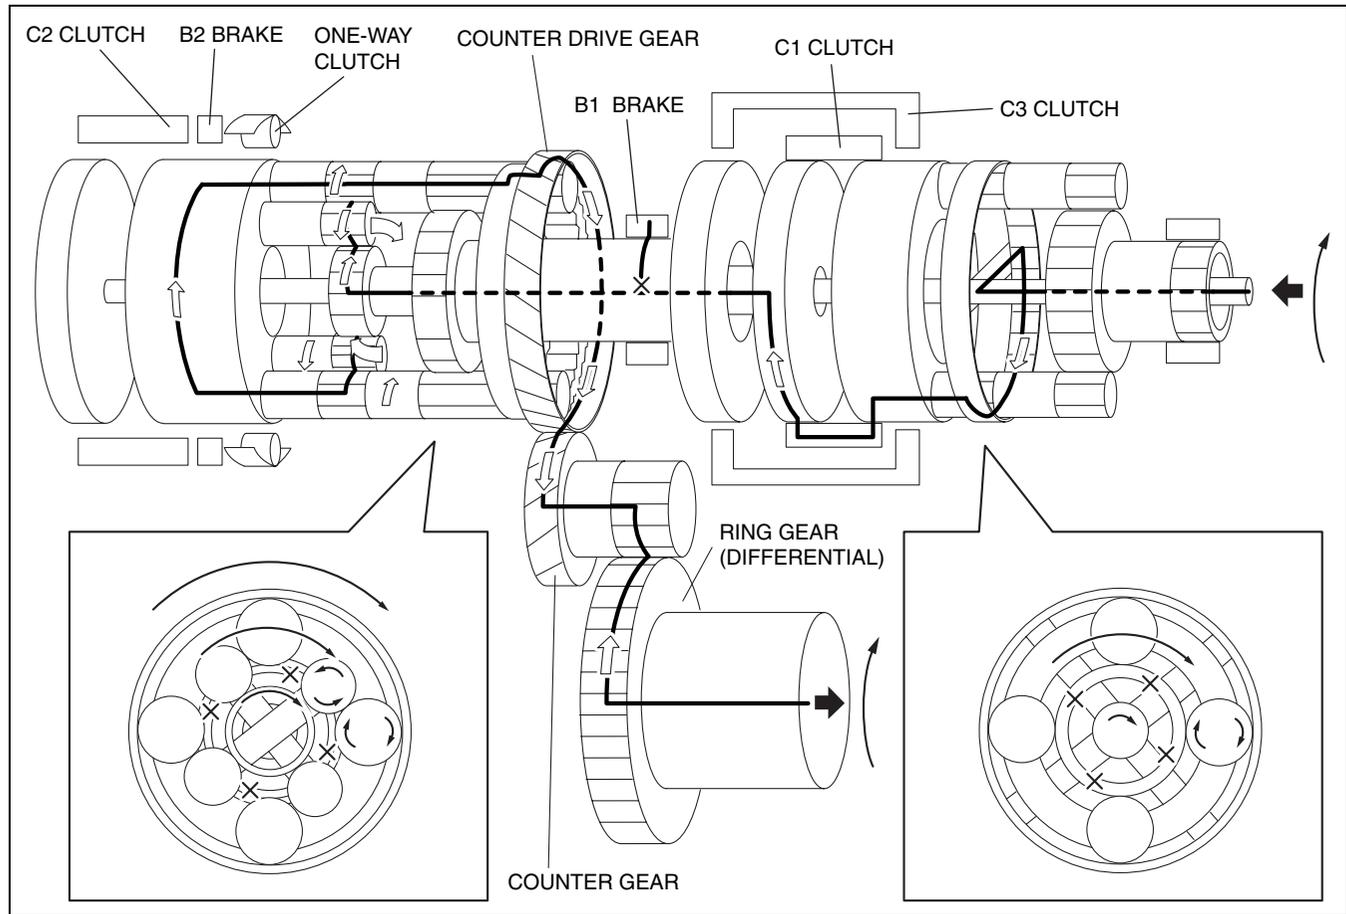

acxuun0000622

Power transmission pathway

[Operating components: C1 clutch, B1 brake]

Planetary gear unit	Input, Locked, Output
Front	Input: Ring gear Locked: Sun gear Output: Carrier
Rear	Input: Rear Sun gear Locked: Middle Sun gear Output: Ring gear

1. Input shaft (rotates clockwise) [same revolutions as the torque converter's turbine runner]
2. Front planetary ring gear (rotates clockwise) [same revolution as the input shaft]
3. Front planetary pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the front planetary sun gear is locked by the oil pump, it is pressed against the front planetary ring gear and orbits the sun gear while rotating on its axis (because the front planetary ring gear has internal gears, the rotational direction does not change)]
4. Front planetary carrier (rotates clockwise)
[reduction: same revolution as the front planetary pinion gear orbit revolution]
5. C1 clutch (rotates clockwise) [connects the front planetary carrier and the rear planetary rear sun gear]
6. Rear planetary rear sun gear (rotates clockwise) [same revolution as the front planetary carrier]
7. Rear planetary middle sun gear is locked by B1 brake
8. Rear planetary short pinion gear (rotates counterclockwise on its axis, orbits clockwise)
9. Rear planetary long pinion gear (rotates clockwise on its axis, orbits clockwise)
10. Rear planetary ring gear (rotates clockwise)
[the rear planetary ring gear is rotated by the rear planetary long pinion gear (because the rear planetary ring gear has internal gears, the rotational direction does not change)]
11. Counter drive gear (rotates clockwise)
[because the rear planetary ring gear is installed on the counter drive gear, the rotational direction and the revolution are the same as the rear planetary ring gear]
12. Counter gear (rotates counterclockwise)
13. Differential ring gear (rotates clockwise)


05-17-8

AUTOMATIC TRANSAXLE

Engine brake

- When the engine brake is operating, driving force is transmitted from the tires.

3GR

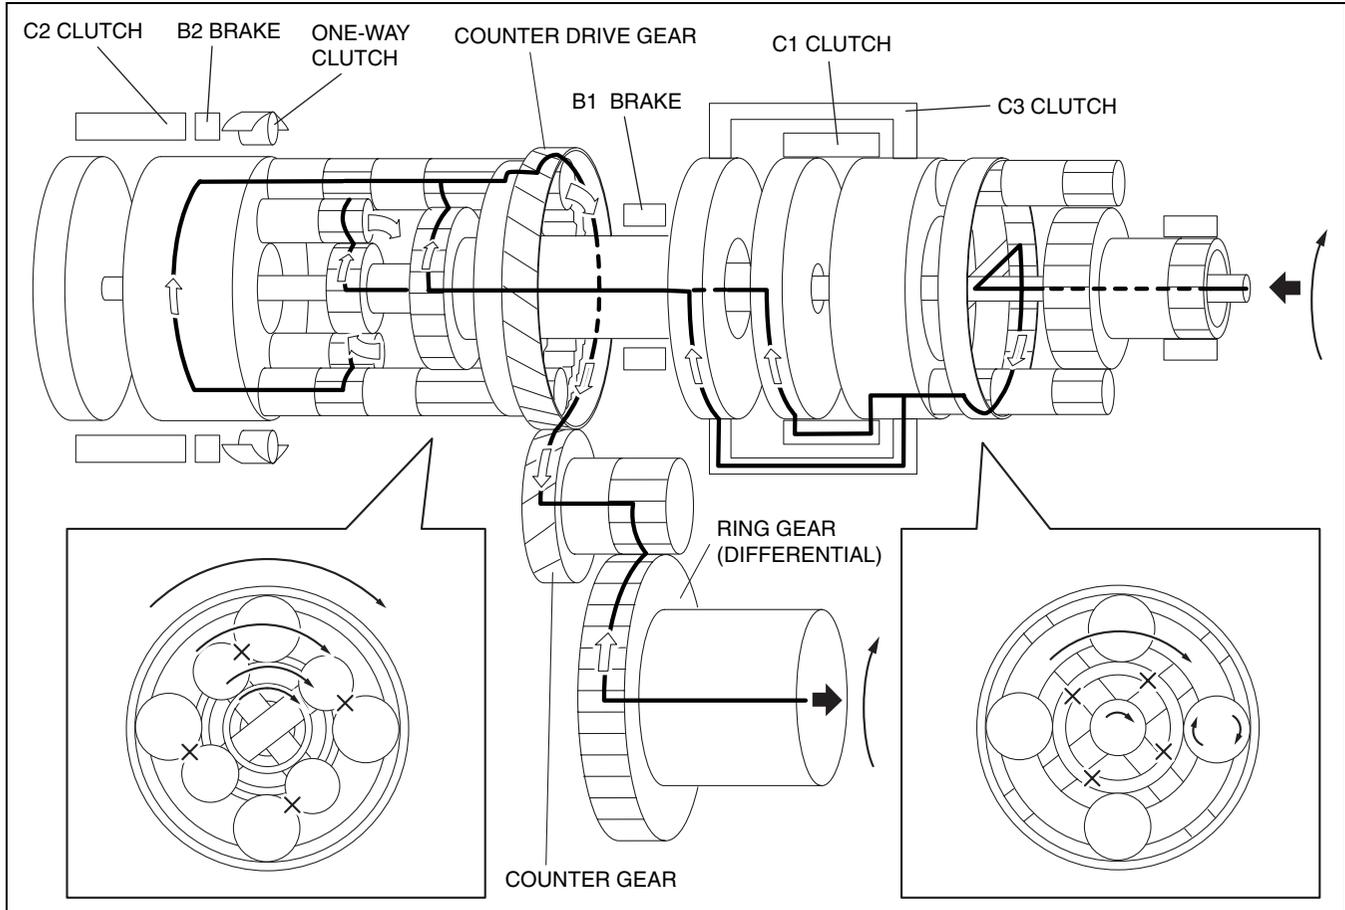

05-17

acxuun0000623

Power transmission pathway

[Operating components: C1 clutch, C3 clutch]

Planetary gear unit	Input, Locked, Output
Front	Input: Ring gear Locked: Sun gear Output: Carrier
Rear	Input: Rear Sun gear, Middle Sun gear Locked: - Output: Ring gear

1. Input shaft (rotates clockwise) [same revolution as the torque converter's turbine runner]
2. Front planetary ring gear (rotates clockwise) [same revolution as the input shaft]
3. Front planetary pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the front planetary sun gear is locked by the oil pump, it is pressed against the front planetary ring gear and orbits the sun gear while rotating on its axis (because the front planetary ring gear has internal gears, the rotational direction does not change)]
4. Front planetary carrier (rotates clockwise)
[reduction: same revolution as the front planetary pinion gear orbit revolution]
5. C1 clutch (rotates clockwise) [connects the front planetary carrier and the rear planetary rear sun gear]
6. C3 clutch (rotates clockwise) [connects the front planetary carrier and the rear planetary middle sun gear]
7. Rear planetary gear component (rotates clockwise)
[because the rear planetary short pinion gear and the rear planetary long pinion gear are engaged, both the pinion gears are locked due to the difference in the rotational directions, and kinematic energy of the rear planetary sun gear and rear planetary middle sun gear is transmitted to the rear planetary ring gear]
8. Rear planetary ring gear (rotates clockwise) [same revolution as the rear planetary carrier]
9. Counter drive gear (rotates clockwise)
[because the rear planetary ring gear is installed on the counter drive gear, the rotational direction and the revolution are the same as the rear planetary ring gear]


AUTOMATIC TRANSAXLE

- 10. Counter gear (rotates counterclockwise)
- 11. Differential ring gear (rotates clockwise)

Engine brake

- When the engine brake is operating, driving force is transmitted from the tires.

4GR

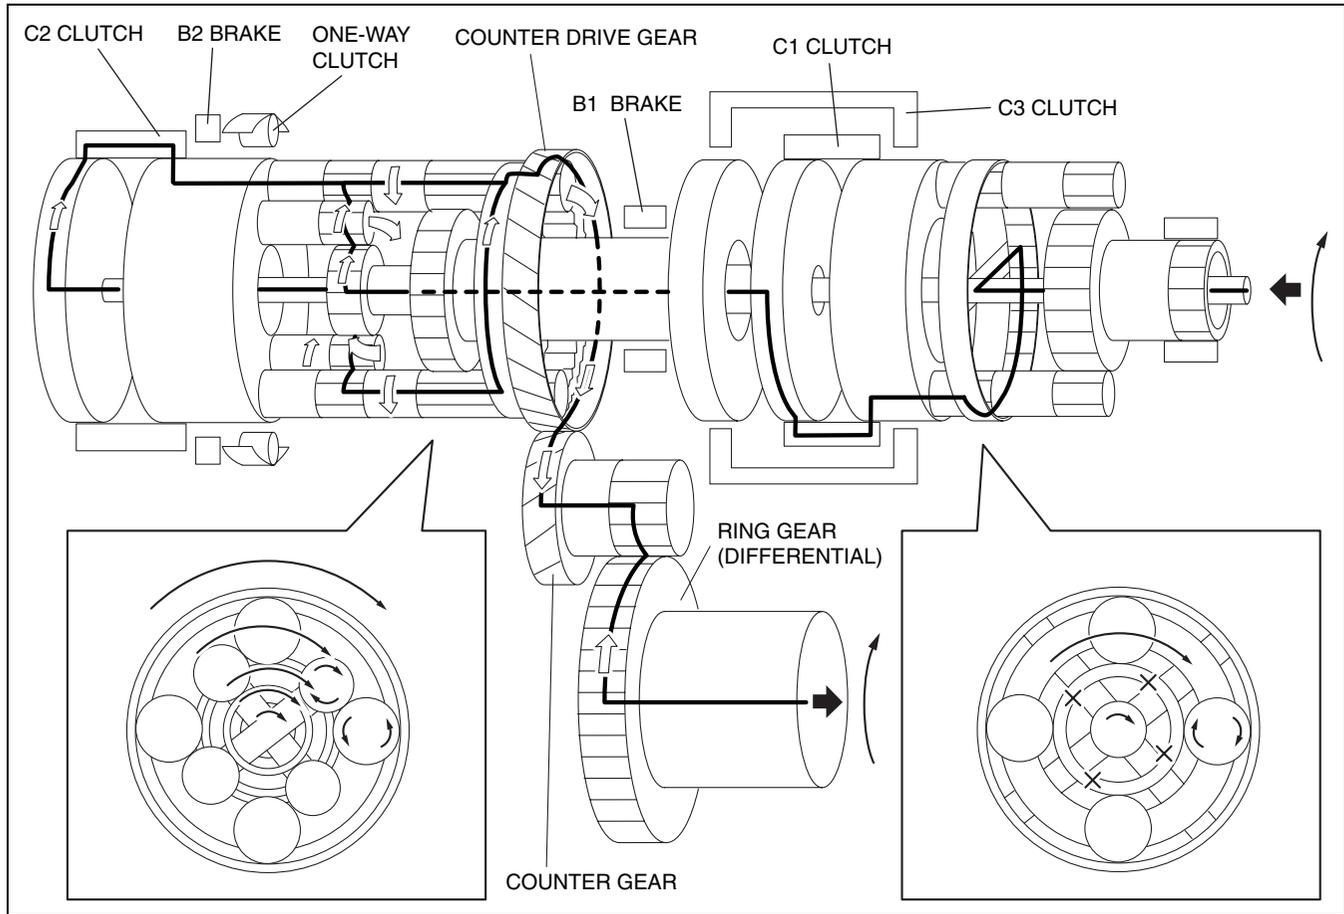

acxuun0000624

Power transmission pathway

[Operating components: C1 clutch, C2 clutch]

Planetary gear unit	Input, Locked, Output
Front	Input: Ring gear Locked: Sun gear Output: Carrier
Rear	Input: Rear Sun gear, Carrier Locked: - Output: Ring gear

1. Input shaft (rotates clockwise) [same revolution as the torque converter's turbine runner]
2. Front planetary ring gear (rotates clockwise) [same revolution as the input shaft]
3. Front planetary pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the front planetary sun gear is locked by the oil pump, it is pressed against the front planetary ring gear and orbits the sun gear while rotating on its axis (because the front planetary ring gear has internal gears, the rotational direction does not change)]
4. Front planetary carrier (rotates clockwise)
[reduction: same revolution as the front planetary pinion gear orbit revolution]
5. C1 clutch (rotates clockwise) [connects the front planetary carrier and the rear planetary rear sun gear]
6. Intermediate shaft (rotates clockwise) [same revolution as the input shaft]
7. C2 clutch (rotates clockwise) [same revolution as the intermediate shaft]
8. Rear planetary carrier (rotates clockwise) [same revolution as the intermediate shaft]
9. Rear planetary short pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the rear planetary carrier rotates faster than the rear planetary sun gear]

AUTOMATIC TRANSAXLE


10. Rear planetary long pinion gear (rotates counterclockwise on its axis, orbits clockwise)
11. Rear planetary ring gear (rotates clockwise)
[because the rear planetary long pinion gear's rotation is subtracted from the rear planetary carrier revolution, the rear planetary ring gear revolution is slower than those of the rear planetary carrier]
12. Counter drive gear (rotates clockwise)
[because the rear planetary ring gear is installed on the counter drive gear, the rotational direction and the revolution is the same as the rear planetary ring gear]
13. Counter gear (rotates counterclockwise)
14. Differential ring gear (rotates clockwise)

Engine brake

- When the engine brake is operating, driving force is transmitted from the tires.

05-17

5GR

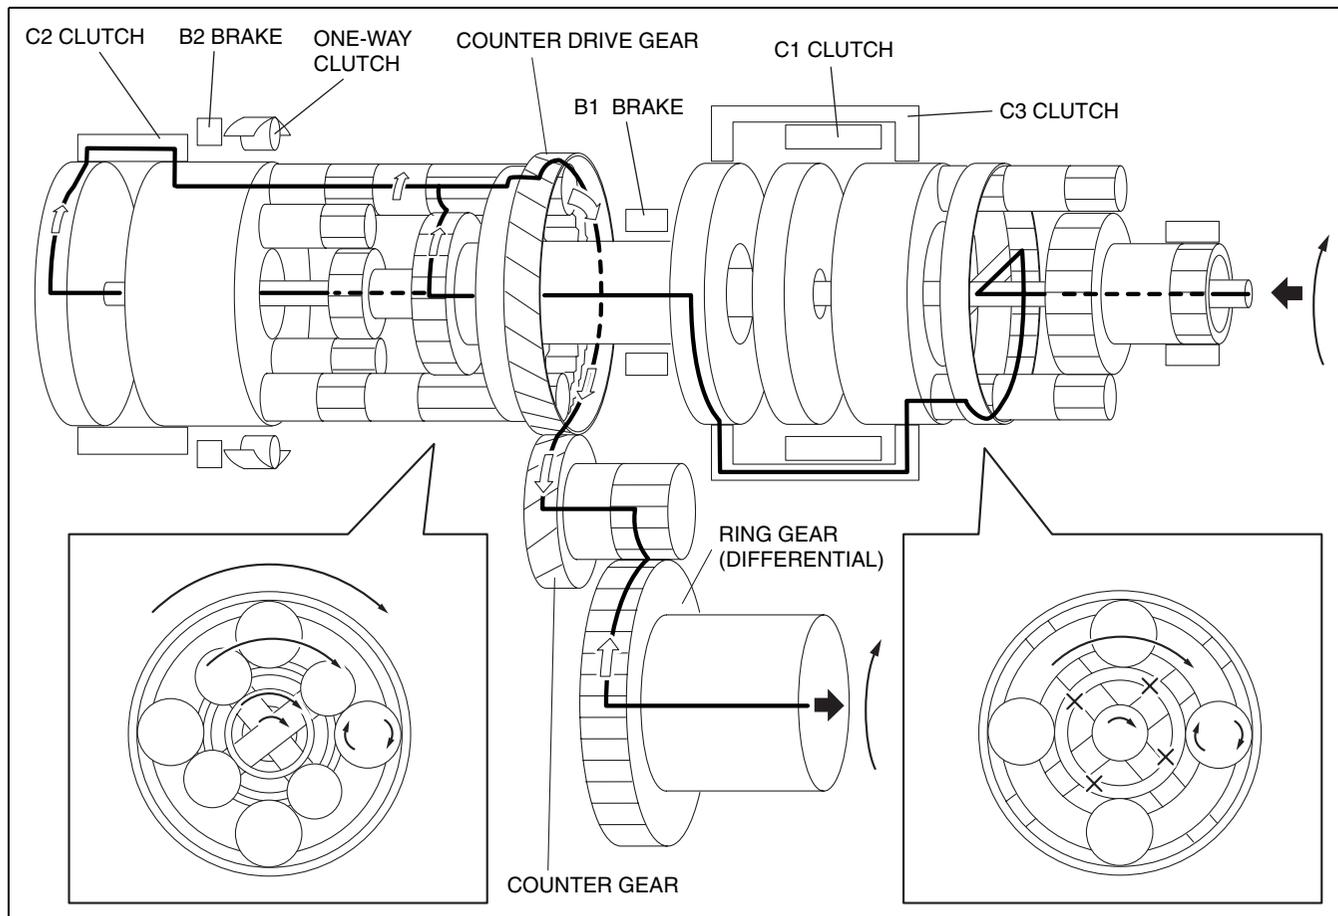

acxuun0000625

Power transmission pathway

[Operating components: C2 clutch, C3 clutch]

Planetary gear unit	Input, Locked, Output
Front	Input: Ring gear Locked: Sun gear Output: Carrier
Rear	Input: Carrier, Middle Sun gear Locked: - Output: Ring gear

1. Input shaft (rotates clockwise) [same revolutions as torque converter's turbine runner]
2. Front planetary ring gear (rotates clockwise) [same revolution as the input shaft]
3. Front planetary pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the front planetary sun gear is locked by the oil pump, it is pressed against the front planetary ring gear and orbits the sun gear while rotating on its axis (because the front planetary ring gear has internal gears, the rotational direction does not change)]


AUTOMATIC TRANSAXLE

4. Front planetary carrier (rotates clockwise)
[reduction: same revolution as the front planetary pinion gear orbit revolution]
5. C3 clutch (rotates clockwise) [connects the front planetary carrier and the rear planetary middle sun gear]
6. Rear planetary middle sun gear (rotates clockwise)
[same revolution as C3 clutch (decelerates by the front planetary gear, so the revolutions are slower than the input shaft)]
7. Intermediate shaft (rotates clockwise) [same revolution as the input shaft]
8. C2 clutch (rotates clockwise) [same revolution as the intermediate shaft]
9. Rear planetary carrier (rotates clockwise) [same revolutions as intermediate shaft]
10. Rear planetary long pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the rear planetary carrier rotates faster than the rear planetary middle sun gear, the rear planetary middle pinion gear is pushed out by the speed difference, and orbits clockwise while rotating clockwise on its axis.]
11. Rear planetary ring gear (rotates clockwise)
[because the rear planetary long pinion gear's rotation is added to the rear planetary carrier revolutions, rear planetary ring gear revolution is faster than those of the rear planetary carrier]
12. Counter drive gear (rotates clockwise)
[because the rear planetary ring gear is installed on the counter drive gear, the rotational direction and revolution is the same as the rear planetary ring gear]
13. Counter gear (rotates counterclockwise)
14. Differential ring gear (rotates clockwise)

Engine brake

- When the engine brake is operating, driving force is transmitted from the tires.

6GR

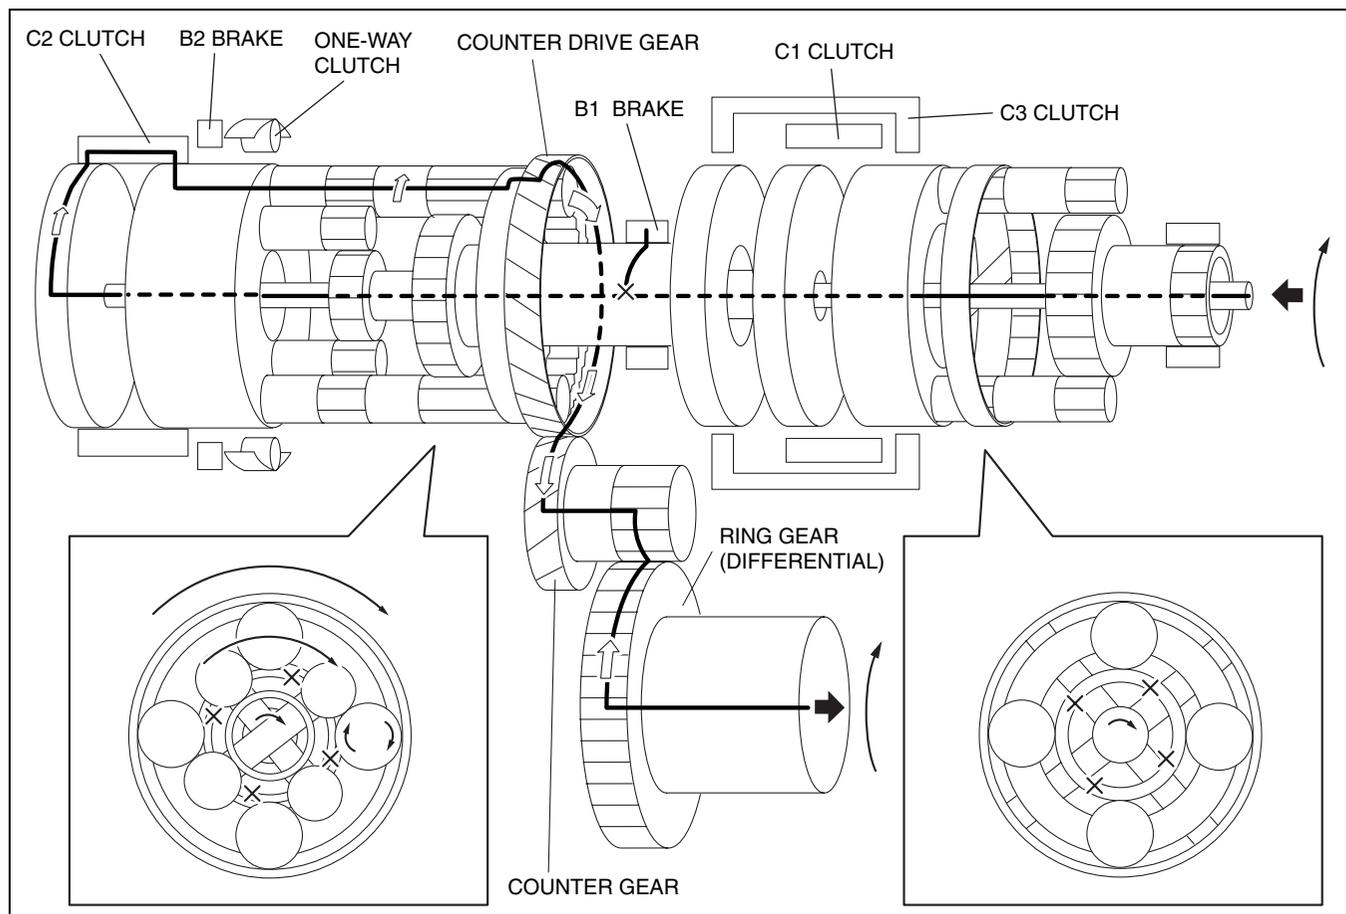

acxuun00000626

AUTOMATIC TRANSAXLE

Power transmission pathway

[Operating components: B1 brake, C2 clutch]

Planetary gear unit	Input, Locked, Output
Front	-
Rear	Input: Carrier Locked: Middle Sun gear Output: Ring gear


1. Input shaft (rotates clockwise) [same revolution as the torque converter's turbine runner]
2. Intermediate shaft (rotates clockwise) [same revolution as the torque converter's turbine runner]
3. B1 brake [locks the rear planetary middle sun gear]
4. C2 clutch [connects the intermediate shaft and the rear planetary carrier]
5. Rear planetary carrier (rotates clockwise) [same revolution as the intermediate shaft]
6. Rear planetary long pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the rear planetary middle sun gear is locked, it is always in a speed increasing condition]
7. Rear planetary ring gear (rotates clockwise)
[because the rear planetary long pinion gear's rotation is added to the rear planetary carrier revolution, the rear planetary ring gear revolution is faster than those of the rear planetary carrier]
8. Counter drive gear (rotates clockwise)
[because the rear planetary ring gear is installed on the counter drive gear, the rotational direction and revolution are the same as the rear planetary ring gear]
9. Counter gear (rotates counterclockwise)
10. Differential ring gear (rotates clockwise)

05-17

Engine brake

- When the engine brake is operating, driving force is transmitted from the tires.

R position

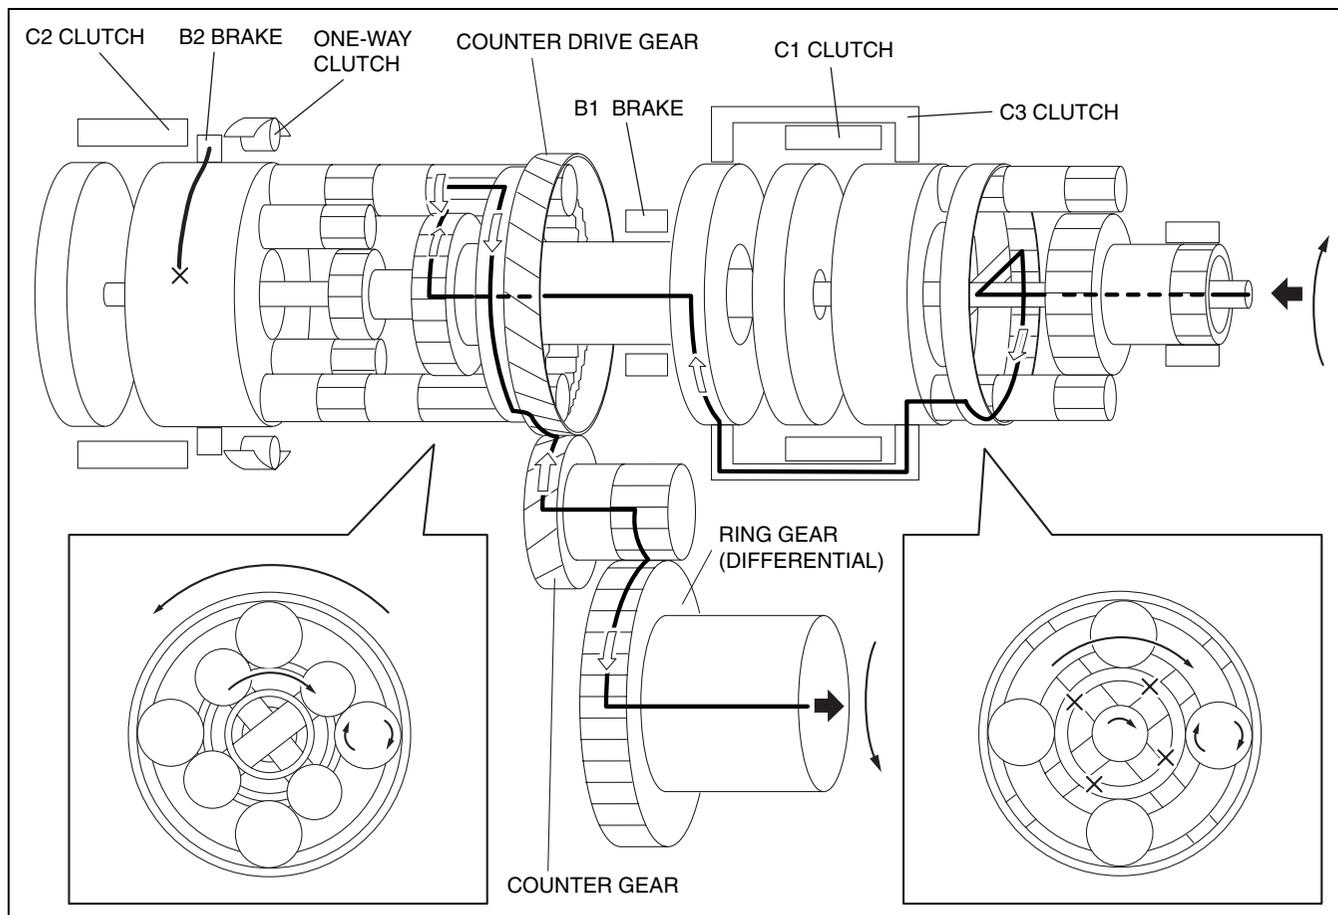

acxuun0000627

AUTOMATIC TRANSAXLE

Power transmission pathway

[Operating components: C3 clutch, B2 brake]

Planetary gear unit	Input, Locked, Output
Front	Input: Ring gear Locked: Sun gear Output: Carrier
Rear	Input: Middle Sun gear Locked: Carrier Output: Ring gear

1. Input shaft (rotates clockwise) [same revolution as the torque converter's turbine runner]
2. Front planetary ring gear (rotates clockwise) [same revolution as the input shaft]
3. Front planetary pinion gear (rotates clockwise on its axis, orbits clockwise)
[because the front planetary sun gear is locked by the oil pump, it is pressed against the front planetary ring gear and orbits the sun gear while rotating on its axis (because the front planetary ring gear has internal gears, the rotational direction does not change)]
4. Front planetary carrier (rotates clockwise)
[reduction: same revolution as the front planetary pinion gear orbit revolution]
5. C3 clutch (rotates clockwise) [connects the front planetary carrier and the rear planetary middle sun gear]
6. Rear planetary middle sun gear (rotates clockwise)
[same revolutions as the C3 clutch (rotates slower than the input shaft)]
7. B2 brake [locks the rear planetary carrier]
8. Rear planetary long pinion gear (rotates counterclockwise)
9. Rear planetary ring gear (rotates counterclockwise)
[the rear planetary ring gear is rotated by the rear planetary long pinion gear (because the rear planetary ring gear has internal gears, the rotational direction does not change)]
10. Counter drive gear (rotates counterclockwise)
[because the rear planetary ring gear is installed on the counter drive gear, the rotational direction and revolution are the same as the rear planetary ring gear]
11. Counter gear (rotates clockwise)
12. Differential ring gear (rotates counterclockwise)

Engine brake


- When the engine brake is operating, driving force is transmitted from the tires.

AUTOMATIC TRANSAXLE

CENTRIFUGAL HYDRAULIC PRESSURE CANCEL CLUTCH OUTLINE

id051700102400


- When the rotation of the clutch rises, centrifugal force operates on the oil inside the clutch, hydraulic pressure rises, and the clutch is engaged at an earlier timing. Because of this, a difference arises in rotation between the input shaft and the output shaft, and shift shock may occur. To solve this, an additional chamber has been provided opposite the piston hydraulic pressure chamber. This causes centrifugal hydraulic pressure to operate in the opposite direction with the same force as the piston, counteracting that pressure.

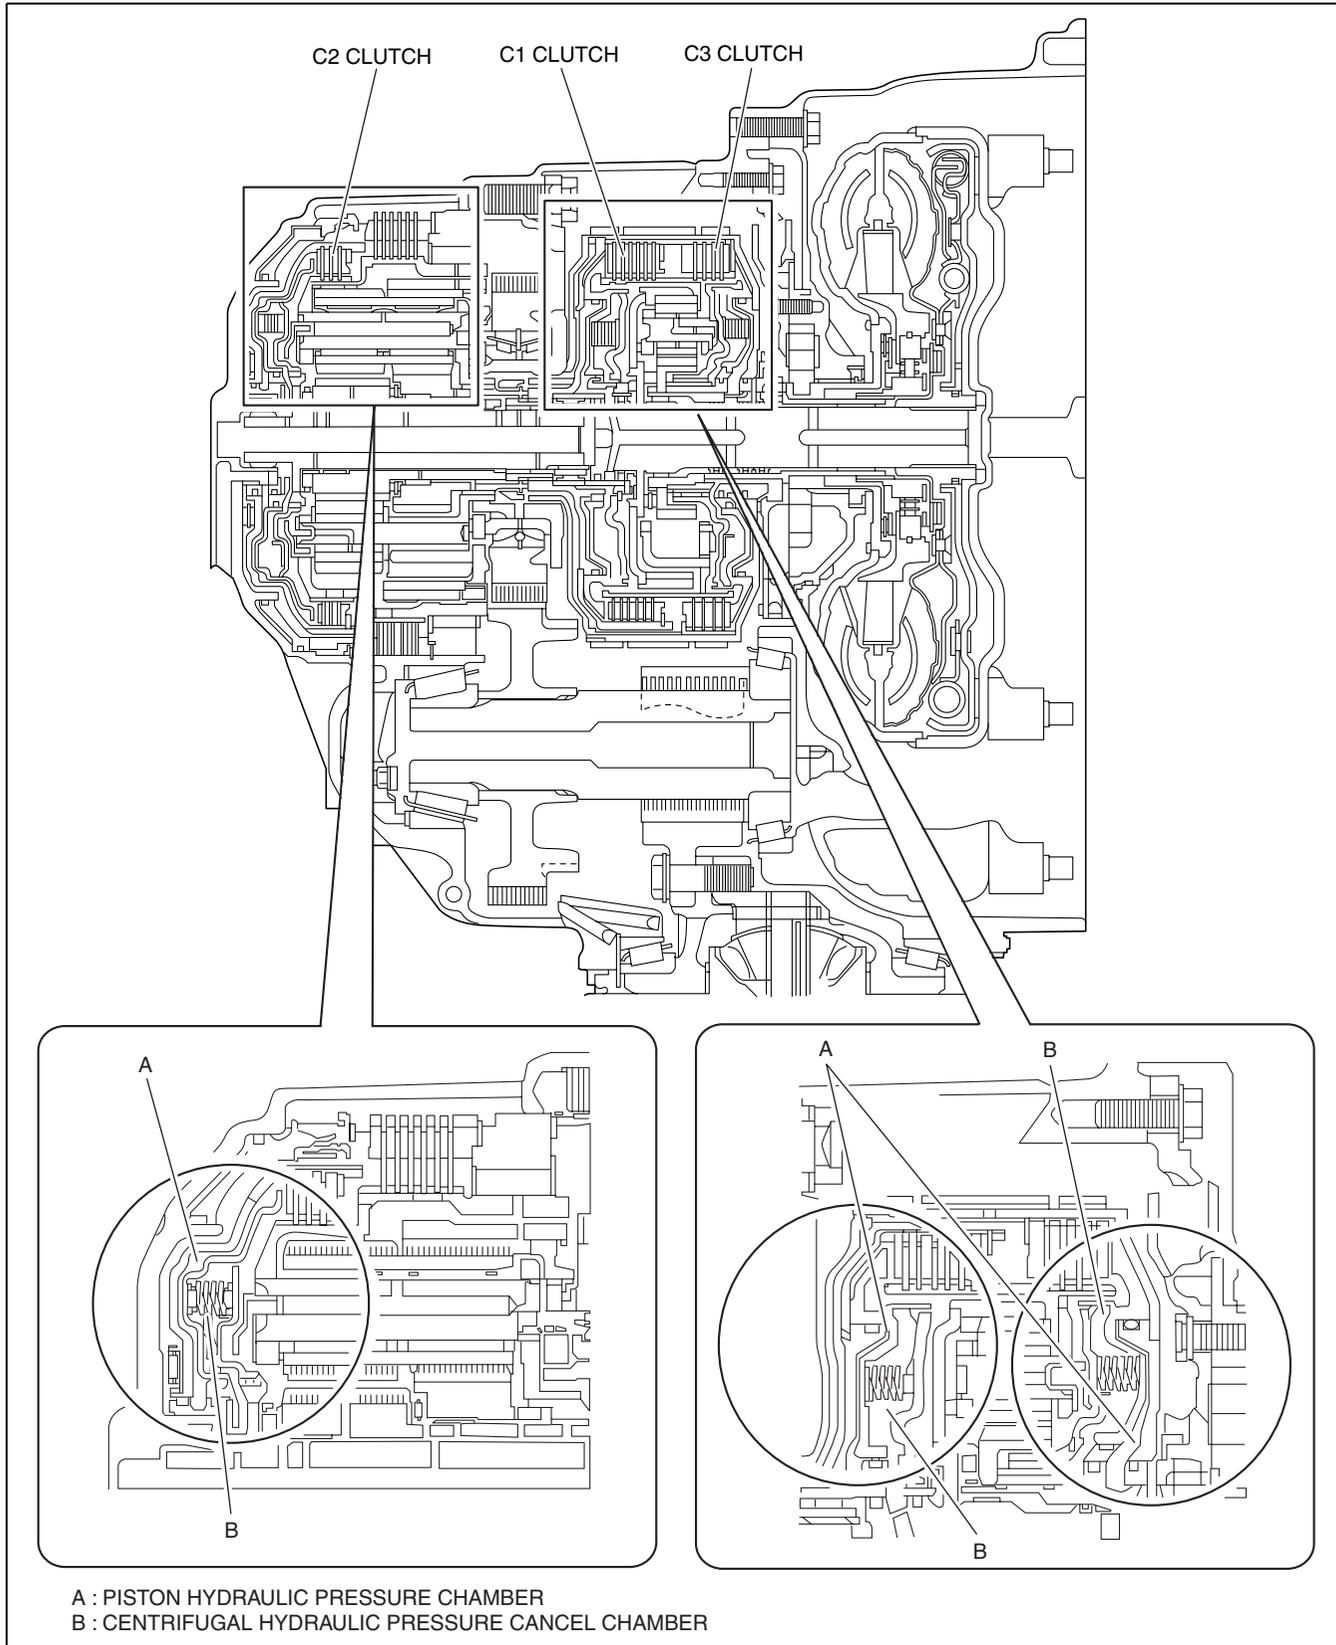

05-17

acxuun0000628

AUTOMATIC TRANSAXLE

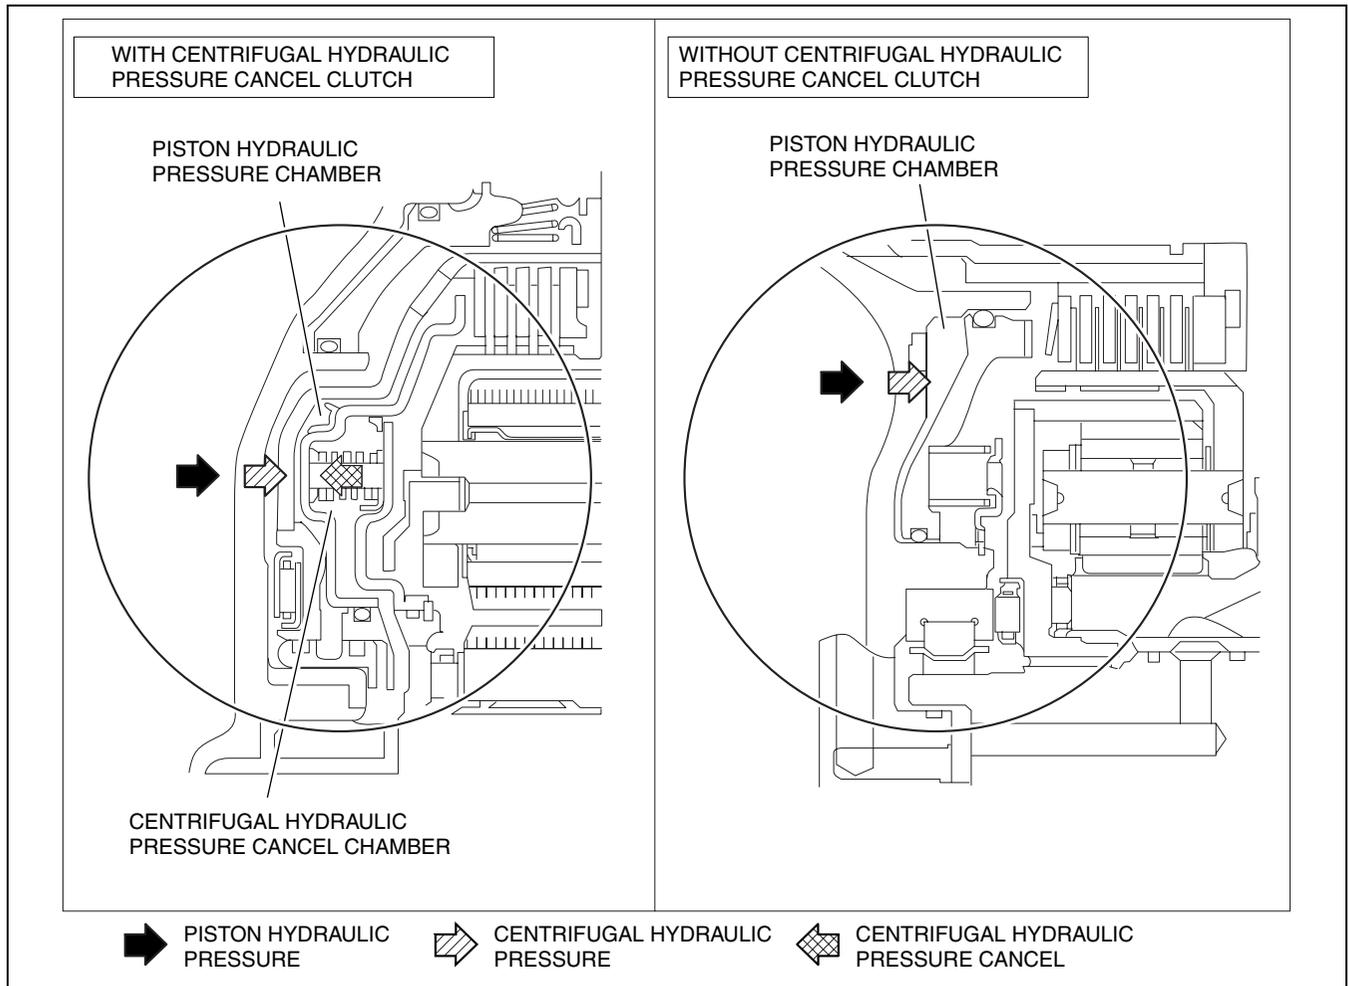


acxuun00000629

AUTOMATIC TRANSAXLE

TORQUE CONVERTER OUTLINE

id051700100700

- The torque converter is composed of the converter cover, pump impeller, turbine runner, stator, one-way clutch, and TCC. The torque converter transmits and amplifies torque by means of the ATF inside it. In addition, the use of the TCC is intended to improve fuel economy as a direct coupling between the engine and automatic transaxle.

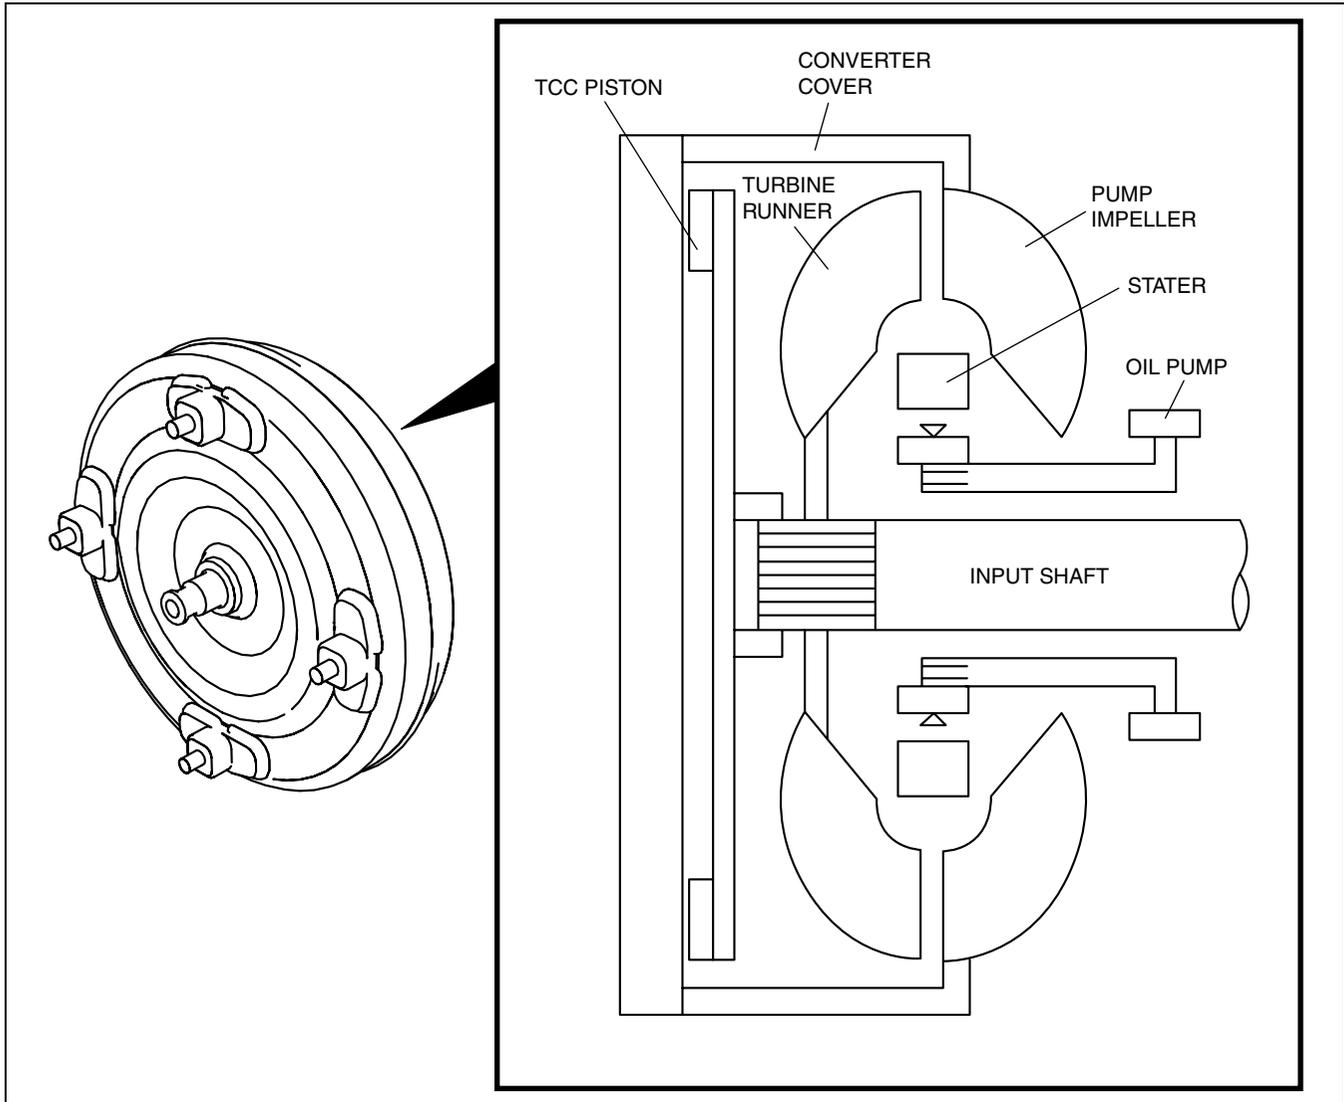

05-17

acxuun00000605

SERVICE



GENERAL INFORMATION

00
SECTION

00-00

GENERAL INFORMATION 00-00

00-00 GENERAL INFORMATION

HOW TO USE THIS MANUAL	00-00-2
Range of Topics	00-00-2
Service Procedure	00-00-2
Symbols	00-00-4
Advisory Messages	00-00-4
UNITS	00-00-5
Conversion to SI Units (Système International d'Unités)	00-00-5
Rounding Off	00-00-5
Upper and Lower Limits	00-00-5
FUNDAMENTAL PROCEDURES	00-00-6
Preparation of Tools and Measuring Equipment	00-00-6
Special Service Tools	00-00-6
Disassembly	00-00-6

Inspection During Removal, Disassembly	00-00-6
Arrangement of Parts	00-00-7
Cleaning of Parts	00-00-7
Reassembly	00-00-7
Adjustment	00-00-8
Rubber Parts and Tubing	00-00-8
Hose Clamps	00-00-8
Torque Formulas	00-00-8
Vise	00-00-9
ELECTRICAL SYSTEM	00-00-9
Connectors	00-00-9
SAE STANDARDS	00-00-10
ABBREVIATIONS	00-00-11

HOW TO USE THIS MANUAL

id00000800100


Range of Topics

- This manual contains procedures for performing all required service operations. The procedures are divided into the following five basic operations:
 - Removal/Installation
 - Disassembly/Assembly
 - Replacement
 - Inspection
 - Adjustment
- Simple operations which can be performed easily just by looking at the vehicle (i.e., removal/installation of parts, jacking, vehicle lifting, cleaning of parts, and visual inspection) have been omitted.

Service Procedure

Inspection, adjustment

- Inspection and adjustment procedures are divided into steps. Important points regarding the location and contents of the procedures are explained in detail and shown in the illustrations.

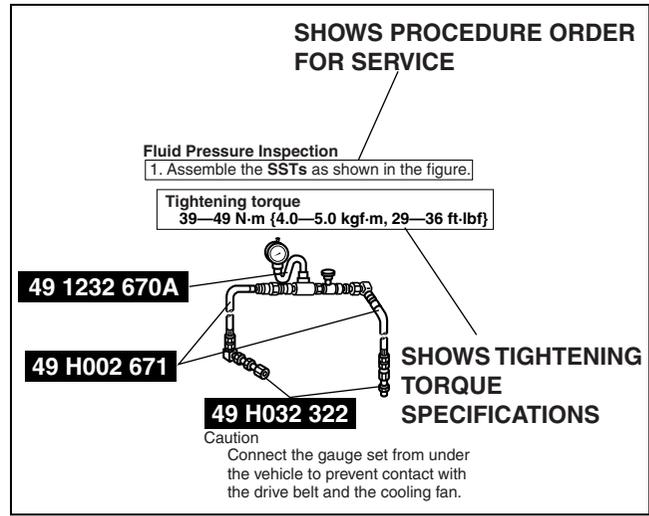

acxuuv00000434

Repair procedure

1. Most repair operations begin with an overview illustration. It identifies the components, shows how the parts fit together, and describes visual part inspection. However, only removal/installation procedures that need to be performed methodically have written instructions.
2. Expendable parts, tightening torques, and symbols for oil, grease, and sealant are shown in the overview illustration. In addition, symbols indicating parts requiring the use of special service tools or equivalent are also shown.
3. Procedure steps are numbered and the part that is the main point of that procedure is shown in the illustration with the corresponding number. Occasionally, there are important points or additional information concerning a procedure. Refer to this information when servicing the related part.

GENERAL INFORMATION

00-00

Procedure

"Removal/Installation" Portion

"Inspection After Installation" Portion

INSTALL THE PARTS BY PERFORMING STEPS 1—3 IN REVERSE ORDER

SHOWS SERVICE ITEM (S)

INDICATES RELEVANT REFERENCES THAT NEED TO BE FOLLOWED DURING INSTALLATION

SHOWS SPECIAL SERVICE TOOL (SST) FOR SERVICE OPERATION

SHOWS APPLICATION POINTS OF GREASE, ETC.

SHOWS EXPENDABLE PARTS

SHOWS TIGHTENING TORQUE SPECIFICATIONS

SHOWS DETAILS

SHOWS TIGHTENING TORQUE UNITS

SHOWS REFERRAL NOTES FOR SERVICE

SHOWS REFERRAL NOTES FOR SERVICE

SHOWS SPECIAL SERVICE TOOL (SST) NO.

LOWER TRAILING LINK, UPPER TRAILING LINK REMOVAL/INSTALLATION

1. Jack up the rear of the vehicle and support it with safety stands.
2. Remove the undercover. (See 01-10-4 Undercover Removal)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.
5. Inspect the rear wheel alignment and adjust it if necessary.

44-60 (4.4-6.2, 32-44)

43-56 (4.3-5.8, 32-41)

94-116 (9.5-11.9, 69-86)

118-156 (12.0-16.0, 87-115)

N·m (kgf·m, ft·lbf)

1	Split pin	7	Split pin
2	Nut	8	Nut
3	Lower trailing link ball joint (See 02-14-5 Lower Trailing Link Ball Joint Removal Note)	9	Upper trailing link ball joint (See 02-14-5 Upper Trailing Link Ball Joint Removal Note)
4	Bolt	10	Nut
5	Lower trailing link	11	Upper trailing link
6	Dust boot (lower trailing link)	12	Dust boot (upper trailing link)

Lower Trailing Link Ball Joint, Upper Trailing Link Ball Joint Removal Note

- Remove the ball joint using the SSTs.

49 T028 304 UPPER TRAILING LINK
49 T028 305 LOWER TRAILING LINK

49 T028 303

KNUCKLE

acxuuw00000435

00-00-3

GENERAL INFORMATION

Symbols

- There are eight symbols indicating oil, grease, fluids, sealant, and the use of **SST** or equivalent. These symbols show application points or use of these materials during service.

Symbol	Meaning	Kind
	Apply oil	New appropriate engine oil or gear oil
	Apply brake fluid	New appropriate brake fluid
	Apply automatic transaxle/transmission fluid	New appropriate automatic transaxle/transmission fluid
	Apply grease	Appropriate grease
	Apply sealant	Appropriate sealant
	Apply petroleum jelly	Appropriate petroleum jelly
	Replace part	O-ring, gasket, etc.
	Use SST or equivalent	Appropriate tools

Advisory Messages

- You will find several **Warnings, Cautions, Notes, Specifications and Upper and Lower Limits** in this manual.

Warning

- A Warning indicates a situation in which serious injury or death could result if the warning is ignored.

Caution

- A Caution indicates a situation in which damage to the vehicle or parts could result if the caution is ignored.

Note

- A Note provides added information that will help you to complete a particular procedure.

Specification

- The values indicate the allowable range when performing inspections or adjustments.

Upper and lower limits

- The values indicate the upper and lower limits that must not be exceeded when performing inspections or adjustments.

UNITS

Electrical current	A (ampere)
Electric power	W (watt)
Electric resistance	ohm
Electric voltage	V (volt)
Length	mm (millimeter)
	in (inch)
Negative pressure	kPa (kilo pascal)
	mmHg (millimeters of mercury)
	inHg (inches of mercury)
Positive pressure	kPa (kilo pascal)
	kgf/cm ² (kilogram force per square centimeter)
	psi (pounds per square inch)
Number of revolutions	rpm (revolutions per minute)
Torque	N·m (Newton meter)
	kgf·m (kilogram force meter)
	kgf·cm (kilogram force centimeter)
	ft·lbf (foot pound force)
	in·lbf (inch pound force)
Volume	L (liter)
	US qt (U.S. quart)
	Imp qt (Imperial quart)
	ml (milliliter)
	cc (cubic centimeter)
	cu in (cubic inch)
	fl oz (fluid ounce)
Weight	g (gram)
	oz (ounce)

Conversion to SI Units (Système International d'Unités)

- All numerical values in this manual are based on SI units. Numbers shown in conventional units are converted from these values.

Rounding Off

- Converted values are rounded off to the same number of places as the SI unit value. For example, if the SI unit value is 17.2 and the value after conversion is 37.84, the converted value will be rounded off to 37.8.

Upper and Lower Limits

- When the data indicates upper and lower limits, the converted values are rounded down if the SI unit value is an upper limit, and rounded up if the SI unit value is a lower limit. Therefore, converted values for the same SI unit value may differ after conversion. For example, consider 2.7 kgf/cm² in the following specifications:

210— 260 kPa {2.1— 2.7 kgf/cm², 30— 38 psi}

270— 310 kPa {2.7— 3.2 kgf/cm², 39— 45 psi}

- The actual converted values for 2.7 kgf/cm² are 265 kPa and 38.4 psi. In the first specification, 2.7 is used as an upper limit, so the converted values are rounded down to 260 and 38. In the second specification, 2.7 is used as a lower limit, so the converted values are rounded up to 270 and 39.


GENERAL INFORMATION

FUNDAMENTAL PROCEDURES

id000000810000

Preparation of Tools and Measuring Equipment


- Be sure that all necessary tools and measuring equipment are available before starting any work.

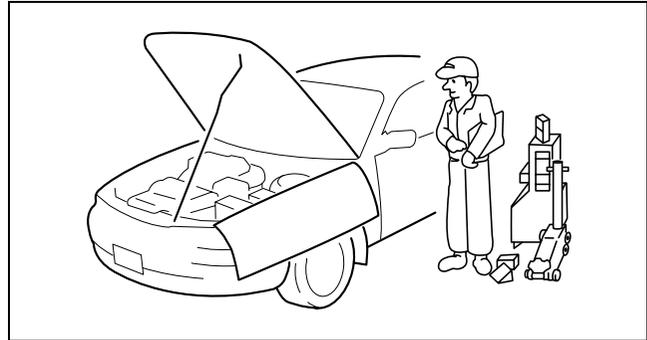

acxuuw00000006

Special Service Tools


- Use special service tools or the equivalent when they are required.

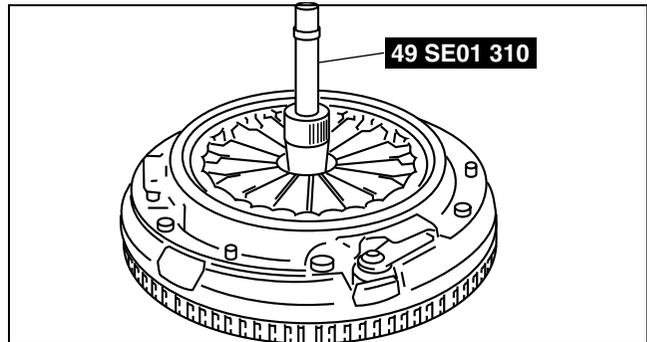

acxuuw00000007

Disassembly


- If the disassembly procedure is complex, requiring many parts to be disassembled, all parts should be marked in a place that will not affect their performance or external appearance, and identified so that reassembly can be performed easily and efficiently.

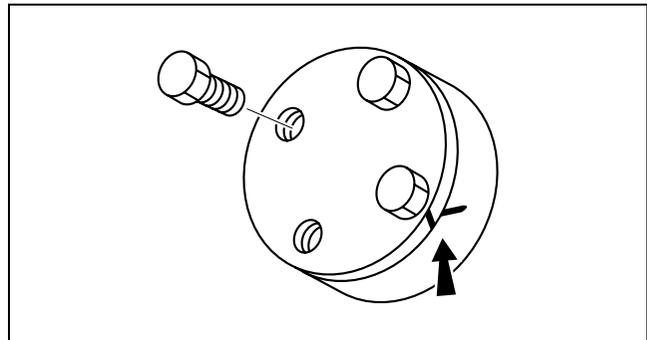

acxuuw00000010

Inspection During Removal, Disassembly

- When removed, each part should be carefully inspected for malfunction, deformation, damage and other problems.

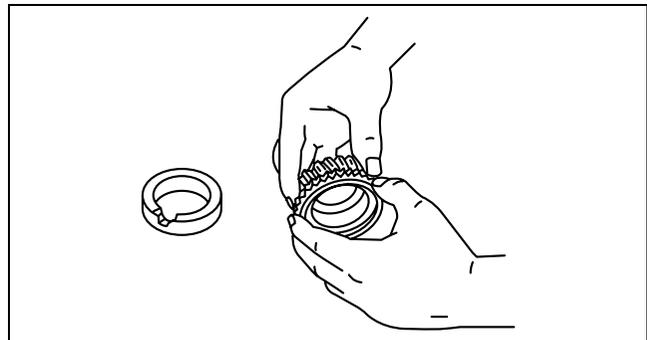


acxuuw00000011

GENERAL INFORMATION

Arrangement of Parts

- All disassembled parts should be carefully arranged for reassembly.
- Be sure to separate or otherwise identify the parts to be replaced from those that will be reused.

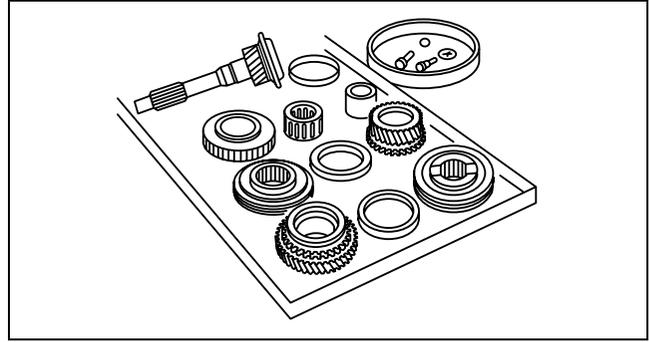

acxuuw0000012


00-00

Cleaning of Parts

- All parts to be reused should be carefully and thoroughly cleaned in the appropriate method.

Warning


- **Using compressed air can cause dirt and other particles to fly out causing injury to the eyes. Wear protective eye wear whenever using compressed air.**

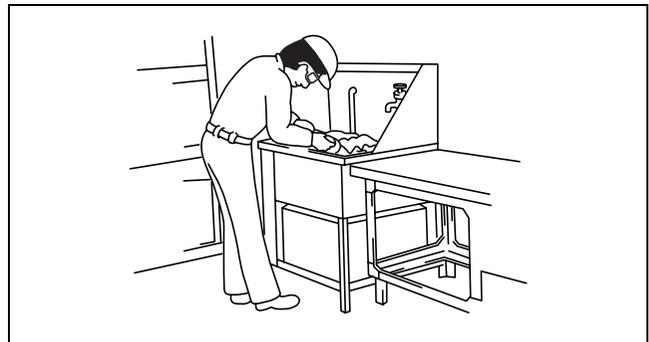


acxuuw0000013

Reassembly

- Standard values, such as torques and certain adjustments, must be strictly observed in the reassembly of all parts.
- If removed, these parts should be replaced with new ones:
 - Oil seals
 - Gaskets
 - O-rings
 - Lock washers
 - Cotter pins
 - Nylon nuts
- Depending on location:
 - Sealant and gaskets, or both, should be applied to specified locations. When sealant is applied, parts should be installed before sealant hardens to prevent leakage.
 - Oil should be applied to the moving components of parts.
 - Specified oil or grease should be applied at the prescribed locations (such as oil seals) before reassembly.

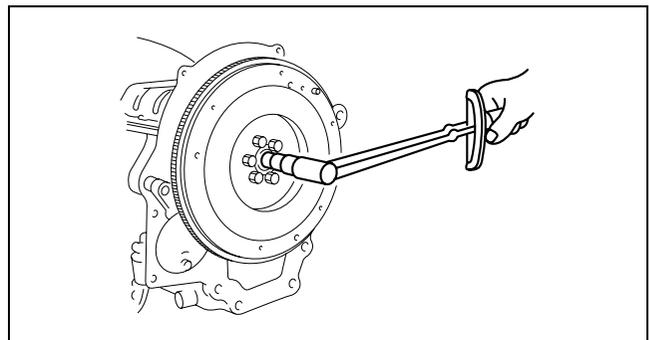

acxuuw0000014

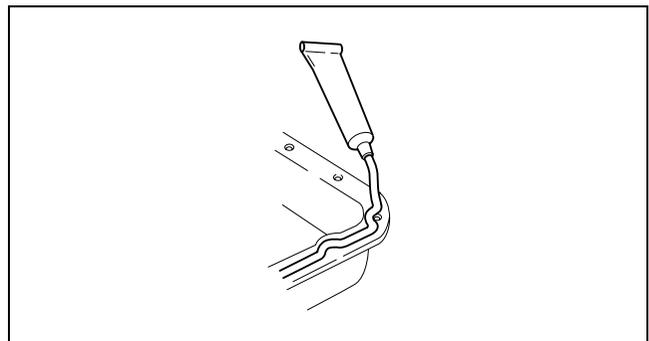

acxuuw00000326

GENERAL INFORMATION

Adjustment


- Use suitable gauges and testers when making adjustments.



acxuuw00000016

Rubber Parts and Tubing


- Prevent gasoline or oil from getting on rubber parts or tubing.

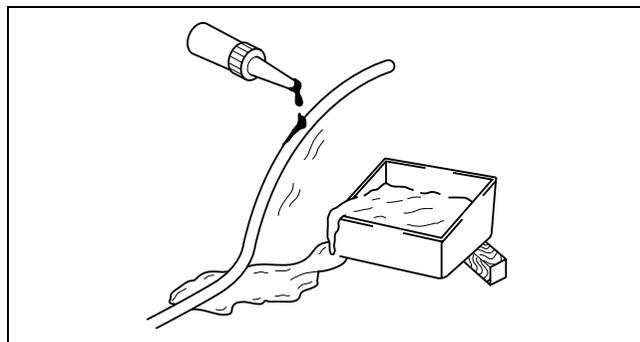

acxuuw00000017

Hose Clamps

- When reinstalling, position the hose clamp in the original location on the hose and squeeze the clamp lightly with large pliers to ensure a good fit.

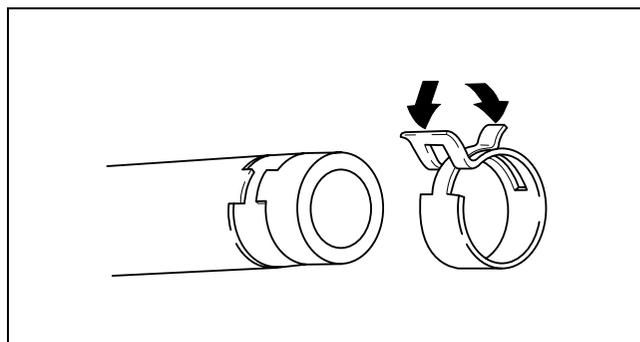


acxuuw00000018

Torque Formulas

- When using a torque wrench-**SST** or equivalent combination, the specified torque must be recalculated due to the extra length that the **SST** or equivalent adds to the torque wrench. Recalculate the torque by using the following formulas. Choose the formula that applies to you.

Torque Unit	Formula
N·m	$N \cdot m \times [L / (L + A)]$
kgf·m	$kgf \cdot m \times [L / (L + A)]$
kgf·cm	$kgf \cdot cm \times [L / (L + A)]$
ft·lbf	$ft \cdot lbf \times [L / (L + A)]$
in·lbf	$in \cdot lbf \times [L / (L + A)]$

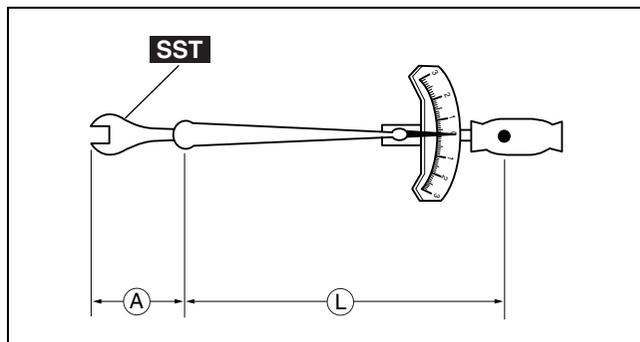


acxuuw00000019

A : The length of the **SST** past the torque wrench drive.
L : The length of the torque wrench.

GENERAL INFORMATION

Vise

- When using a vise, put protective plates in the jaws of the vise to prevent damage to parts.

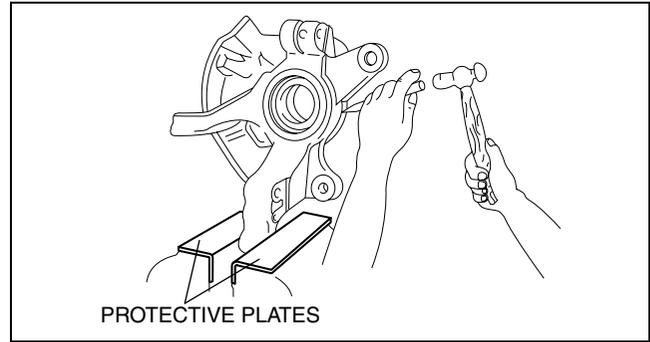

acxuuw0000020


00-00

ELECTRICAL SYSTEM

Connectors


Disconnecting connectors

- When disconnecting a connector, grasp the connectors, not the wires.

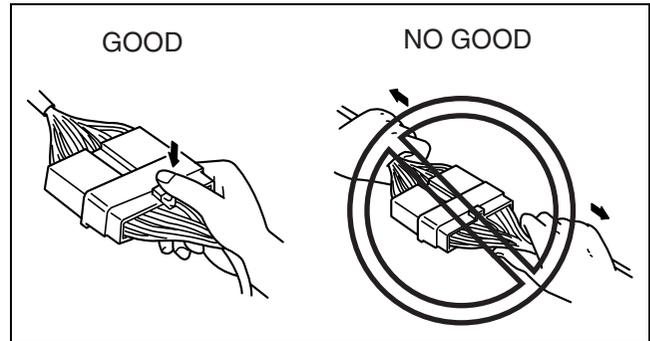


acxuuw00000454

- Connectors can be disconnected by pressing or pulling the lock lever as shown.

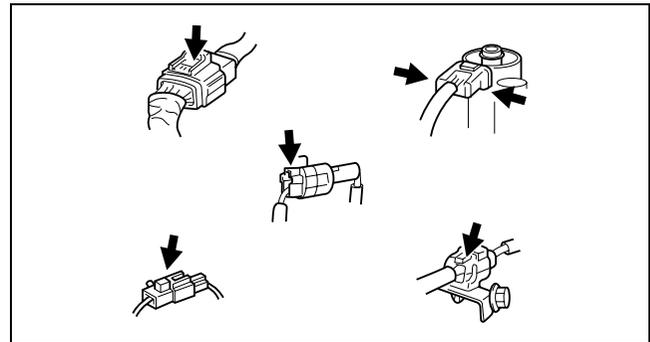

Locking connector

- When locking connectors, listen for a click indicating they are securely locked.

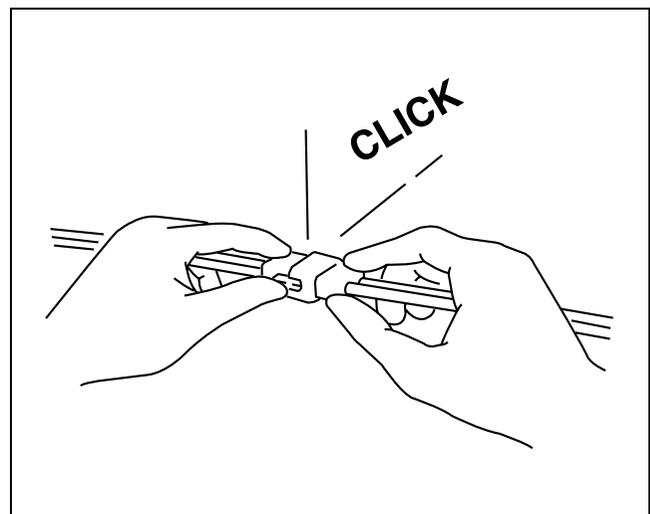


acxuuw00000456

GENERAL INFORMATION

Inspection


Caution

- To prevent damage to the terminal, wrap a thin wire around the tester probe before inserting into terminal.
- When a tester is used to inspect for continuity or measuring voltage, insert the tester probe from the wiring harness side.

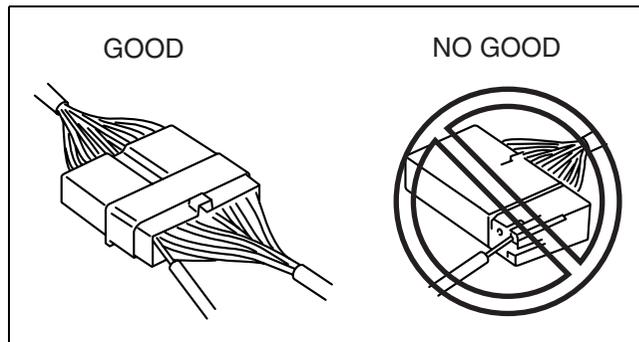

acxuuw00000457

- Inspect the terminals of waterproof connectors from the connector side since they cannot be accessed from the wiring harness side.

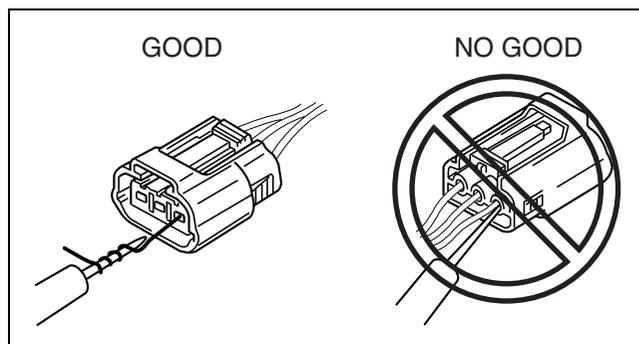

acxuuw00000458

SAE STANDARDS

id000000800900

- In accordance with new regulations, SAE (Society of Automotive Engineers) standard names and abbreviations are now used in this manual. The table below lists the names and abbreviations that have been used in Mazda manuals up to now and their SAE equivalents.

SAE Standard			SAE Standard		
Abbreviation	Name	Remark	Abbreviation	Name	Remark
AP	Accelerator Pedal		MAP	Manifold Absolute Pressure	
APP	Accelerator Pedal Position		MAF sensor	Mass Air Flow Sensor	
ACL	Air Cleaner		MFL	Multiport Fuel Injection	
A/C	Air Conditioning		OBD	On-board Diagnostic System	
BARO	Barometric Pressure		OL	Open Loop	
B+	Battery Positive Voltage		OC	Oxidation Catalytic Converter	
CMP sensor	Camshaft Position Sensor		O2S	Oxygen sensor	
CAC	Charge Air Cooler		PNP	Park/Neutral Position	
CLS	Closed Loop System		PSP	Power Steering Pressure	
CTP	Closed Throttle Position		PCM	Powertrain Control Module	#3
CPP	Clutch Pedal Position		PAIR	Pulsed Secondary Air Injection	Pulsed injection
CIS	Continuous Fuel Injection System		AIR	Secondary Air Injection	Injection with air pump
CKP sensor	Crankshaft Position Sensor		SAPV	Secondary Air Pulse Valve	
DLC	Data Link Connector		SFI	Sequential Multiport Fuel Injection	
DTM	Diagnostic Test Mode	#1	3GR	Third Gear	
DTC	Diagnostic Test Code(s)		TWC	Three Way Catalytic Converter	
DI	Distributor Ignition		TB	Throttle Body	
DLI	Distributorless Ignition		TP sensor	Throttle Position Sensor	
EI	Electronic Ignition	#2			
ECT	Engine Coolant Temperature				
EM	Engine Modification				
EVAP	Evaporative Emission				

GENERAL INFORMATION

00-00

SAE Standard		Remark	SAE Standard		Remark
Abbreviation	Name		Abbreviation	Name	
EGR	Exhaust Gas Recirculation		TCC	Torque Converter Clutch	
FC	Fan Control		TCM	Transmission (Transaxle) Control Module	
FF	Flexible Fuel		TR	Transmission (Transaxle) Range	
4GR	Fourth Gear		TC	Turbocharger	
GEN	Generator		VSS	Vehicle Speed Sensor	
GND	Ground		VR	Voltage Regulator	
HO2S	Heated Oxygen Sensor	With heater	VAF sensor	Volume Air Flow Sensor	
IAC	Idle Air Control		WU-TWC	Warm Up Three Way Catalytic Converter	#4
IAT	Intake Air Temperature		WOP	Wide Open Throttle	
KS	Knock Sensor				
MIL	Malfunction Indicator Lamp				

#1: Diagnostic trouble codes depend on the diagnostic test mode.

#2: Controlled by the PCM

#3: Device that controls engine and powertrain

#4: Directly connected to exhaust manifold

ABBREVIATIONS

id000000801000

ATF	Automatic Transaxle Fluid
LH	Left Hand
RH	Right Hand
SST	Special Service Tool
TFT	Transaxle Fluid Temperature
2WD	2 Wheel Drive

TRANSFER03-16
TECHNICAL DATA03-50

SERVICE TOOLS 03-60

03-16 TRANSFER

TRANSFER CLEANING03-16-1
 Cleaning Precautions03-16-1
TRANSFER DISASSEMBLY03-16-1
 Before Service Precautions03-16-1
 Transfer Component Disassembly03-16-2
 Transfer Component Disassembling
 Procedure03-16-3
 Drive Gear Case Component
 Disassembly03-16-4
 Drive Gear Case Component
 Disassembly Procedure03-16-5
 Front Carrier Component
 Disassembly03-16-9
 Front Carrier Component Disassembling
 Procedure03-16-10

TRANSFER ASSEMBLY 03-16-13
 Before Service Precautions03-16-13
 Drive Gear Case Component
 Assembly03-16-14
 Drive Gear Case Component Assembly
 Procedure03-16-15
 Front Carrier Component Assembly03-16-21
 Front Carrier Component Assembly
 Procedure03-16-22
 Transfer Component Assembly03-16-28
 Transfer Component Assembly
 Procedure03-16-29

TRANSFER CLEANING

id031600500100

Cleaning Precautions

1. Clean the surface of the transfer using steam and cleaning fluids when disassembly.

Warning

- **Always wear safety glasses when using compressed air since the foreign material could be blown by the compression air and damage your eyes.**

2. Clean removed components with cleaning fluids and use compressed air to blow off the oil. Clean the oil holes and passages with compressed air.

TRANSFER DISASSEMBLY

id031600500200

Before Service Precautions


- To prevent foreign material from entering the transfer, perform disassembly and servicing in a clean, dust-free environment.
- Inspect the each part while disassembling.

Warning

- **The engine stand is equipped with a self-lock mechanism. However, if the transfer is tilted, the self-lock mechanism could become inoperative. This could cause the transfer to rotate accidentally, resulting in injury. Therefore, make sure that the transfer is not tilted when it is on the engine stand. When turning the transfer, grasp the rotation handle firmly.**

TRANSFER

Transfer Component Disassembly

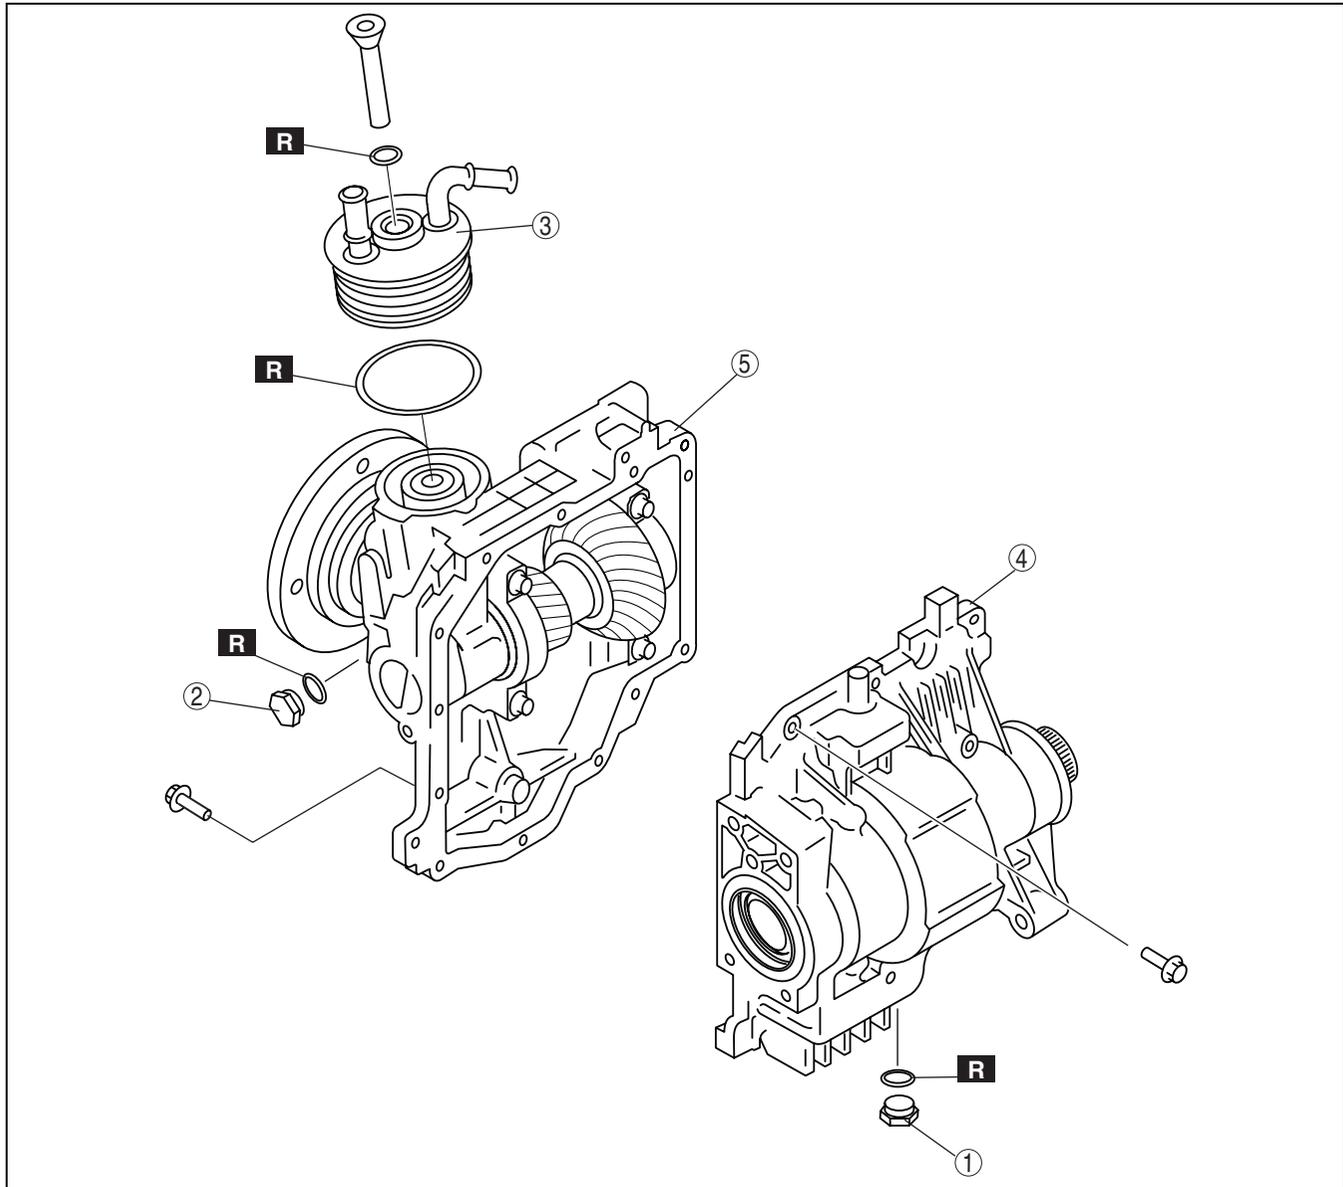

bawuuu00000167


1	Drain plug
2	Oil level plug
3	Oil cooler

4	Drive gear case component
5	Front carrier component

TRANSFER

Transfer Component Disassembling Procedure


1. Assemble the **SSTs**.

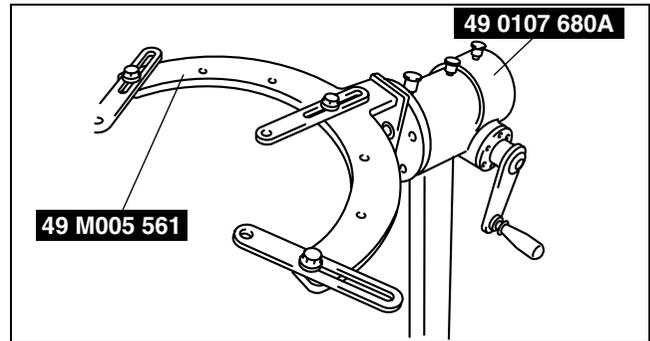

bawuuu00000168

03-16


2. Install the transfer component to the **SSTs**.
3. Remove the oil cooler.
4. Remove the drive gear case component.

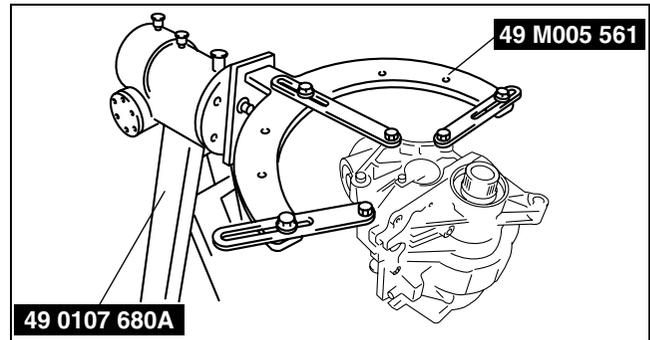

bawuuu00000169

TRANSFER

Drive Gear Case Component Disassembly

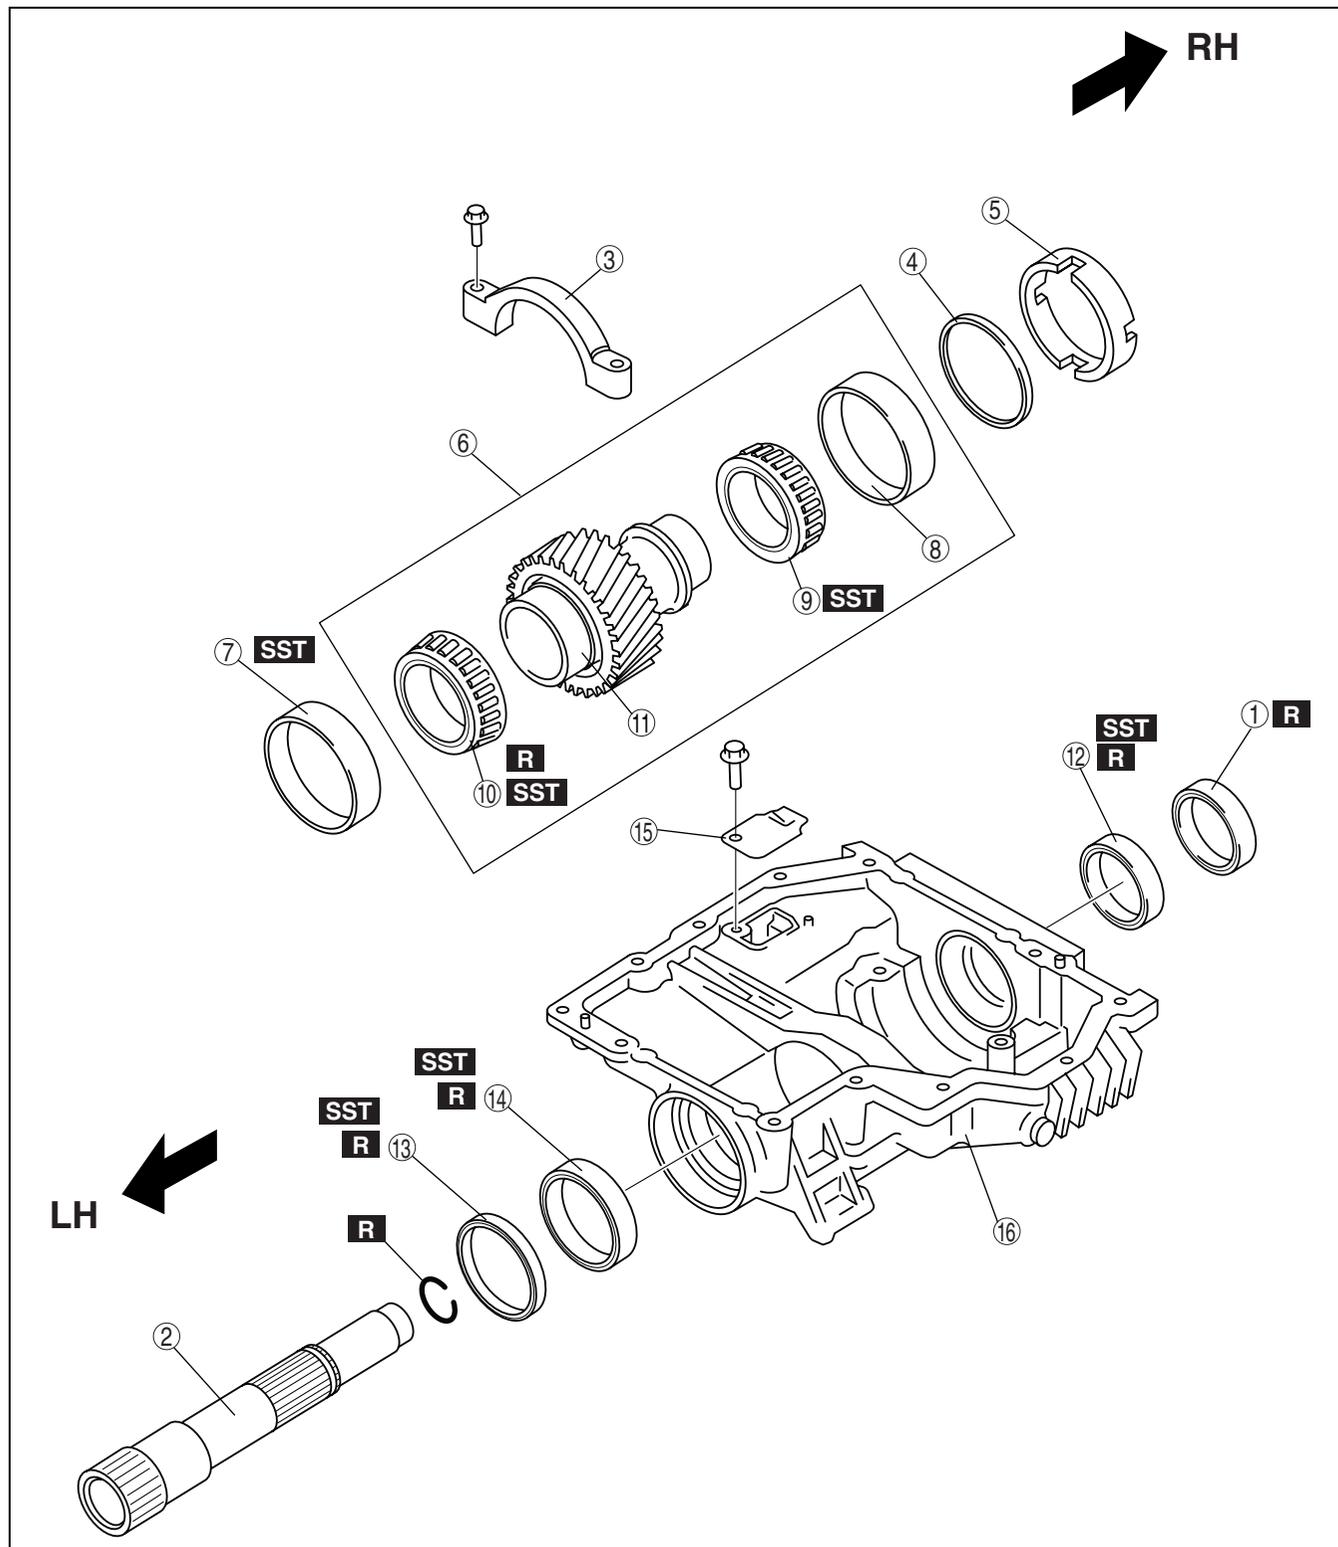


bawuua00000170

1	Oil seal (RH outer)
2	Drive gear shaft
3	Bearing cap
4	Adjustment shim
5	Spacer
6	Drive gear component
7	Bearing outer race (LH)
8	Bearing outer race (RH)

9	Bearing (RH)
10	Bearing (LH)
11	Drive gear
12	Oil seal (RH inner)
13	Oil seal (LH outer)
14	Oil seal (LH inner)
15	Baffle plate
16	Drive gear case


Drive Gear Case Component Disassembly Procedure

1. Install the drive gear case component to the SST.

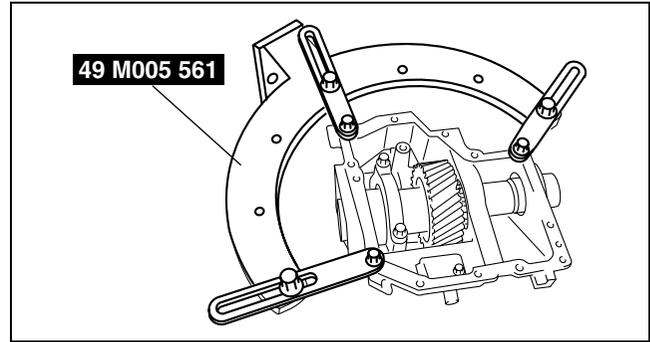


03-16


2. Tap the drive gear shaft using a suitable rod and hammer.

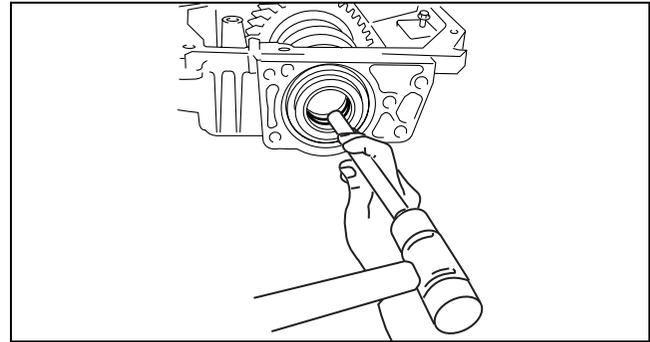

3. Take out the drive gear shaft from the drive gear case.

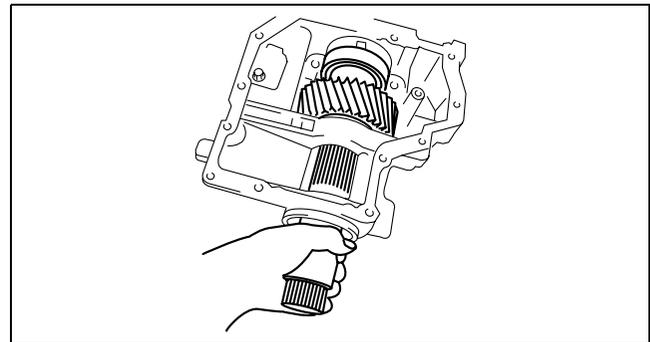


4. Make alignment marks on the bearing cap and drive gear case.
5. Remove the bearing cap.

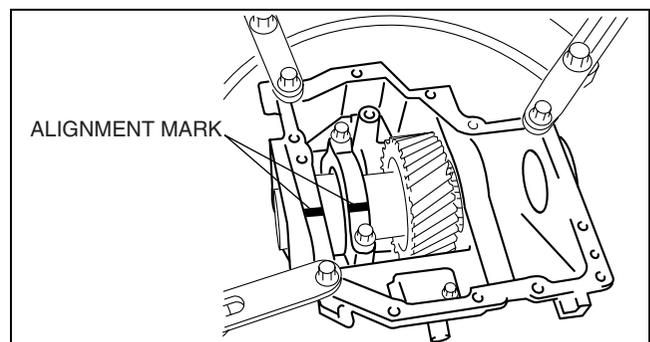

TRANSFER


6. Insert a flathead screwdriver into spacer notch and remove the adjustment shim.

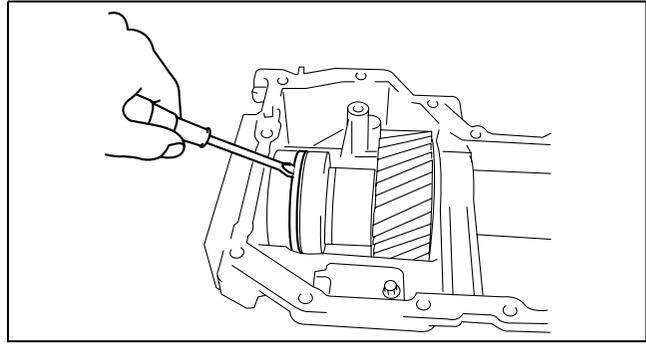

bawuua00000175


Caution

- Place a rag on the case to protect it from damage.

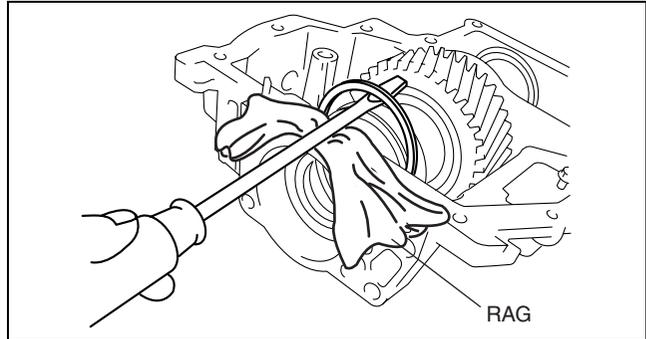


bawuua00000176

7. Remove the spacer.

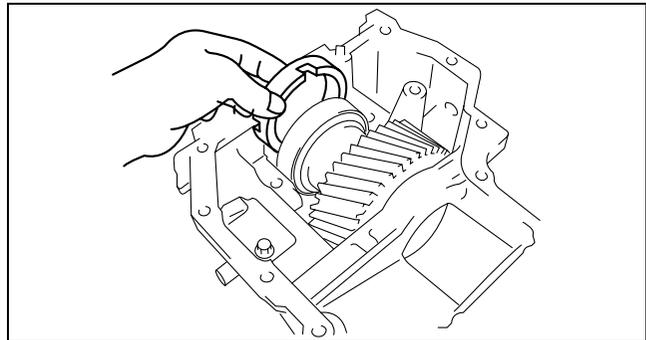


bawuua00000177

8. Remove the drive gear component.

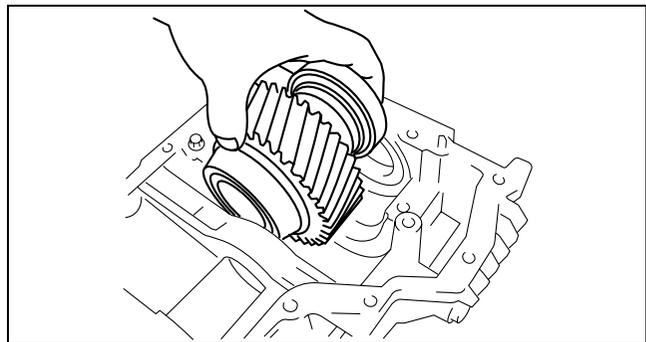

bawuua00000178


9. Using the **SST**, remove the oil seal (LH outer).

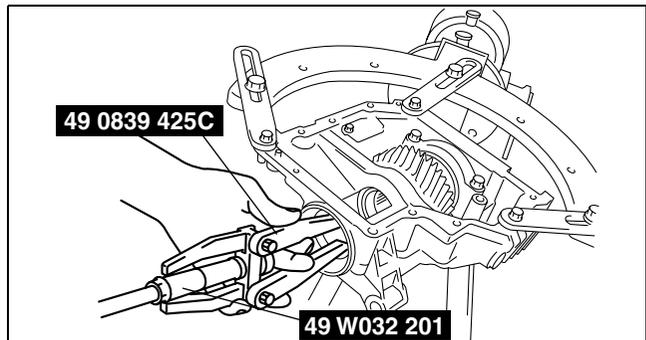


bawuua00000179

TRANSFER


10. Using the **SST**, remove the oil seal (LH inner).

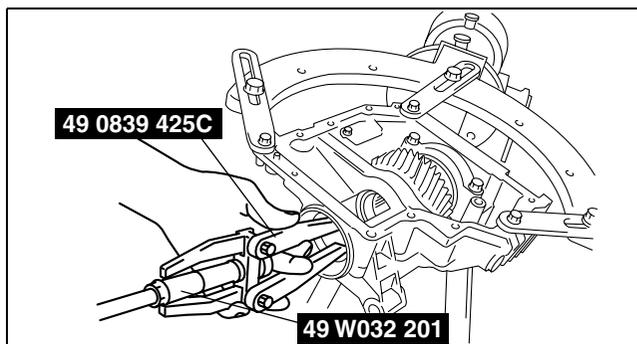


11. Using a suitable rod and hammer, remove the oil seal (RH outer).

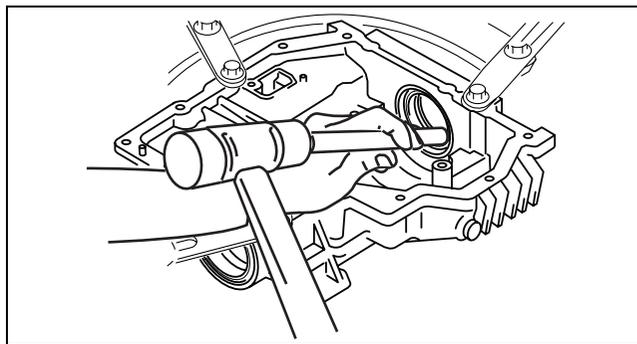


12. Using the **SST**, remove the oil seal (RH inner).

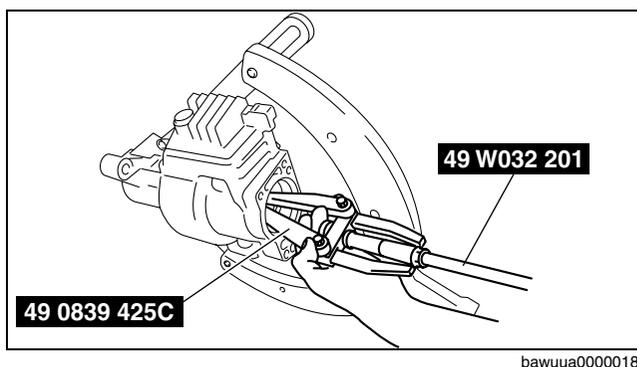

13. Using the **SST**, remove the bearing outer race (LH).

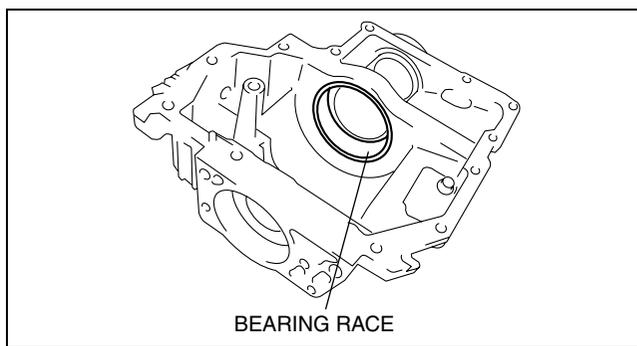


(1) Install the **SSTs** (49 W032 202, 49 S019 005).

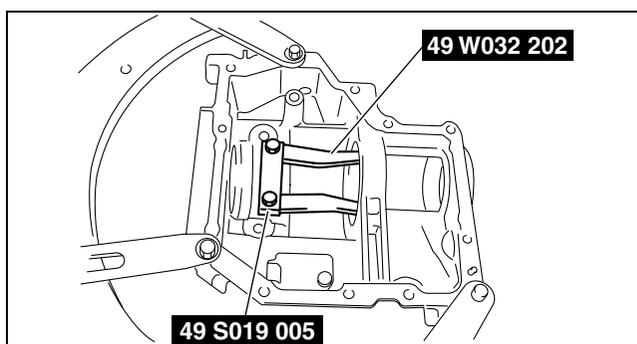

03-16


TRANSFER

- (2) Connect the **SST** (49 T032 316, 49 T032 317) to the **SSTs** (49 W032 202, 49 S019 005).

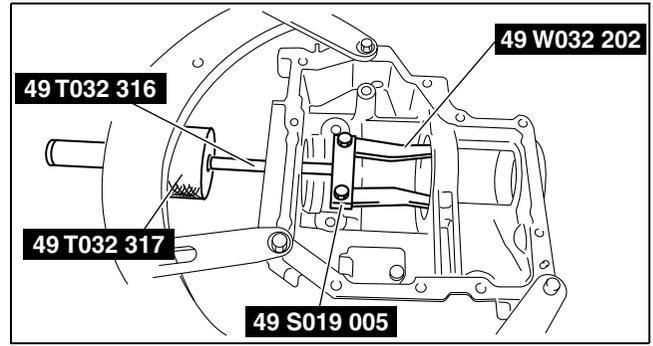


bawuua0000184

14. Remove the baffle plate.

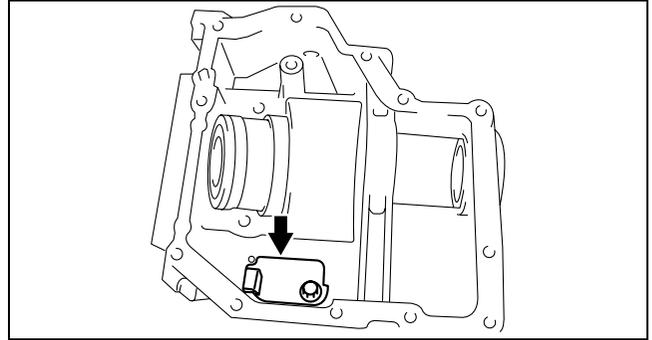


bawuua0000185

15. Using the **SST**, remove the bearing (RH).

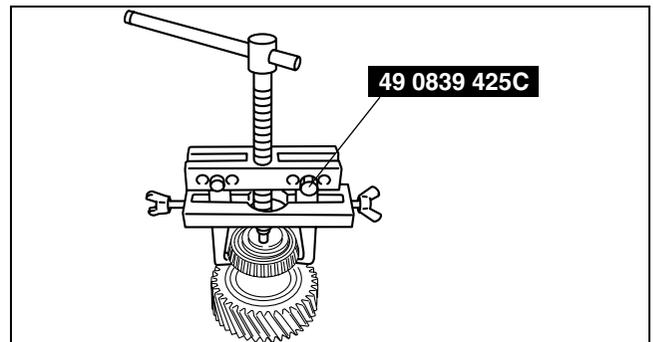


bawuua0000186

16. Using a flathead screwdriver, deform the bearing roller guide (LH) and remove it.

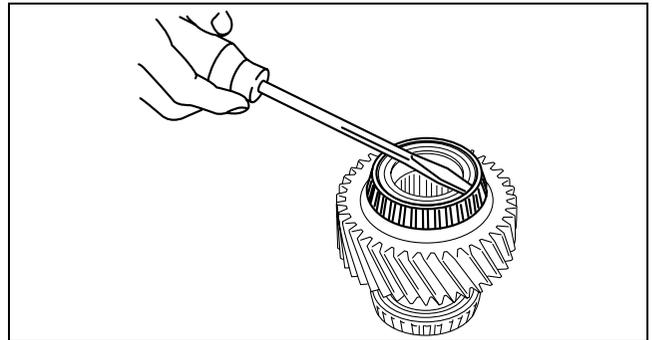

bawuua0000187

17. Using the **SST**, remove the bearing inner race (LH).

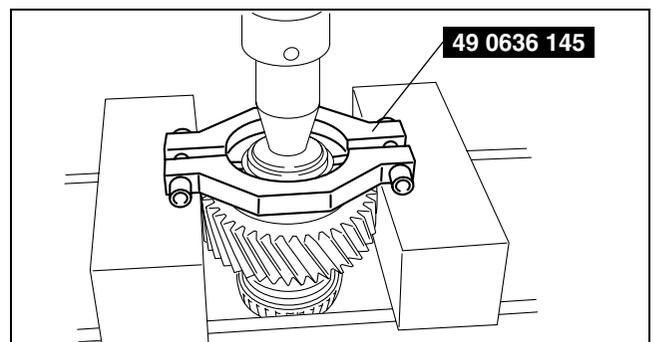


bawuua0000188

TRANSFER

Front Carrier Component Disassembly

03-16

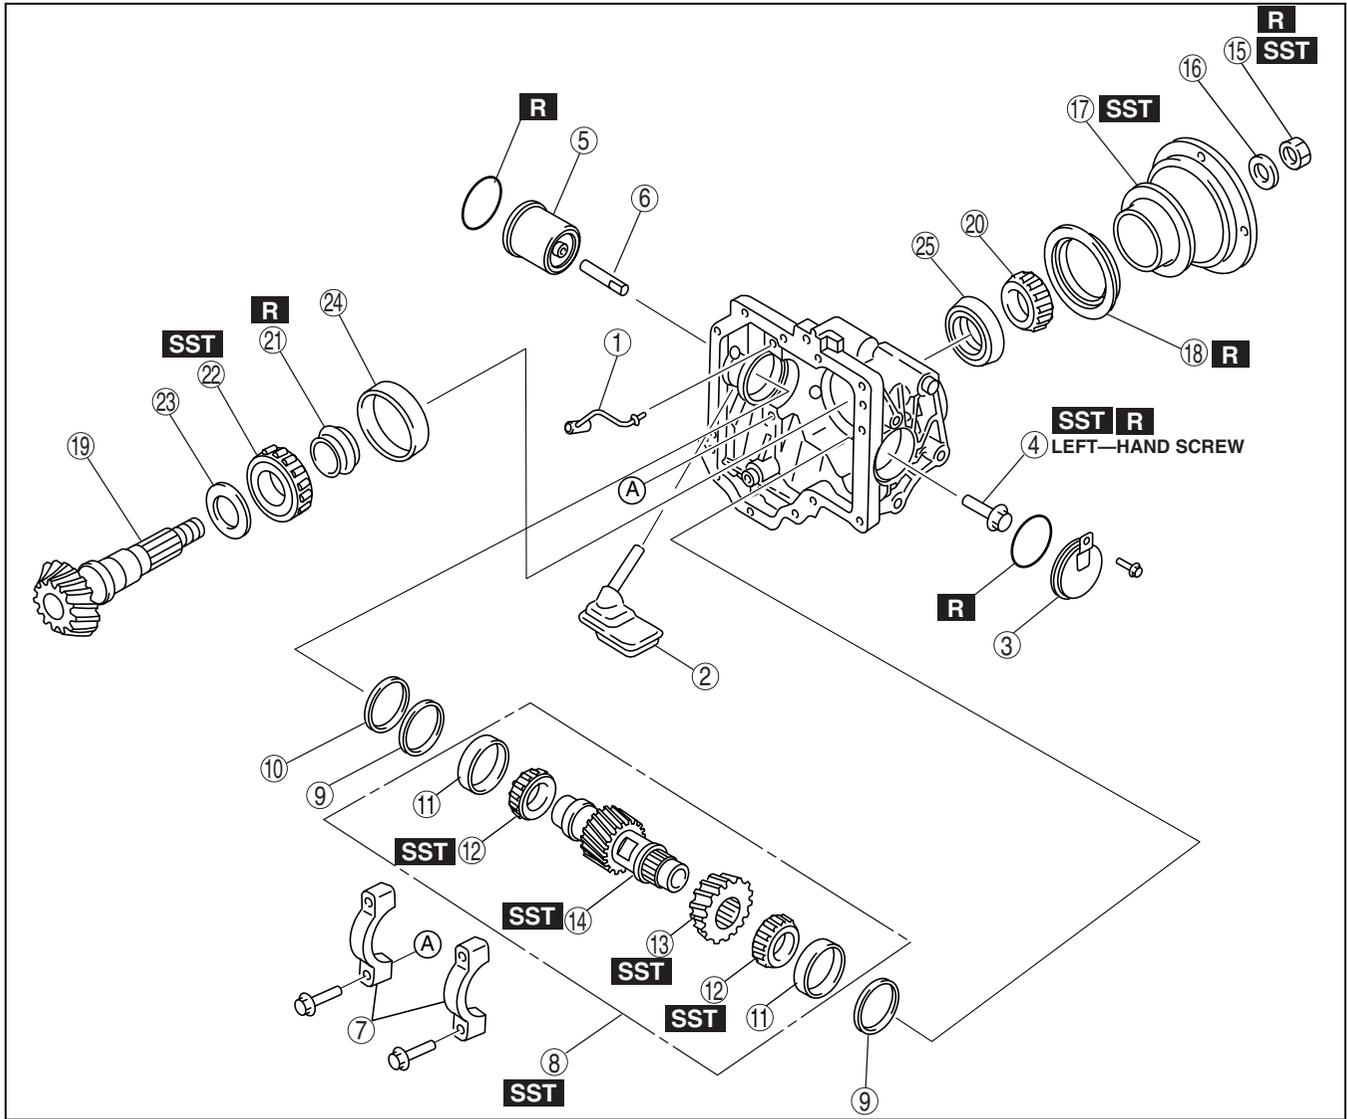

bawuuu00000189


1	Oil pipe
2	Oil strainer
3	Side cover
4	Ring gear lockbolt
5	Oil pump
6	Oil pump shaft
7	Bearing cap
8	Ring gear component
9	Adjustment shim
10	Spacer
11	Bearing outer race (side)
12	Bearing (side)
13	Ring gear

14	Ring gear shaft
15	Locknut
16	Washer
17	Companion flange
18	Oil seal
19	Drive pinion gear
20	Bearing (rear)
21	Distance piece
22	Bearing (front)
23	Spacer
24	Bearing outer race (front)
25	Bearing outer race (rear)

TRANSFER


Front Carrier Component Disassembling Procedure

1. Install the front carrier component to the SST.
2. Remove the oil strainer.
3. Remove the oil pipe.
4. Remove the side cover.

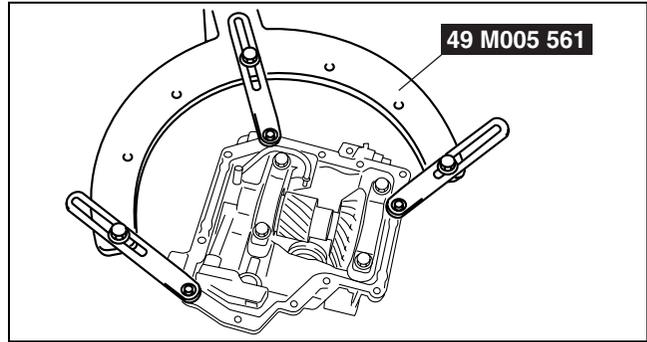


bawuuu00000190

5. Remove the oil pump by turning it using pliers as shown in the figure.
 - If the oil pump shaft remains in the gear shaft side, remove the oil pump shaft.

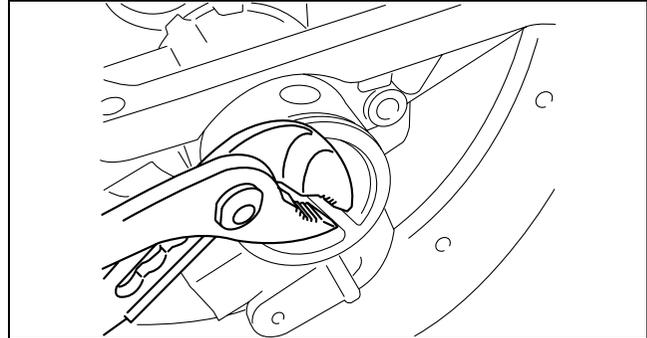


bawuuu00000191

6. Make alignment marks on the bearing caps and front carrier.
7. Remove the bearing caps.

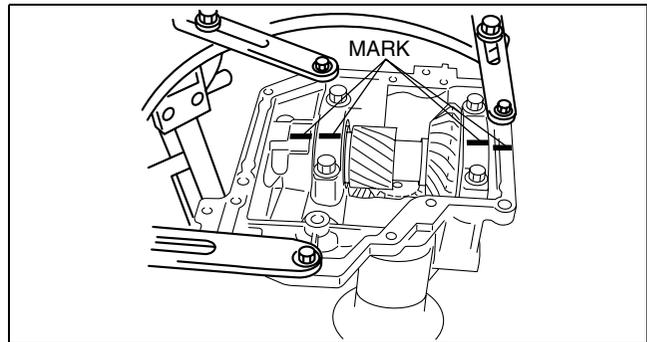

bawuuu00000192


8. Using a suitable wrench, secure the ring gear shaft, and remove the ring gear lockbolt.

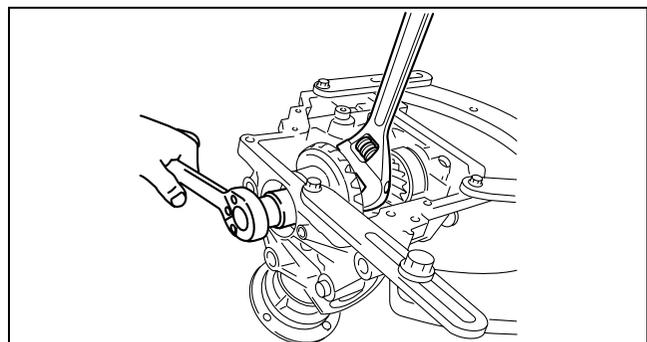

bawuuu00000193

TRANSFER


9. Using the **SST**, secure the companion flange, and remove the locknut and washer.

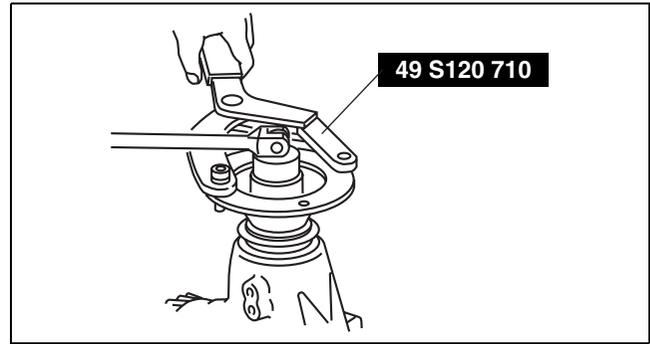

bawuuu00000546


03-16

10. Using the **SST**, remove the companion flange.

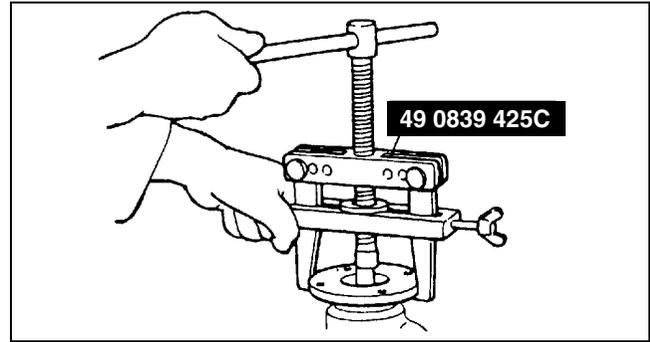


bawuuu00000536

11. Using the **SSTs**, remove the ring gear component.
12. Remove the adjustment shims and spacer.

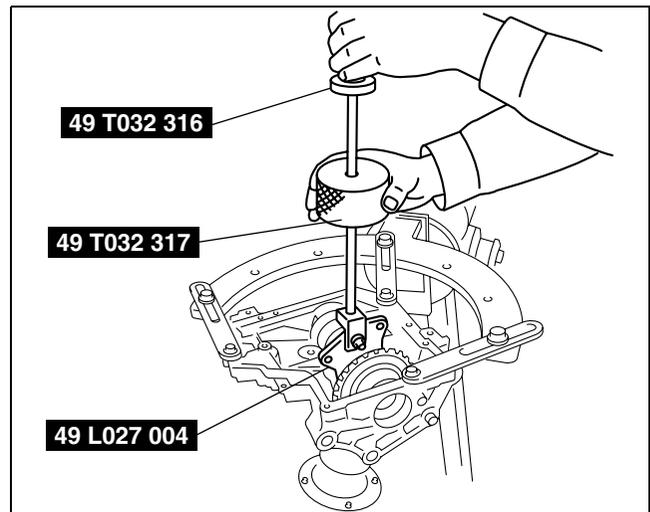

bawuuu00000196


13. Install an appropriate nut to the drive pinion to prevent the thread from being damaged.
14. Lightly tap the drive pinion using a copper hammer and remove the drive pinion gear.

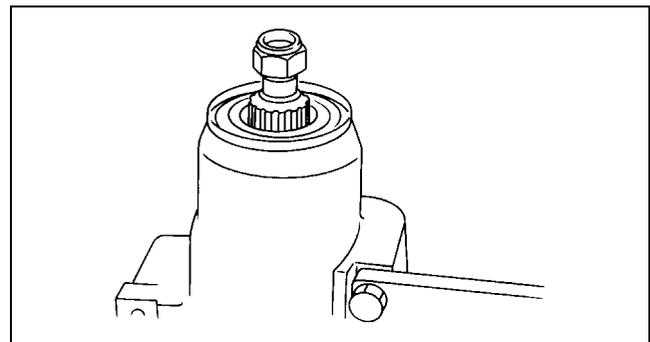

bawuuu00000537


TRANSFER

15. Using a flathead screwdriver, remove the oil seal.
16. Remove the bearing (rear) and distance piece.

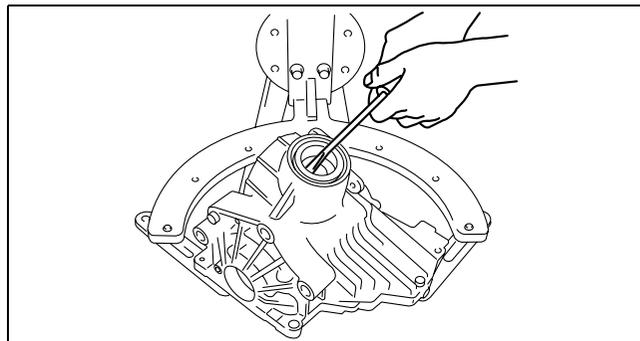


bawuua00000198

17. Using the **SST**, remove the bearing (front).
18. Remove the spacer.

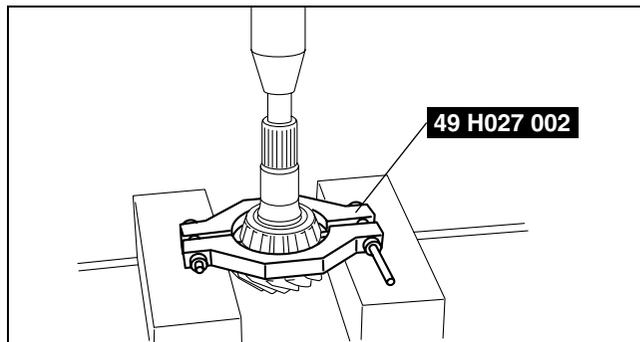


bawuua00000199

19. Attach the brass stick to the notch, tap the race end lightly and evenly, then remove the bearing outer races.

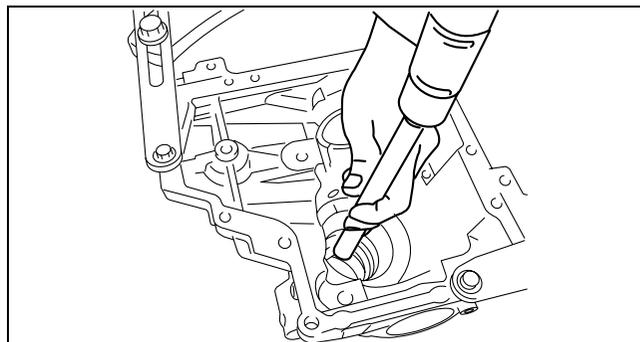


bawuua00000200

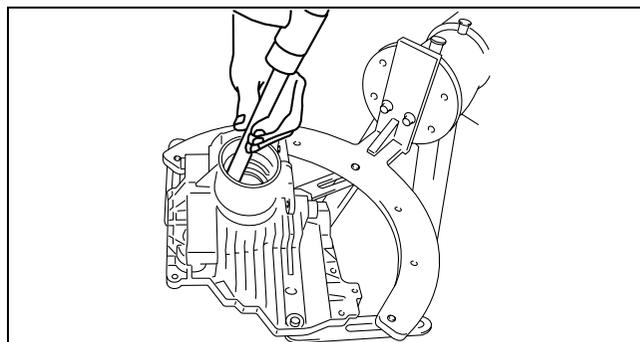

bawuua00000201

20. Using the **SSTs**, remove the bearing (side) (opposite ring gear side).

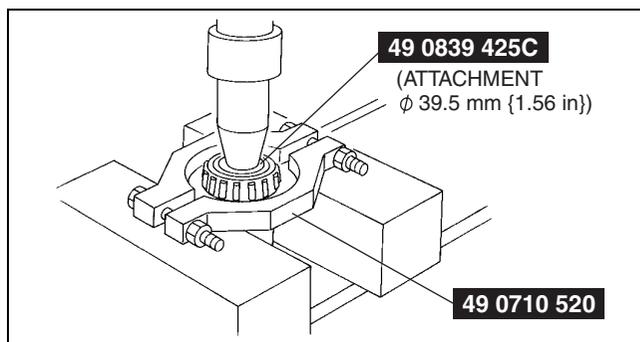

bawuua00000202

TRANSFER


21. Using a **SST**, remove the bearing (side) (ring gear side) together with ring gear.

Substitution SST

- **49 T032 302**

Outer diameter: 25— 30 mm {0.99— 1.18 in}

Plate thickness: 1 mm {0.04 in} or more

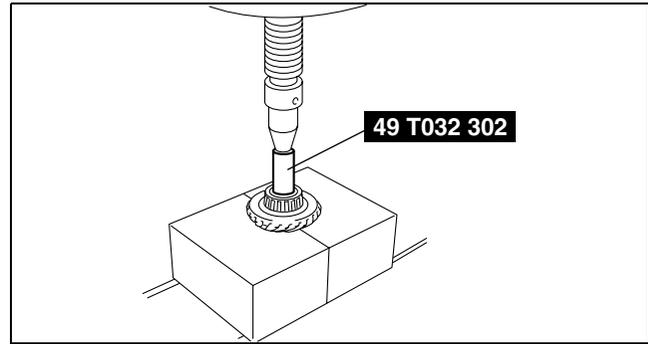

bawuuu00000203

03-16

TRANSFER ASSEMBLY

id031600500300

Before Service Precautions


- Assemble with bare hands or using vinyl gloves. To prevent foreign material from entering the transfer, do not use cotton work gloves or a rag.
- Apply sufficient gear oil to the sliding surfaces and O-rings, and be careful not to damage when assembling.
- Replace the transfer with a new one if the case alignment surface is damaged. Be careful not to damage it since it may cause oil leakage.
- When installing silicone sealant, clean off the old sealant adhering to the sealing area and clean the sealing area with cleaning fluids.
- After installing a seal, leave the parts alone for **2 h or more**. Do not add oil or operate the vehicle during this time.

Warning

- **The engine stand is equipped with a self-lock mechanism. However, if the transfer is tilted, the self-lock mechanism could become inoperative. This could cause the transfer to rotate accidentally, resulting in injury. Therefore, make sure that the transfer is not tilted when it is on the engine stand. When turning the transfer, grasp the rotation handle firmly.**

Drive Gear Case Component Assembly Procedure

1. Install the drive gear case to the SST.

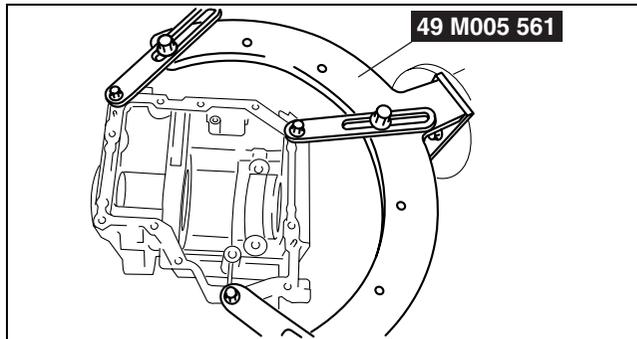


bawuuu00000205

2. Install the baffle plate.

Tightening torque

6.9— 9.8 N·m {70— 99 kgf·cm, 61— 86 in·lbf}

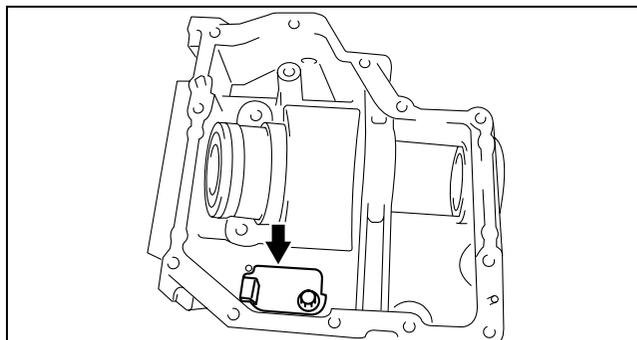

bawuuu00000206

3. Using a press, assemble the bearing (RH).


Substitution SST

- 49 H028 202

Outer diameter: 58— 61 mm {2.29— 2.40 in}

Inner diameter: 56 mm {2.20 in} or more

Plate thickness: 1 mm {0.04 in} or more

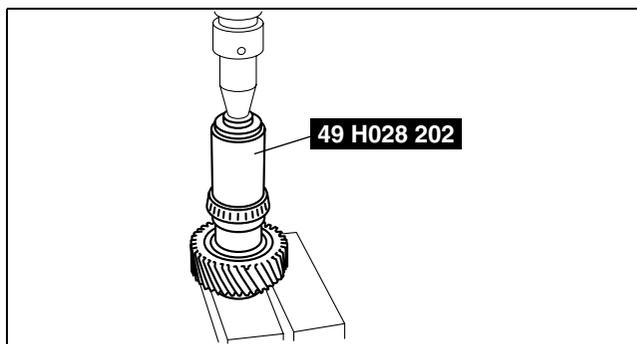

bawuuu00000207

4. Using a press, assemble the bearing (LH).

Substitution SST


- 49 H028 202

Outer diameter: 58— 61 mm {2.29— 2.40 in}

Inner diameter: 56 mm {2.20 in} or more

Plate thickness: 1 mm {0.04 in} or more


5. Temporarily assemble the bearing outer race (RH) and spacer to the drive gear.

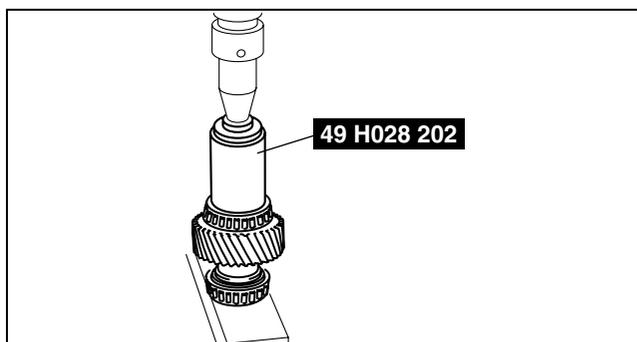

bawuuu00000208

TRANSFER

6. Place the drive gear component on the surface plate as shown in the figure, and measure the height using a vernier caliper or height gauge. This is dimension A.

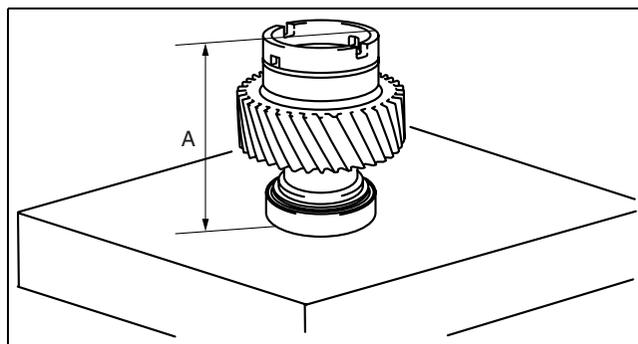


bawuua00000209

7. Measure the width of the drive gear installation area in the drive gear case. This is dimension B.
 8. The maximum and minimum thickness C of the adjustment shim can be expressed by the following formula:

$$C = B - A - (0.01 - 0.03 \text{ mm } \{0.00039 - 0.00118 \text{ in}\})$$

9. If the thickness of the installed adjustment shim is within the C range, use the shim as it is.
 10. If the thickness of the installed adjustment shim is not within the C range, select the appropriate adjustment shim from the table below and use it.

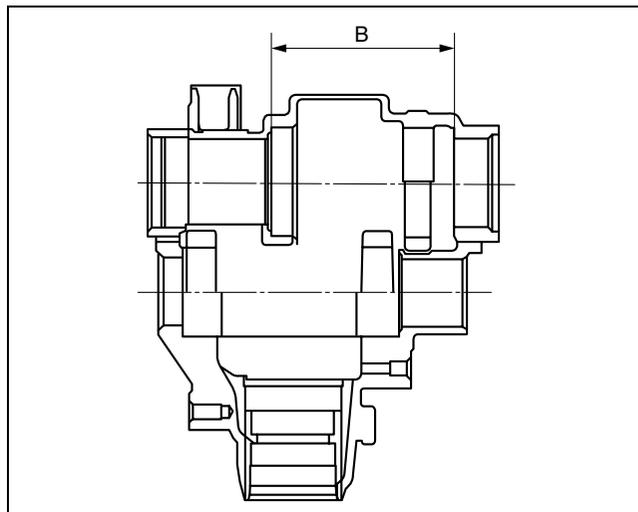


bawuua00000210

Adjustment shim


Identification mark	Thickness (mm {in})	Identification mark	Thickness (mm {in})
350	3.50 {0.1378}	420	4.20 {0.1654}
355	3.55 {0.1398}	425	4.25 {0.1673}
360	3.60 {0.1417}	430	4.30 {0.1693}
365	3.65 {0.1437}	435	4.35 {0.1713}
370	3.70 {0.1457}	440	4.40 {0.1732}
375	3.75 {0.1476}	445	4.45 {0.1752}
380	3.80 {0.1496}	450	4.50 {0.1772}
385	3.85 {0.1516}	455	4.55 {0.1791}
390	3.90 {0.1535}	460	4.60 {0.1811}
395	3.95 {0.1555}	-	-
400	4.00 {0.1575}	-	-
405	4.05 {0.1594}	-	-
410	4.10 {0.1614}	-	-
415	4.15 {0.1634}	-	-

11. Using the plastic hammer, install the bearing outer race (LH).

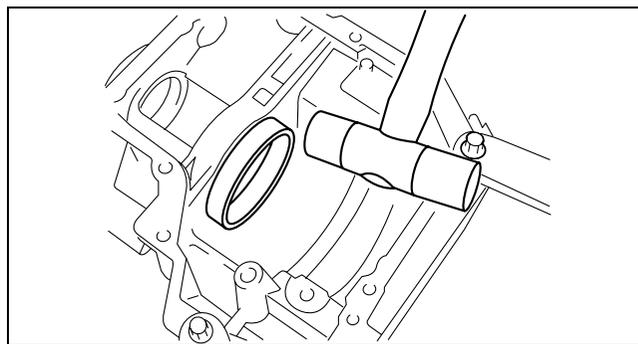


bawuua00000211

12. Install the drive gear component.

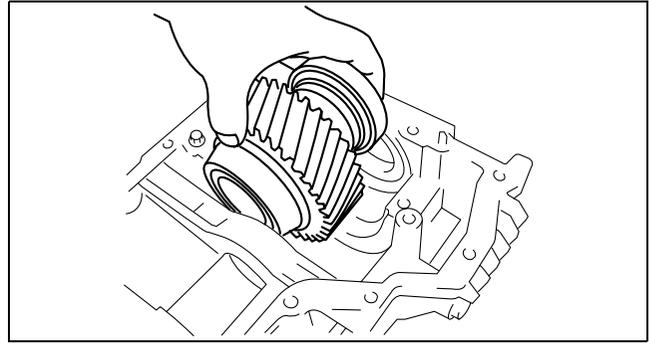


bawuuu00000212

13. Install the spacer with its notch facing the bearing, and also facing upward, as shown in the figure.

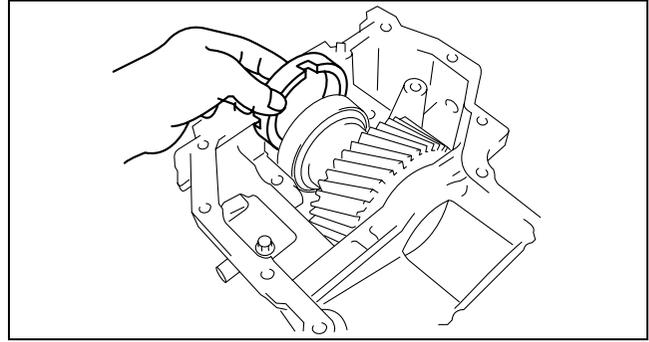

bawuuu00000213

14. Using a plastic hammer, assemble the adjustment shim.

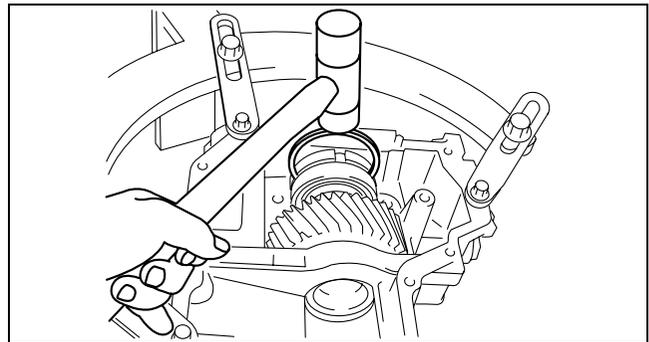


bawuuu00000214

15. Align the bearing cap alignment marks, assemble the bearing cap.

Tightening torque

37— 51 N·m {3.8— 5.2 kgf·m, 27.3— 37.6 ft·lbf}

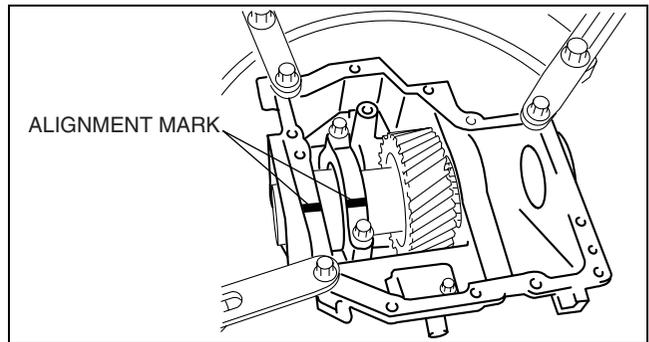


bawuuu00000215

16. Assemble the **SST** to the drive gear shaft, and hand-tighten the nut.

SST tightening torque

2.1 N·m {21 kgf·cm, 19 in·lbf}

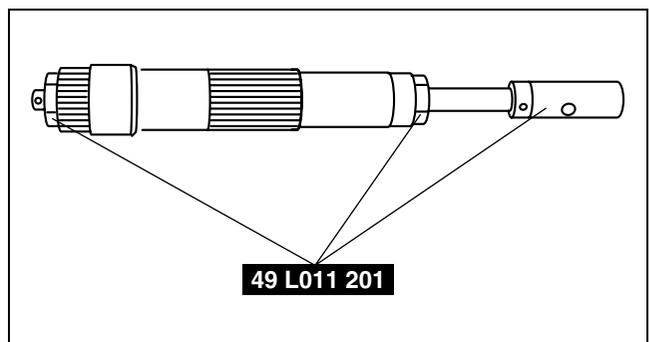

bawuuu00000216

TRANSFER

17. Install the drive gear shaft with the **SST** assembled and verify that the preload is within the specification using the torque wrench as shown in the figure.

Standard drive gear bearing preload

0.6— 2.1 N·m {6.2— 21.4 kgf·cm, 5.4— 18.5 in·lbf}

- If the drive gear rotational torque is not within the specification, adjust it by selecting the proper spacer.

18. Remove the drive gear shaft.
19. Using a **SSTs**, install the oil seals.


Note

- Mark the press-in depth of each oil seal to the SST and press fit oil seals to the specified position.


LH inner

Substitution SST

- **49 S019 006**
Outer diameter: 61— 66 mm {2.41— 2.59 in}
Plate thickness: 2 mm {0.08 in} or more

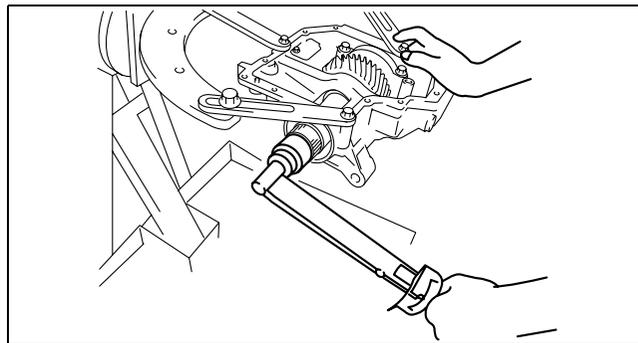


bawuuu00000217

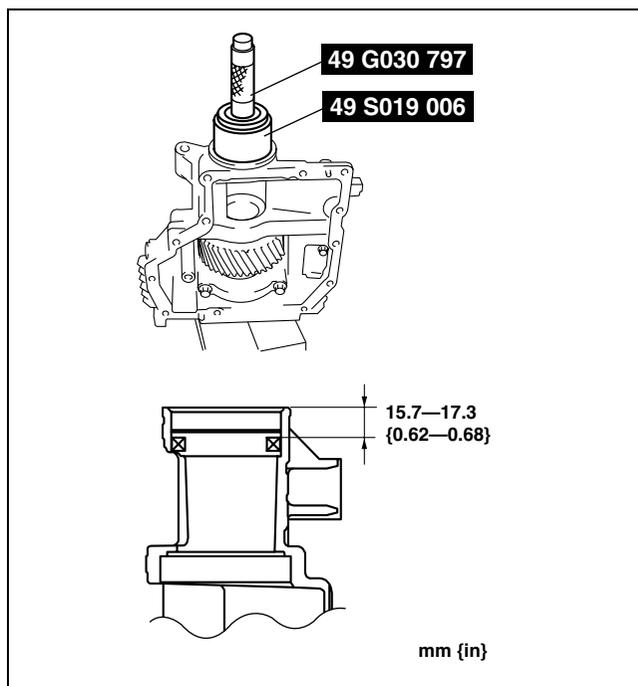

bawuuu00000218

LH outer

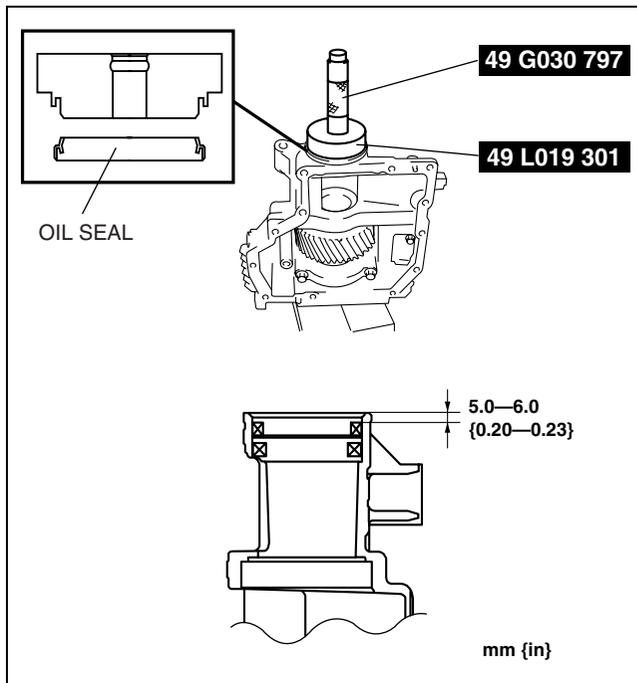


03-16

bawuuu00000219

RH inner

Substitution SST

- **49 B025 001**
Outer diameter: 57— 64 mm {2.25— 2.51 in}
Plate thickness: 2 mm {0.08 in} or more

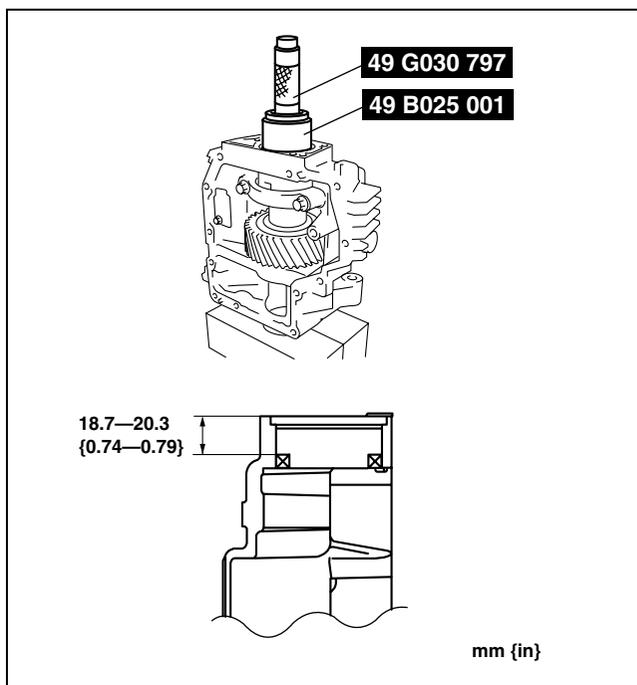

bawuuu00000220

RH outer

Substitution SST


- **49 T034 201A**

Outer diameter: 59— 64 mm {2.33— 2.51 in}

Inner diameter: 55 mm {2.17 in} or more

Length: 5 mm {0.20 in} or more

Plate thickness: 2 mm {0.08 in} or more

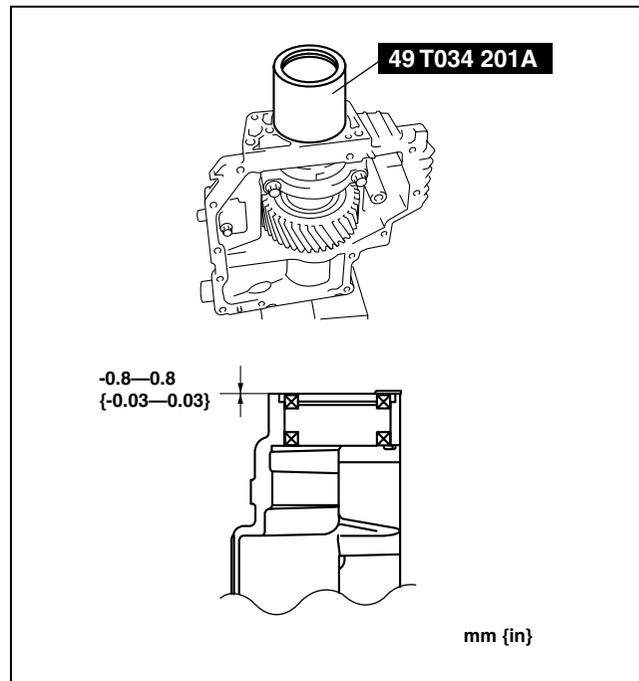


bawuua00000221

20. Install the C-ring to the drive gear shaft and insert the drive gear shaft until it is secured by the C-ring.


Caution

- **Be careful not to damage the oil seal when installing the drive gear shaft.**

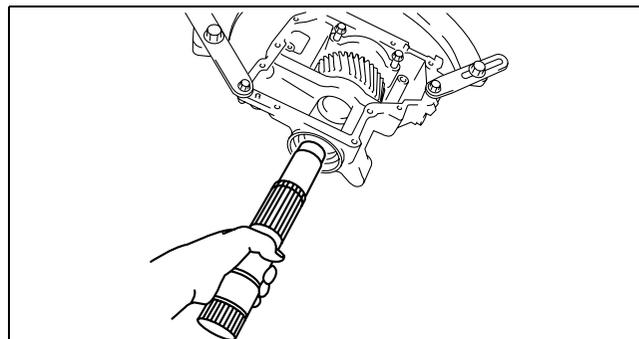

bawuua00000222


21. Pull the drive gear shaft by hand and verify that the drive gear shaft is secured by the C-ring at the specified position.

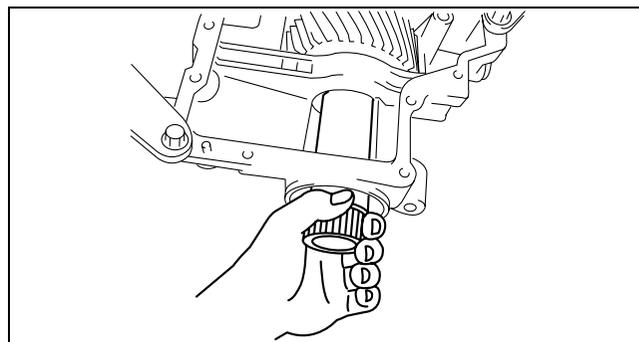

bawuua00000223

TRANSFER

Front Carrier Component Assembly

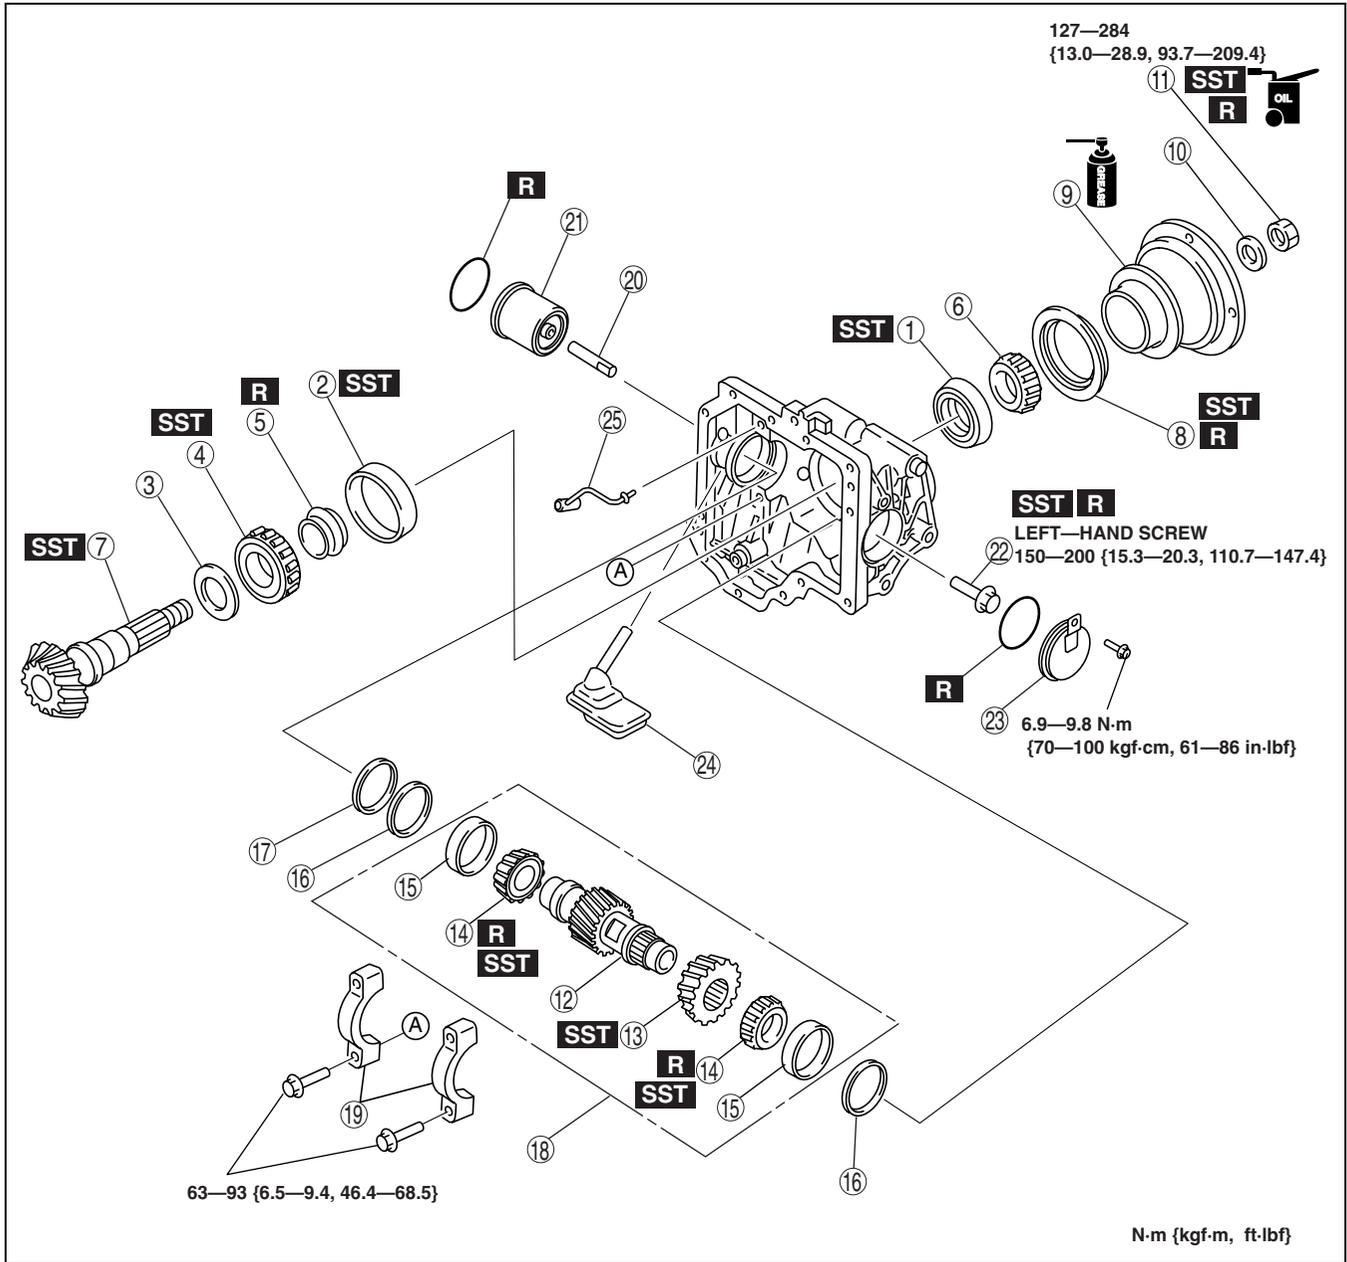

03-16

1	Bearing outer race (rear)
2	Bearing outer race (front)
3	Spacer
4	Bearing (front)
5	Distance piece
6	Bearing (rear)
7	Drive pinion gear
8	Oil seal
9	Companion flange
10	Washer
11	Locknut
12	Ring gear shaft
13	Ring gear


14	Bearing (side)
15	Bearing outer race (side)
16	Adjustment shim
17	Spacer
18	Ring gear component
19	Bearing cap
20	Oil pump shaft
21	Oil pump
22	Ring gear lockbolt
23	Side cover
24	Oil strainer
25	Oil pipe

Front Carrier Component Assembly Procedure

- Using a press, assemble the opposite ring gear side bearing (side) to the ring gear shaft.

Substitution SST

- **49 G033 105 (A)**
Outer diameter: 25 mm {0.99 in} or more
- **49 G033 105 (B)**
Outer diameter: 34— 40 mm {1.34— 1.57 in}
Plate thickness: 1 mm {0.04 in} or more

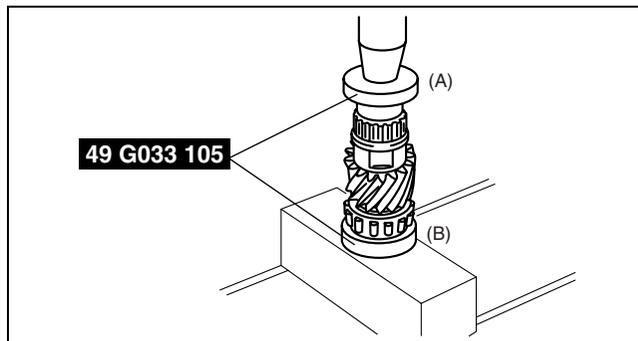


bawuuu00000225

- Using a press, assemble the ring gear to the ring gear shaft

Substitution SST

- **49 G033 105**
Outer diameter: 15— 30 mm {0.60— 1.18 in}

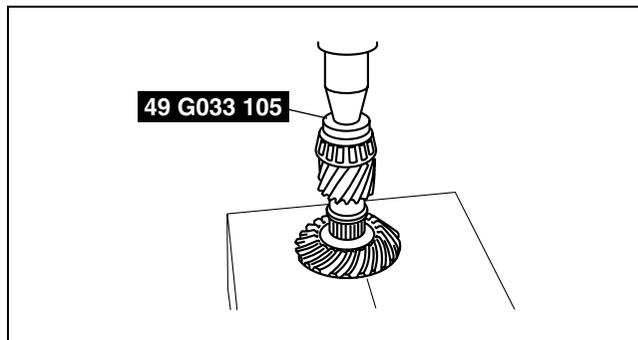


bawuuu00000226

- Using a press, assemble the ring gear side bearing (side).

Substitution SST


- **49 G033 105 (A)**
Outer diameter: 15— 30 mm {0.60— 1.18 in}
- **49 G033 105 (B)**
Outer diameter: 34— 40 mm {1.34— 1.57 in}
Plate thickness: 1 mm {0.04 in} or more

- Temporarily assemble the bearing outer races (side).

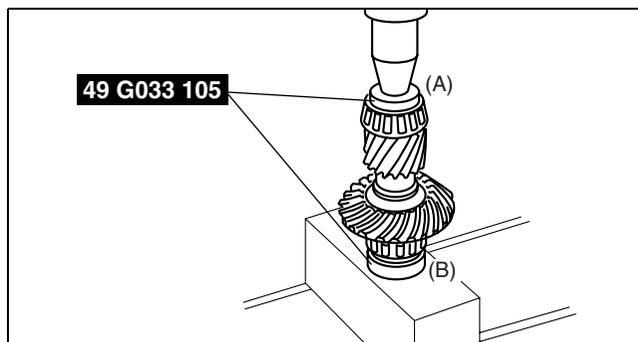

bawuuu00000227

- Place the ring gear component on the surface plate as shown in the figure, and measure the height using a vernier caliper or height gauge. This is dimension A.

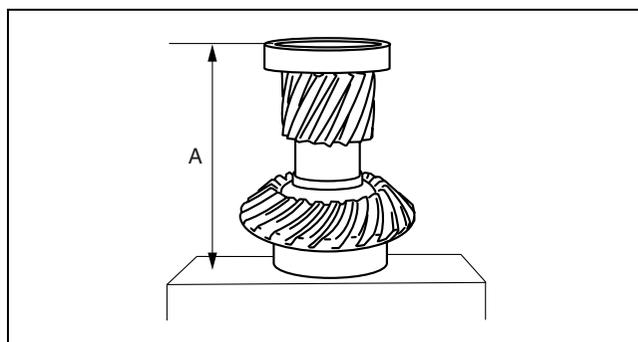


bawuuu00000228

6. Measure the width of the front carrier ring gear installation area with the spacer installed. This is dimension B.
7. The maximum and minimum total thickness C of the adjustment shims on both sides can be expressed by the following formula:

$$C = B - A - (0.01 - 0.03 \text{ mm } \{0.00039 - 0.00118 \text{ in}\})$$

8. If the total thickness of the installed adjustment shims is within the C range, use the shims as they are.
9. If the total thickness of the installed adjustment shims is not within the C range, select the appropriate number of adjustment shims from the table below and use them.

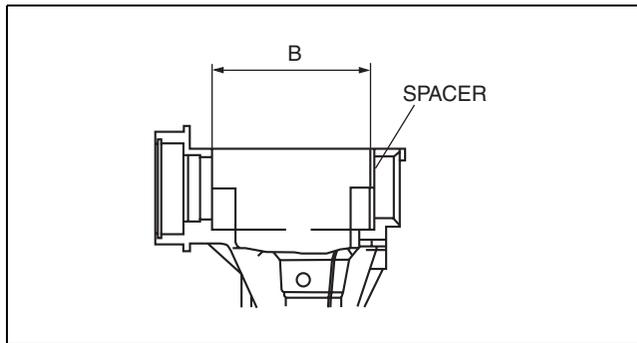

bawuuu00000229


Adjustment shim

Identification mark	Thickness (mm {in})	Identification mark	Thickness (mm {in})
350	3.50 {0.1378}	410	4.10 {0.1614}
355	3.55 {0.1398}	415	4.15 {0.1634}
360	3.60 {0.1417}	420	4.20 {0.1654}
365	3.65 {0.1437}	425	4.25 {0.1673}
370	3.70 {0.1457}	430	4.30 {0.1693}
375	3.75 {0.1476}	435	4.35 {0.1713}
380	3.80 {0.1496}	440	4.40 {0.1732}
385	3.85 {0.1516}	445	4.45 {0.1752}
390	3.90 {0.1535}	450	4.50 {0.1772}
395	3.95 {0.1555}	455	4.55 {0.1791}
400	4.00 {0.1574}	460	4.60 {0.1811}
405	4.05 {0.1594}	-	-

Note


- When reusing adjustment shims, do not mix up the left and right shims.
- Do not mix up the left and right side bearing races and spacers.

10. Install the front carrier to the **SST**.
11. Install the adjustment shim chosen for the front carrier ring gear side and spacer on opposite side.
12. Assemble the ring gear component to the front carrier.

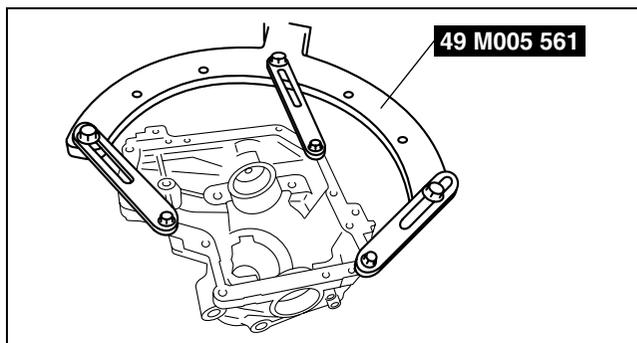

bawuuu00000230

13. Using the plastic hammer, assemble the selected adjustment shim in between the spacer and bearing race as shown in the figure.

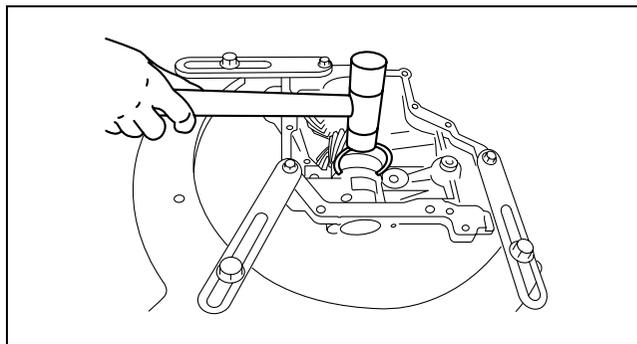

bawuuu00000231


TRANSFER

14. Align the alignment marks of the bearing caps, assemble the bearing caps, and tighten the bolts temporarily.

Caution

- **Locking compound is applied to a new ring gear lockbolt. Reuse the old ring gear lock bolt when inspecting the preload.**

15. Install the ring gear lockbolt and inspect the ring gear bearing preload.

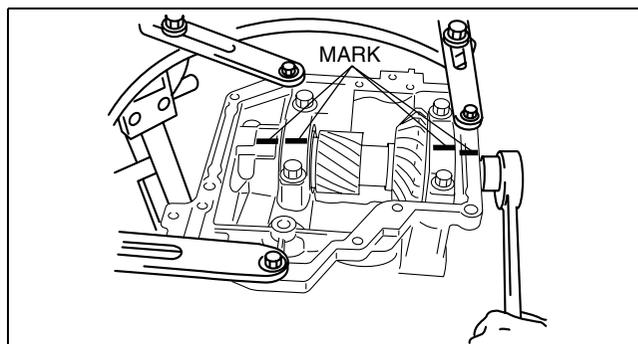

bawuua00000232

Standard ring gear bearing preload

0.6— 2.1 N·m {6.2— 21.4 kgf·cm, 5.4— 18.5 in·lbf}

- If the rotational torque is not within the specification, select the suitable adjustment shim and reinstall so that the rotational torque is within the specification.

16. Follow the disassembling procedure in Step 11 to remove the ring gear component.


Note

- Identify the left and right side of the adjustment shim for reinstallation.

17. Using the **SSTs**, assemble the bearing outer races.

Substitution SST


- **49 F027 005**
Outer diameter: 61— 61.8 mm {2.41— 2.43 in}
Plate thickness: 1 mm {0.04 in} or more
- **49 F027 007**
Outer diameter: 70— 71.8 mm {2.76— 2.82 in}
Plate thickness: 1 mm {0.04 in} or more

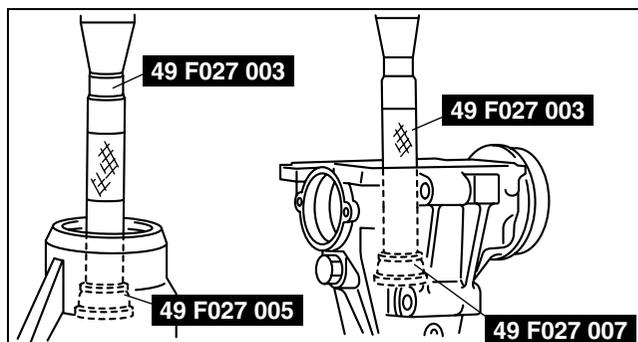

bawuua00000233


18. Using the **SSTs**, adjust the drive pinion height as follows:

- (1) Install the **SSTs** to the removed spacer and bearing.
- (2) Assemble the spacer, bearing and **SSTs**. Using an O-ring, secure the **SST**.
- (3) Assemble the bearing, **SSTs**, washer, and nut.
- (4) Tighten the nut to the **SST** to where it can still be rotated by hand.

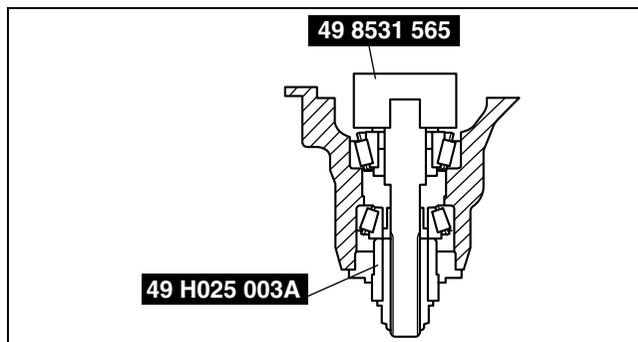


bawuua00000234

- (5) Place the **SSTs** on the plate surface and set the dial gauge to "0".

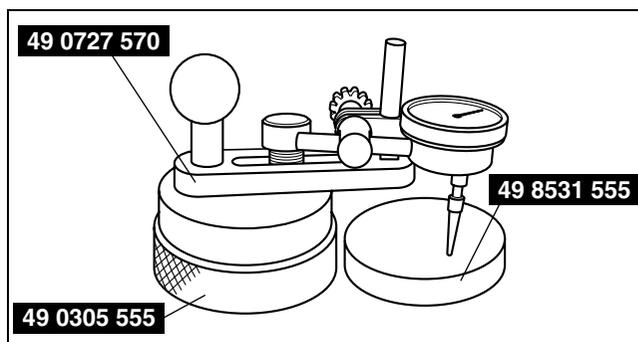

bawuua00000235

- (6) Position the **SST** (49 0727 570) on the driver pinion model.
- (7) Attach the dial gauge head to where the carrier bearing outer race (side) is installed and measure the lowest position. Also, measure the value of where the side bearing outer race (side) is installed on the opposite side.
- (8) Measure the average value between the values of both sides measured in Step 7. This value is the spacer thickness which determines the pinion height.

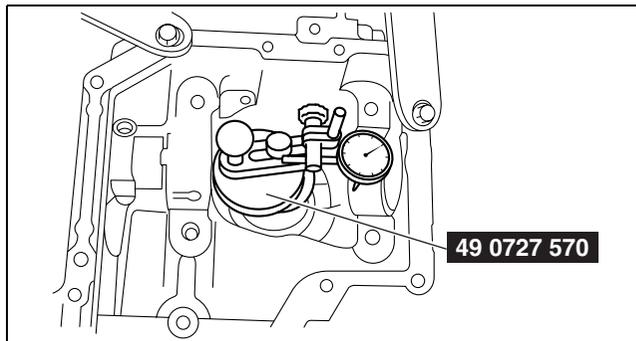

bawuuu00000236

03-16

Pinion height error factor within allowance limit
 $\pm 0.032 \text{ mm } \{ \pm 0.00126 \text{ in} \}$

Spacer

Identification mark	Thickness (mm {in})	Identification mark	Thickness (mm {in})
08	3.08 {0.1213}	29	3.29 {0.1295}
09	3.095 {0.1219}	30	3.305 {0.1301}
11	3.11 {0.1224}	32	3.32 {0.1307}
12	3.125 {0.1230}	33	3.335 {0.1313}
14	3.14 {0.1236}	35	3.35 {0.1319}
15	3.155 {0.1242}	36	3.365 {0.1325}
17	3.17 {0.1248}	38	3.38 {0.1331}
18	3.185 {0.1254}	39	3.395 {0.1335}
20	3.20 {0.1260}	41	3.41 {0.1343}
21	3.215 {0.1266}	42	3.425 {0.1348}
23	3.23 {0.1272}	44	3.44 {0.1354}
24	3.245 {0.1278}	45	3.455 {0.1360}
26	3.26 {0.1283}	47	3.47 {0.1366}
27	3.275 {0.1289}	-	-

19. Assemble the spacer selected for pinion height adjustment with the rounded off side facing the gears.
20. Using the **SST**, assemble the bearing (front) to the drive pinion gear.

Substitution SST

- **49 F401 331, 49 F401 337A**


Outer diameter: 37.2— 43.3 mm {1.47— 1.70 in}

Inner diameter: 35.2 mm {1.39 in} or more

Plate thickness: 1 mm {0.04 in} or more

Inner diameter depth: 140 mm {5.51 in} or more

21. Assemble a new distance piece to the drive pinion gear.
22. Assemble the drive pinion gear to the front carrier.
23. Install the bearing (rear), companion flange, washer, and new locknut to the drive pinion and temporarily tighten.
24. Rotate the companion flange by hand and seat the bearing.

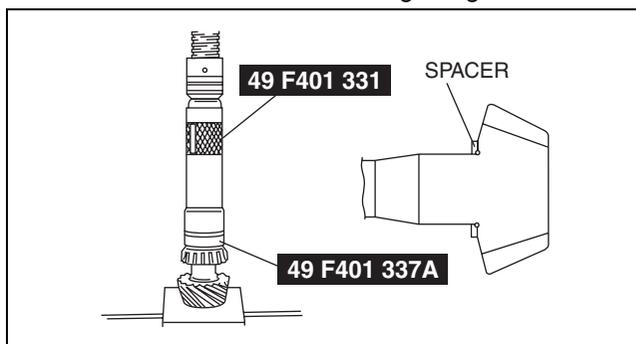

bawuuu00000237

TRANSFER


25. Using the **SST**, tighten the locknut from the lower limit of the specified tightening torque and set to the preload value. Note the tightening torque when the specified preload value is obtained.

Tightening torque

127— 284 N·m {13.0— 28.9 kgf·m, 93.7— 209.4 ft·lbf}

Drive pinion preload value

0.88— 1.37 N·m {9.0— 14.0 kgf·cm, 7.9— 12.1 in·lbf}

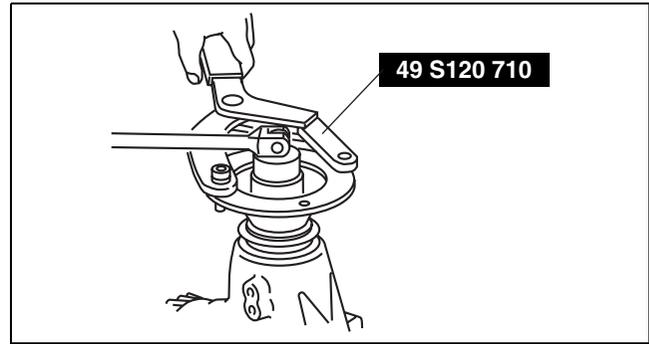

bawuua00000546

26. Remove the locknut, washer, and companion flange.
27. Apply oil to the lip area of a new oil seal.
28. Using the **SST**, assemble the oil seal.

Substitution SST

• 49 U027 003


Outer diameter: 66— 70.8 mm {2.60— 2.78 in}

Inner diameter: 53.7 mm {2.12 in} or more

Plate thickness: 1 mm {0.04 in} or more

Inner diameter depth: 50 mm {1.97 in} or more

29. Apply the grease to the bearing contact surface of the companion flange.
30. Assemble the companion flange.

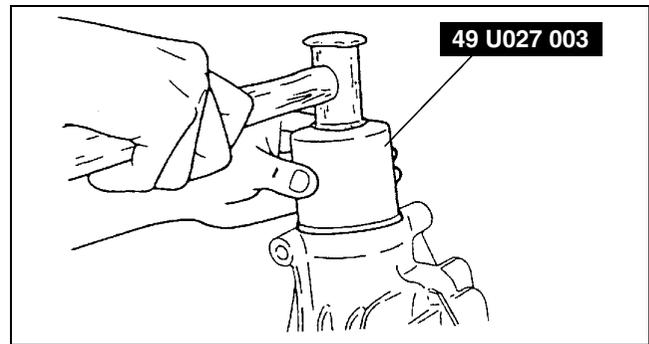


bawuua00000538

31. Using the **SST**, tighten the new locknut to the tightening torque noted when the preload was adjusted.
32. Reverify the preload.

Drive pinion preload value

0.88— 1.37 N·m {9.0— 14.0 kgf·cm, 7.9— 12.1 in·lbf}

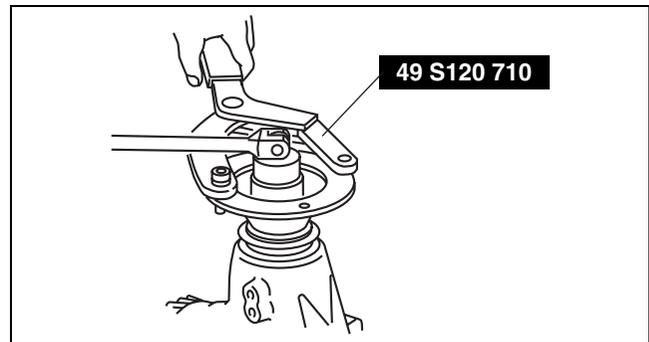

bawuua00000546

33. Assemble the ring gear component following the procedure in Step 11 to 14.
34. Set the dial gauge with the measuring probe attached perpendicularly to the end of one of the ring gear teeth.
35. Secure the drive pinion and measure the backlash from when the ring gear is moved.


Standard drive pinion backlash

0.09— 0.11 mm {0.0035— 0.0043 in}

Caution

- Perform the backlash measurement on the ring gear circumference at four points.

36. If the backlash is not within the specified range above, adjust it by sliding the ring gear in the shaft direction.

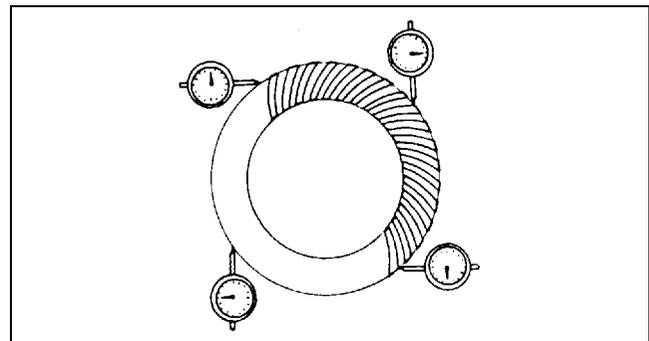

bawuua00000539

Note

- Slide the ring gear in the shaft direction by replacing the adjustment shim. If the right side adjustment shim is replaced with one that is 0.05 mm {0.002 in} thicker, the left side shim must be replaced with one that is 0.05 mm {0.002 in} thinner.


37. Tighten the bearing cap bolts.

Tightening torque

63— 93 N·m {6.5— 9.4 kgf·m, 46.4— 68.5 ft·lbf}


38. Perform the drive pinion and ring gear tooth contact inspection.

- (1) Apply tooth marking compound evenly to both surfaces of the ring gear.
- (2) Rotate the ring gear back and forth several times.
- (3) Inspect for gear tooth contact at four points on the ring gear circumference and verify that the gear tooth contact indicated by the tooth marking compound is as indicated in the figure.
 - If the tooth contact points are normal, wipe off the marking compound.
 - If the tooth contact points are not normal, adjust the pinion height, then adjust the backlash.
- (4) If toe and flank contact is indicated as shown in the figure, replace the drive pinion spacer with a thinner one to maintain the drive pinion further away.

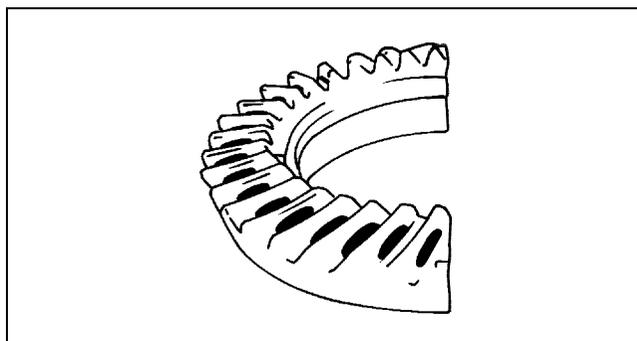

bawuuu00000540

03-16

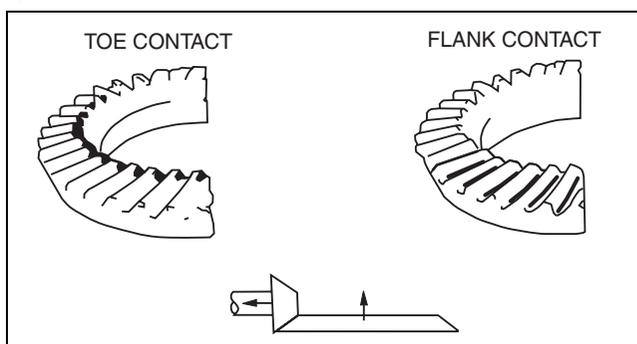


bawuuu00000242

- (5) If heal and face contact is indicated as shown in the figure, replace the drive pinion spacer with a thicker one to bring the drive pinion closer.

39. Using a suitable wrench, secure the ring gear shaft and tighten the new ring gear lockbolt to the specified tightening torque.

Caution

- **Before installing the new ring gear lockbolt, remove the old thread-locking compound remaining on the thread of the ring gear shaft.**

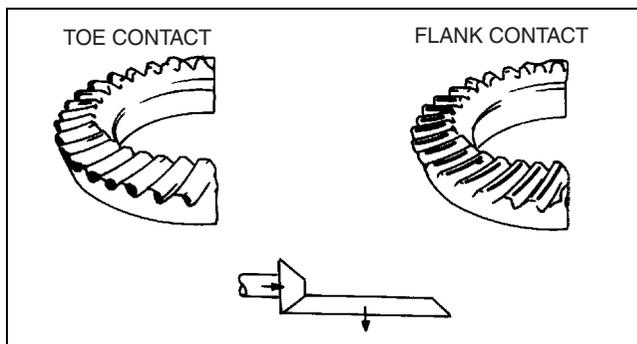


bawuuu00000243

Tightening torque

150— 200 N·m {15.3— 20.3 kgf·m, 110.7— 147.4 ft·lbf}

40. Align the cast hexagon of the oil pump shaft and assemble the oil pump and oil pump shaft.

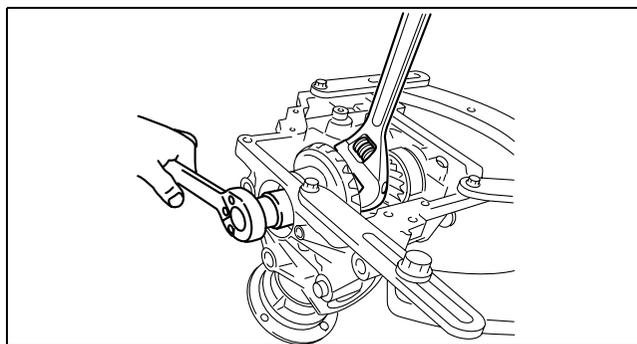

bawuuu00000244

Transfer Component Assembly Procedure

Note

- Before applying silicone sealant, completely clean off any old silicone sealant and remove any oil or grease.
- After applying silicone sealant, install the drive gear case within 10 min.
- After connecting the sealing area, leave it for 30 min. or more, then add transfer oil.

1. Clean the alignment surface of the front carrier and drive gear case, and lightly apply silicone sealant.
2. Assemble the transfer component.

Tightening torque

19— 27 N·m {2.0— 2.7 kgf·m, 14.1— 19.9 ft·lbf}

3. Install the oil cooler.
4. Tighten the oil cooler installation bolt with a O-ring.

Tightening torque

23.5— 29.4 N·m {2.4— 2.9 kgf·m, 17.4— 21.6 ft·lbf}

5. Tighten the drain plug with a new washer.

Tightening torque

39.2— 58.8 N·m {4.0— 5.9 kgf·m, 29.0— 43.3 ft·lbf}

03-50 TECHNICAL DATA

DRIVELINE/AXLE TECHNICAL DATA . . 03-50-1

DRIVELINE/AXLE TECHNICAL DATA

id035000800100

03-50

Item	Specification
Standard drive gear bearing preload	0.6—2.1 N·m {6.2—21.4 kgf·cm, 5.4—18.5 in·lbf}
Standard ring gear bearing preload	0.6—2.1 N·m {6.2—21.4 kgf·cm, 5.4—18.5 in·lbf}
Pinion height error factor within allowance limit	± 0.032 mm {± 0.00126 in}
Drive pinion preload value	0.88—1.37 N·m {9.0—14.0 kgf·cm, 7.9—12.1 in·lbf}
Standard drive pinion backlash	0.09—0.11 mm {0.0035—0.0043 in}















03-60 SERVICE TOOLS

SERVICE TOOLS 03-60-1










SERVICE TOOLS

id036000500100

03-60
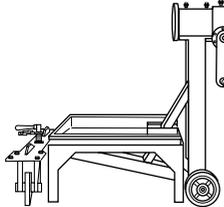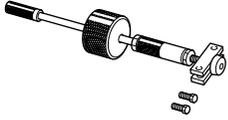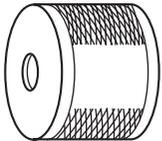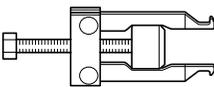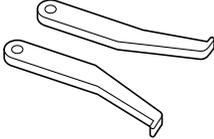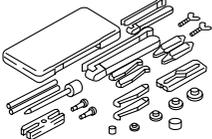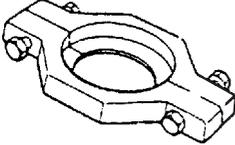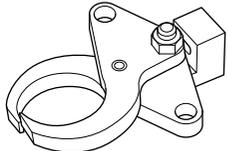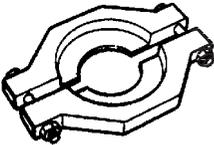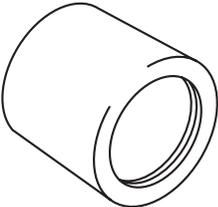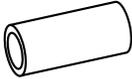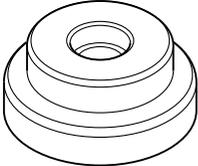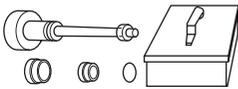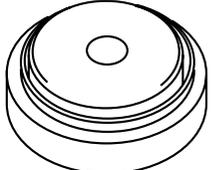
<p>49 0107 680A Engine stand</p> 	<p>49 M005 561 Differential carrier hanger</p> 	<p>49 W032 201 Body</p> 
<p>49 B025 001 (Dust Seal Installer) Body</p> 	<p>49 T032 316 Shaft</p> 	<p>49 T032 317 Weight</p> 
<p>49 S019 005 Oil seal puller</p> 	<p>49 W032 202 Attachment</p> 	<p>49 0839 425C Bearing puller set</p> 
<p>49 0636 145 Water pump pulley boss puller</p> 	<p>49 S120 710 Coupling flange holder</p> 	<p>49 L027 004 Gear case remover</p> 
<p>49 H027 002 Bearing remover</p> 	<p>49 T034 201A Dust boot installer</p> 	<p>49 T032 302 Bearing installer</p> 
<p>49 G033 105 Attachment</p> 	<p>49 F027 003 Handle</p> 	<p>49 F027 005 Attachment for 62</p> 
<p>49 F027 007 Attachment for 72</p> 	<p>49 8531 565 Drive pinion model</p> 	<p>49 L019 301 Installer</p> 

SERVICE TOOLS
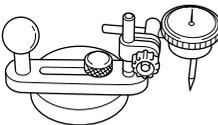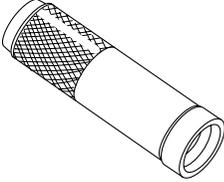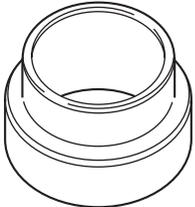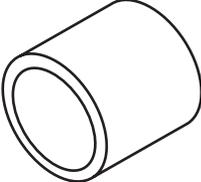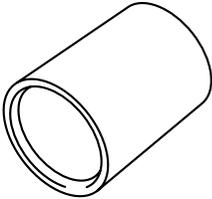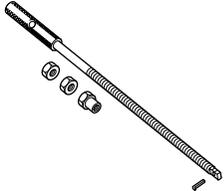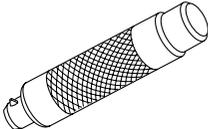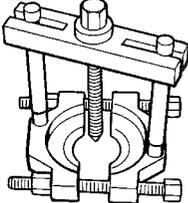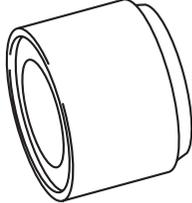
<p>49 H025 003A</p> <p>Bearing installer</p> 	<p>49 0727 570</p> <p>Pinion height gauge body</p> 	<p>49 0305 555</p> <p>Block Gauge (20mm)</p> 
<p>49 8531 555</p> <p>Block Gauge (11mm)</p> 	<p>49 F401 331</p> <p>Body</p> 	<p>49 F401 337A</p> <p>Attachment C</p> 
<p>49 U027 003</p> <p>Oil seal installer</p> 	<p>49 H028 202</p> <p>Block L</p> 	<p>49 L011 201</p> <p>Shaft</p> 
<p>49 G030 797</p> <p>Handle</p> 	<p>49 0710 520</p> <p>Universal bearing puller</p> 	<p>49 S019 006</p> <p>Oil seal installer</p> 

TRANSMISSION/TRANSAXLE

05

SECTION

AUTOMATIC TRANSAXLE 05-17
TECHNICAL DATA 05-50

SERVICE TOOLS 05-60

05-17

05-17 AUTOMATIC TRANSAXLE

AUTOMATIC TRANSAXLE		
DISASSEMBLY	05-17-2	
Precaution	05-17-2	
Disassembly	05-17-3	
Disassembly procedure	05-17-9	
OIL PUMP		
DISASSEMBLY/ASSEMBLY	05-17-26	
Components	05-17-26	
Disassembly Procedure	05-17-27	
Assembly Procedure	05-17-28	
B1 BRAKE PISTON		
DISASSEMBLY/ASSEMBLY	05-17-29	
Components	05-17-29	
Disassembly Procedure	05-17-30	
Assembly Procedure	05-17-30	
C3 CLUTCH COMPONENT		
DISASSEMBLY	05-17-31	
Components	05-17-31	
Disassembly Procedure	05-17-32	
C3 CLUTCH INSPECTION	05-17-33	
C3 CLUTCH COMPONENT		
ASSEMBLY	05-17-34	
Components	05-17-34	
Assembly Procedure	05-17-35	
FRONT PLANETARY GEAR		
COMPONENT INPUT SHAFT		
DISASSEMBLY/ASSEMBLY	05-17-37	
Components	05-17-37	
Disassembly Procedure	05-17-38	
Assembly Procedure	05-17-39	
C1 CLUTCH COMPONENT		
DISASSEMBLY	05-17-42	
Components	05-17-42	
Disassembly Procedure	05-17-43	
C1 CLUTCH INSPECTION	05-17-44	
C1 CLUTCH COMPONENT		
ASSEMBLY	05-17-45	
Components	05-17-45	
Assembly Procedure	05-17-46	
COUNTER DRIVE GEAR		
DISASSEMBLY/ASSEMBLY	05-17-49	
Components	05-17-49	
Disassembly Procedure	05-17-50	
Assembly Procedure	05-17-52	
ONE-WAY CLUTCH COMPONENT		
INSPECTION	05-17-55	
REAR PLANETARY GEAR COMPONENT		
AND ONE-WAY CLUTCH COMPONENT		
DISASSEMBLY	05-17-56	
Components	05-17-56	
Disassembly Procedure	05-17-56	
REAR PLANETARY GEAR		
INSPECTION	05-17-57	
REAR PLANETARY GEAR COMPONENT		
AND ONE-WAY CLUTCH COMPONENT		
ASSEMBLY	05-17-58	
Components	05-17-58	
Assembly Procedure	05-17-59	
C2 CLUTCH COMPONENT		
DISASSEMBLY	05-17-60	
Components	05-17-60	
Disassembly Procedure	05-17-61	
C2 CLUTCH INSPECTION	05-17-63	
C2 CLUTCH COMPONENT		
ASSEMBLY	05-17-64	
Components	05-17-64	
Assembly Procedure	05-17-65	
TRANSAXLE CASE AND B2 BRAKE		
DISASSEMBLY/ASSEMBLY	05-17-68	
Low and Reverse Brake Piston		
Disassembly Note	05-17-69	
Low and Reverse Brake Piston		
Assembly Note	05-17-70	
Low and Reverse Brake Return Spring		
Assembly Note	05-17-70	
TRANSAXLE CASE AND B2 BRAKE		
INSPECTION	05-17-71	
CONTROL VALVE BODY		
DISASSEMBLY/ASSEMBLY	05-17-72	
Components	05-17-72	
Disassembly Procedure	05-17-73	
Assembly Procedure	05-17-74	
AUTOMATIC TRANSAXLE		
ASSEMBLY	05-17-75	
Assembly	05-17-75	
Components	05-17-77	
Assembly Procedure	05-17-83	
AUTOMATIC TRANSAXLE		
INSPECTION	05-17-104	
B2 Brake Inspection	05-17-104	


Precaution

The following are precautions that must be followed when performing removal/installation.

1. Handle electronic parts with care
 - Do not pull the wiring harness forcibly when disconnecting the connector. Unlock the lock first and pull the connector.
 - When connecting the connector, verify to insert it until it is properly locked. (Verify that a click sound is heard.)
 - Do not shock electronic parts. Replace with new parts if they have been dropped or subjected to shock.
2. Prevent foreign matter from penetrating
 - Be sure to remove foreign matter such as dust and sand from the automatic transaxle before removing parts.
 - Protect removed parts from dust with an object such as a vinyl sheet.
 - Do not use cotton work gloves or shop rags as frayed strings might get caught in the unit. Thus work with bare hands or use vinyl gloves.
3. Prevent scratching
 - Do not pry with a screwdriver forcibly. Slightly hit the case with a plastic hammer when separating component cases at seams.
 - Do not pull the valve forcibly.
 - Be careful not to get the wire harness caught between parts during installation.
4. Prevent incorrect installation and lack of or missing parts
 - Be careful not to install parts incorrectly or lose parts since there are similar types of O-rings, snap rings, bearings and races. Take great care for straightening parts and checking installation direction.
 - Be careful not to drop small parts such as check balls or lose them during installation.
5. Wash parts and apply oil
 - Wash each part before installing and dry using compressed air, and then apply the specified ATF type JWS3309.
 - Soak disks in ATF type JWS3309 before installing. In particular, soak new disks for **2 h or more** so that the oil seeps into the lining.
 - If the thrust bearing or race falls during installation, use a small amount of yellow petrolatum grease.
 - Apply ATF type JWS3309 to contact and rotating surfaces.
 - Do not apply oil or drive the vehicle immediately after installing a part applied with sealant. Leave it for one hour or more.
 - Do not wash aluminum parts or rubber parts with alkaline chemicals.
 - Do not wash the rubber parts with white gasoline.
6. Handling ATF with care
 - If you spill ATF on the floor, wipe it off immediately, as it is quite slippery and dangerous.
 - Be sure to use JWS3309 type ATF.

AUTOMATIC TRANSAXLE

Disassembly Components

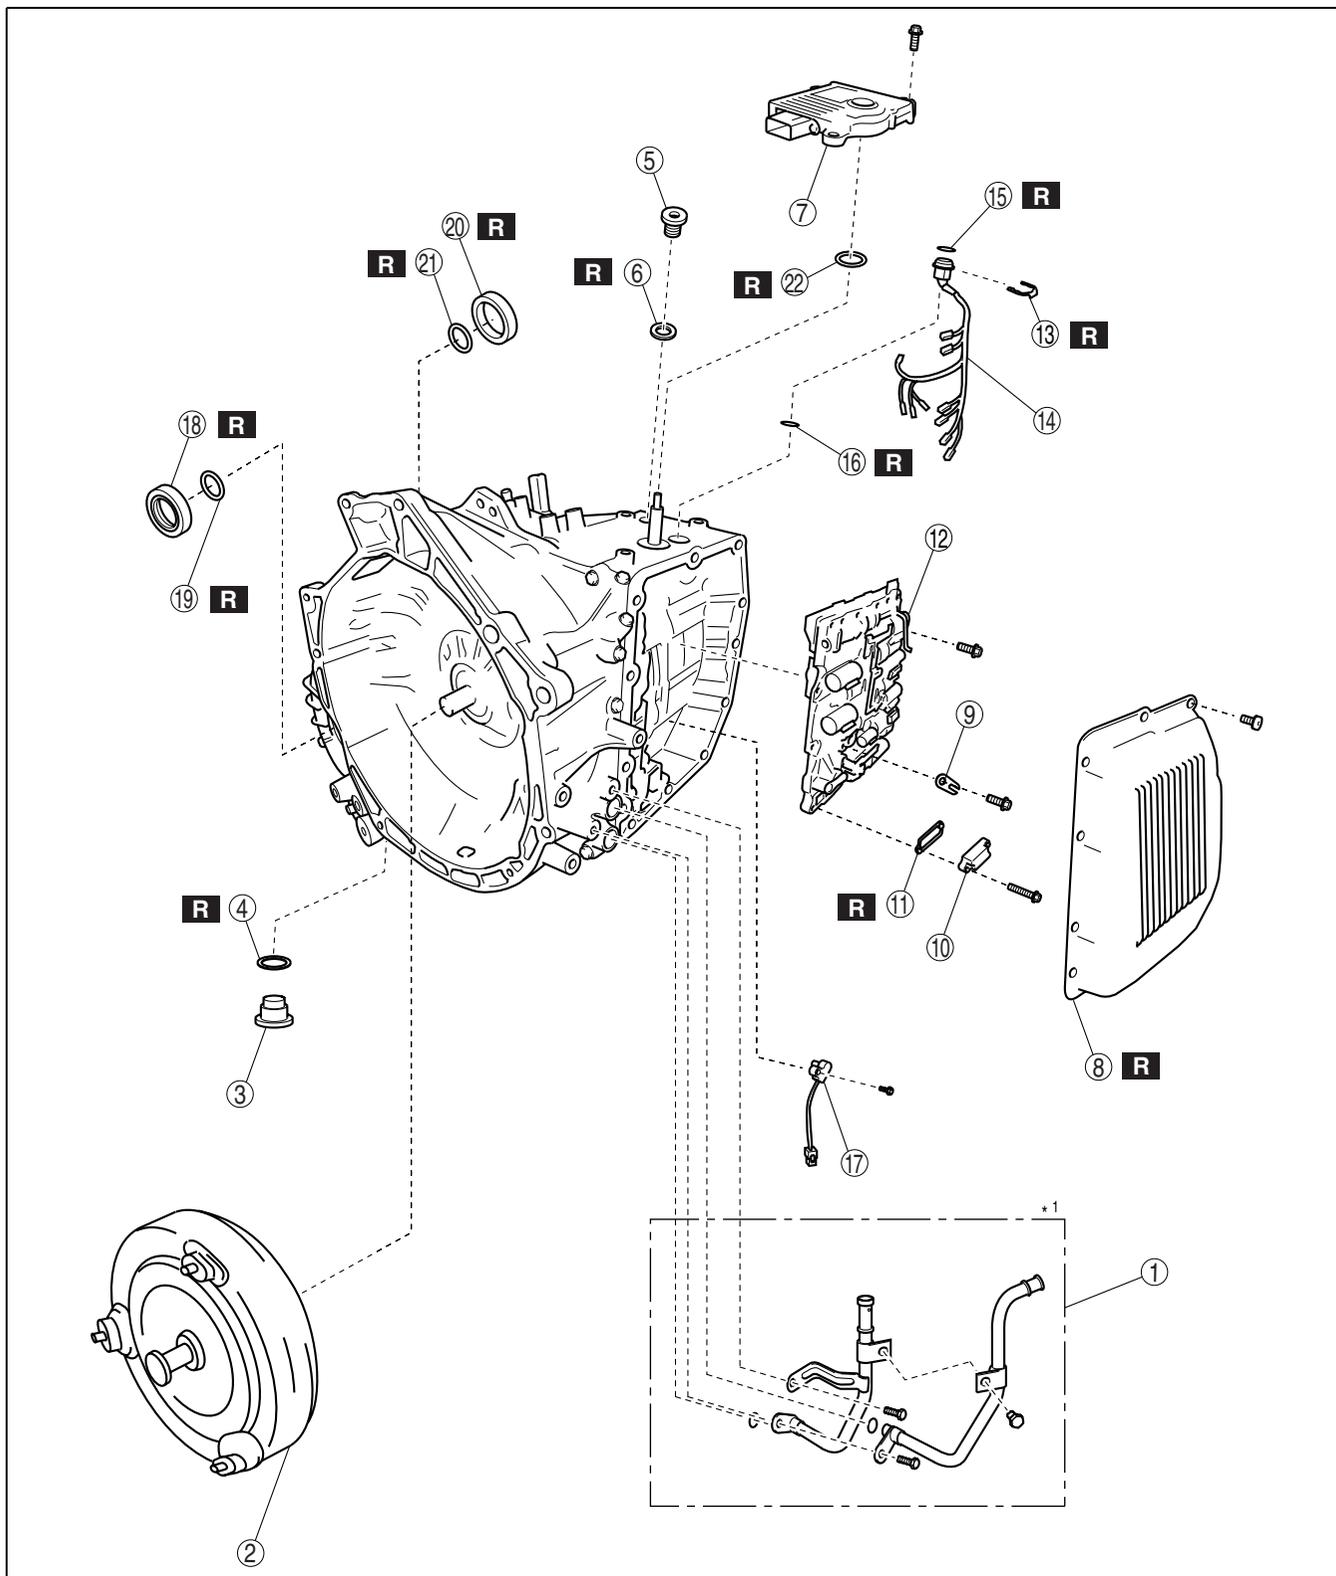

05-17

bawuuu00000279

1	Oil pipe and O-ring
2	Torque converter
3	Drain plug
4	Gasket
5	Filler plug
6	O-ring

7	TCM
8	Control valve body cover
9	Lock plate
10	Suction cover
11	Gasket
12	Control valve body component

AUTOMATIC TRANSAXLE


13	Coupler component lock plate
14	Coupler component
15	O-ring
16	Gasket
17	Input/turbine speed sensor

18	Oil seal (converter housing side)
19	O-ring (converter housing side) (2WD)
20	Oil seal (transaxle case side)
21	O-ring (transaxle case side)
22	Oil seal (manual shaft)

*1 : The figure shows Mazda6 specification.

AUTOMATIC TRANSAXLE

05-17

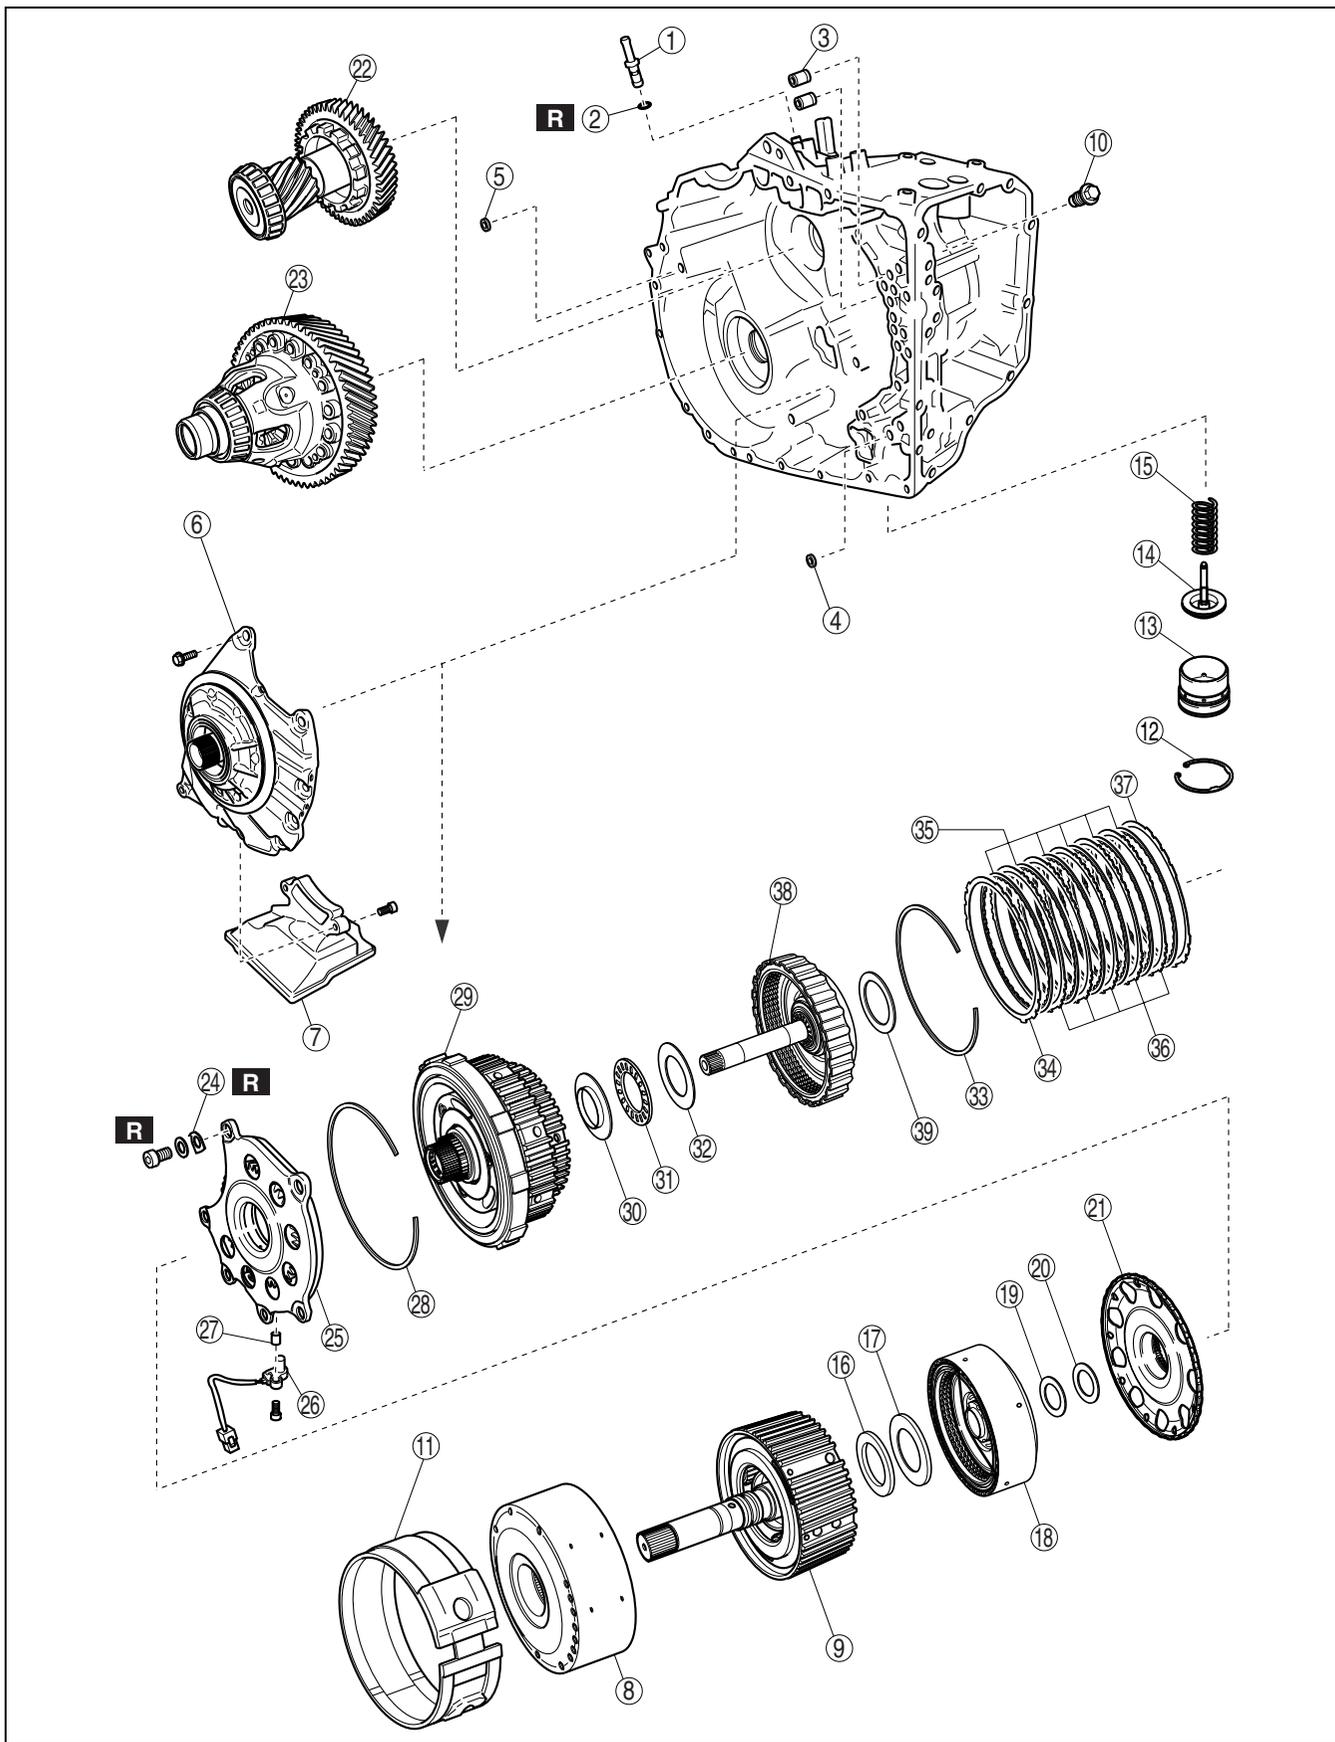

bawuuu00000280

1	Breather pipe
2	O-ring
3	Transaxle case gasket

4	Gasket
5	Gasket
6	Oil Pump component


AUTOMATIC TRANSAXLE

7	Oil strainer
8	C3 clutch component
9	Front planetary gear component and input shaft
10	Brake band anchor bolt
11	B1 brake band
12	Snap ring
13	Brake piston cover
14	B1 brake piston
15	Piston return spring
16	Thrust bearing
17	Bearing race
18	C1 clutch component
19	Thrust bearing
20	Bearing race
21	Sun gear input drum
22	Counter gear component
23	Differential component

24	Lock washer
25	Counter drive gear
26	Vehicle speed sensor (VSS)
27	Spacer
28	Snap Ring
29	Rear planetary gear component and one-way clutch component
30	Bearing race
31	Thrust bearing
32	Bearing race
33	Snap ring
34	Retaining plate
35	Drive plate
36	Driven plate
37	Retaining plate
38	C2 clutch component
39	Thrust bearing

AUTOMATIC TRANSAXLE

05-17



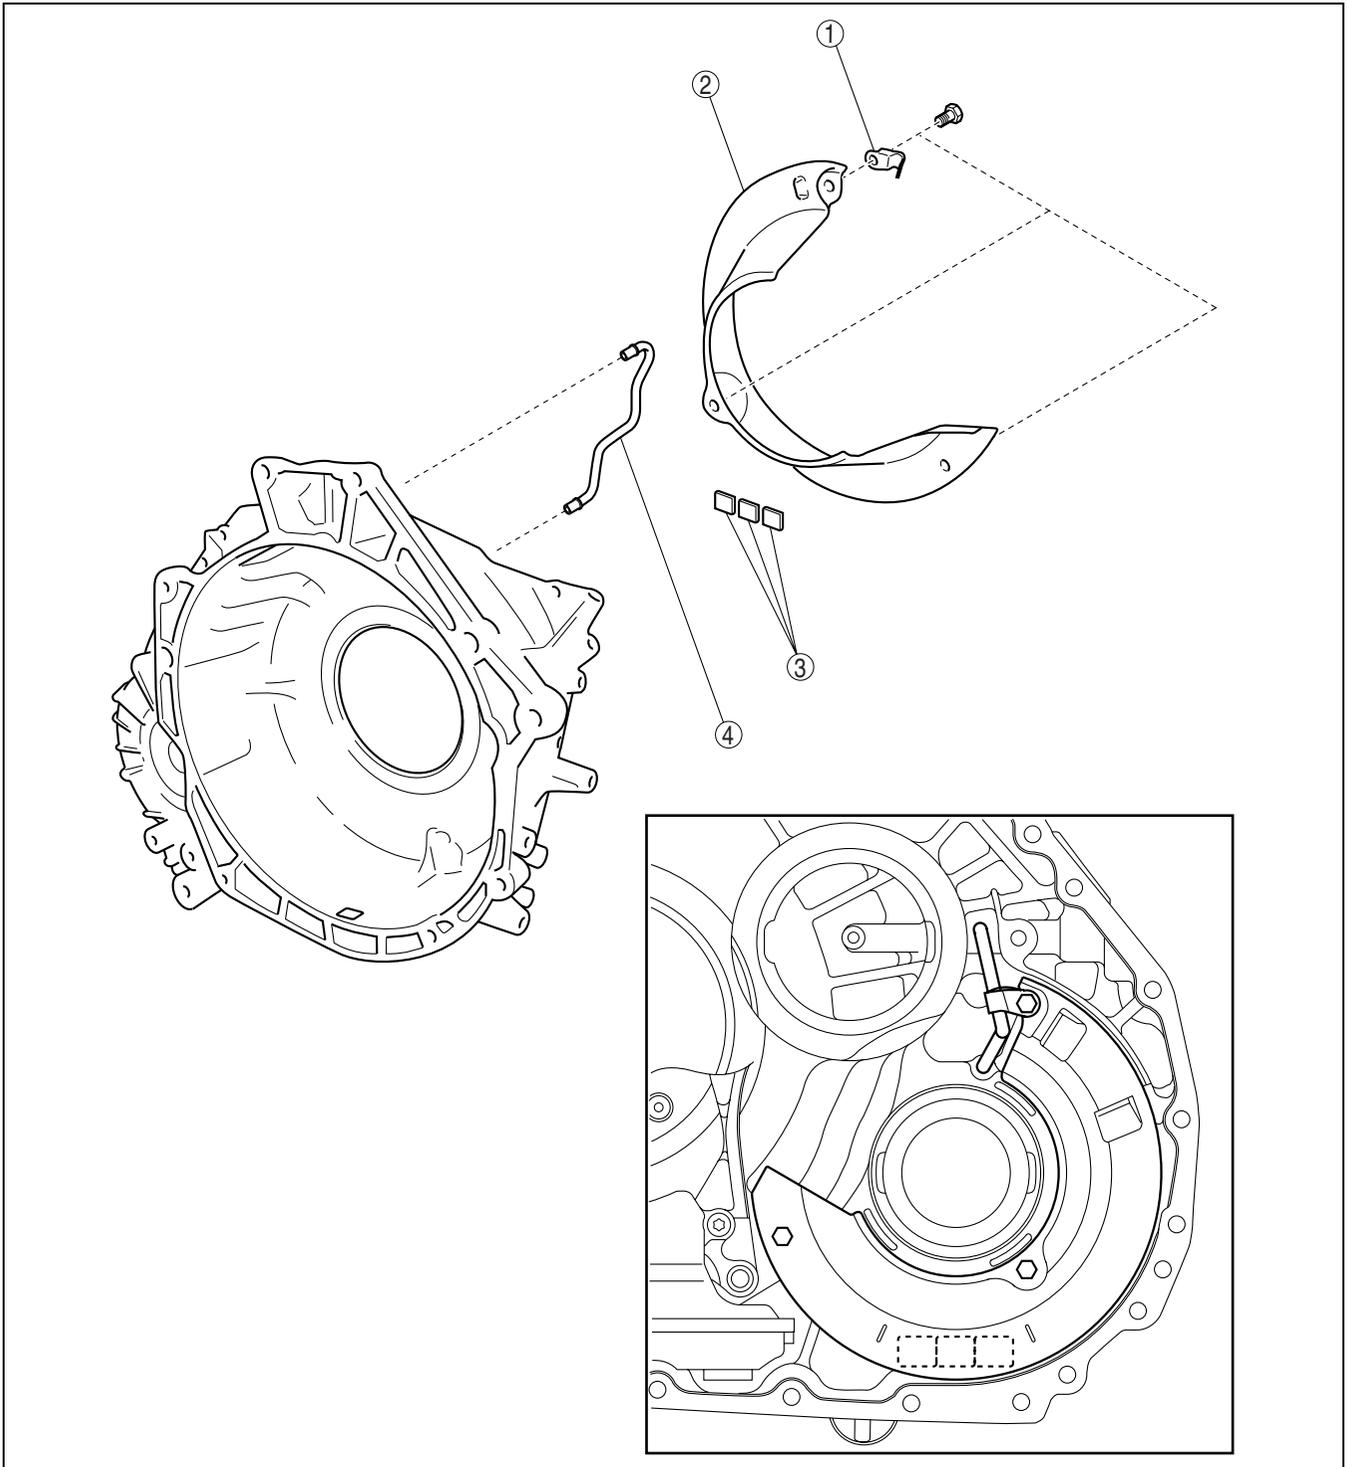


bawuuu00000281

1	Tube clamp
2	Oil reservoir lock plate

3	Magnet
4	Oil pipe

AUTOMATIC TRANSAXLE

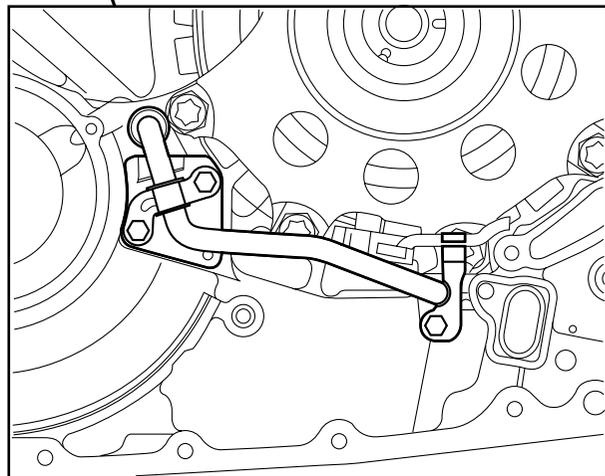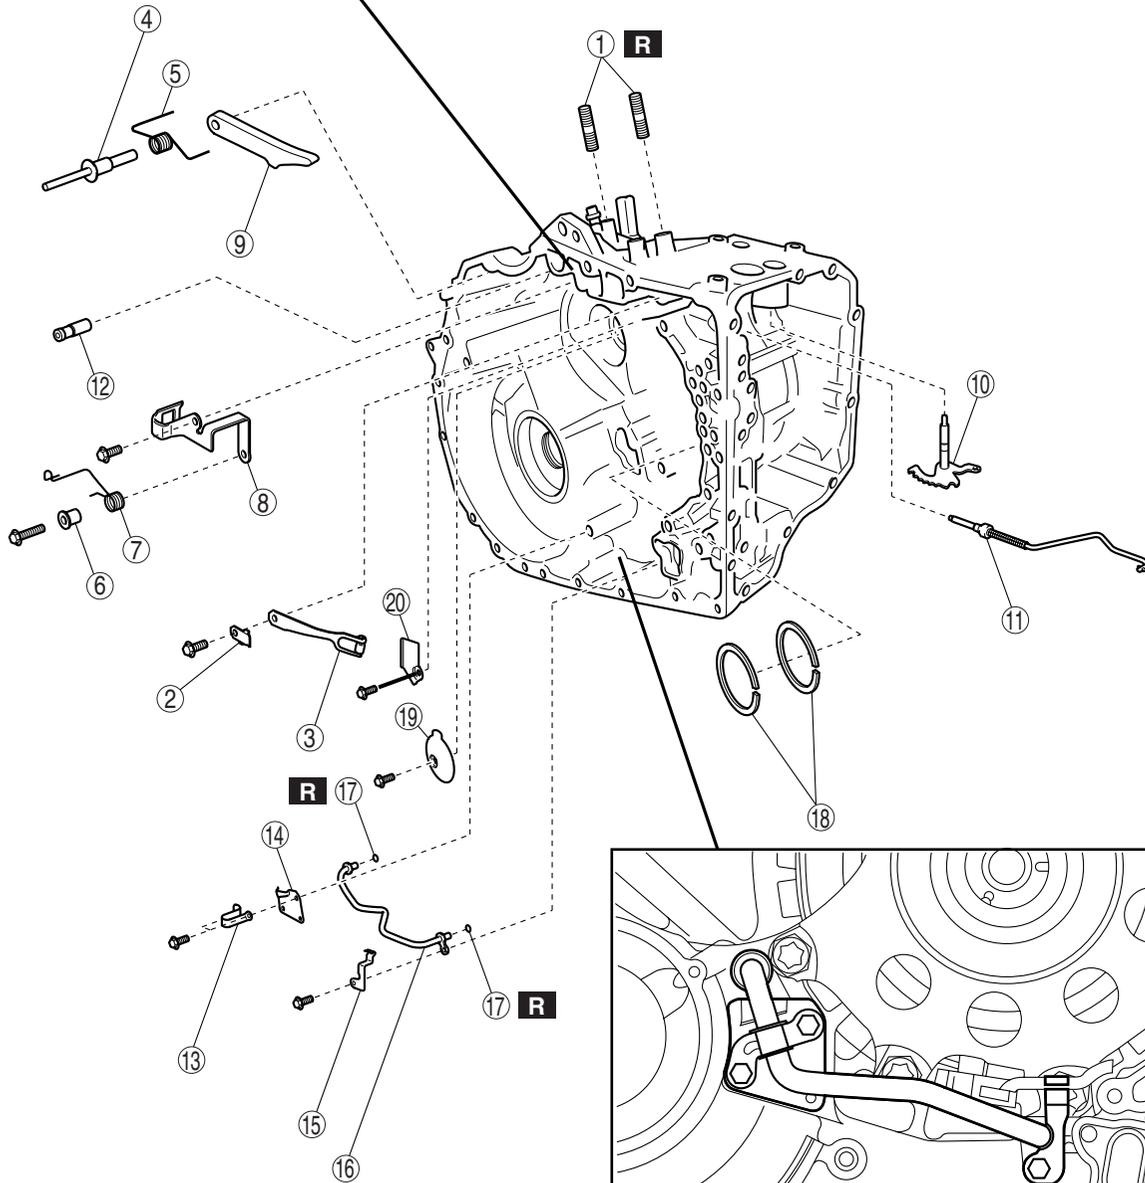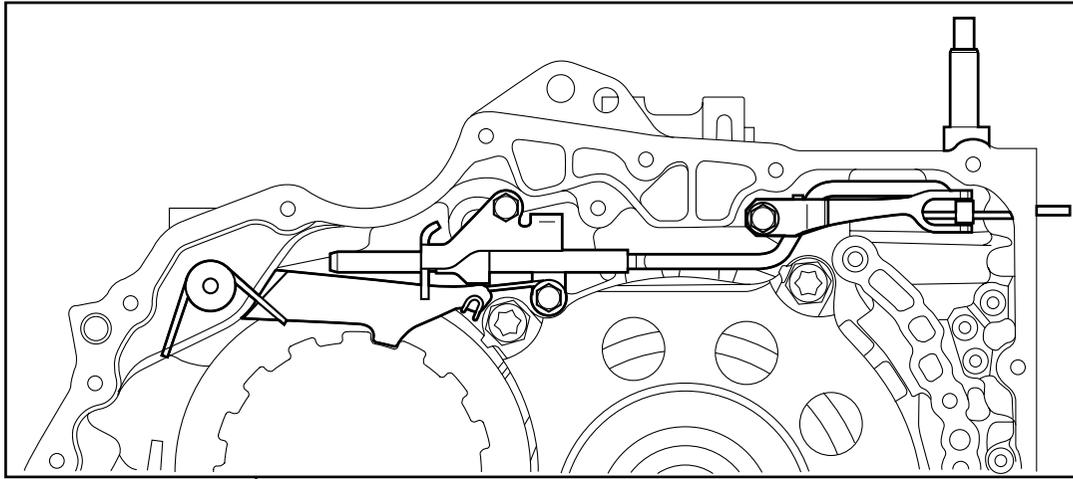

bawua00000282

AUTOMATIC TRANSAXLE

1	Stud bolt
2	Detent spring cover
3	Detent spring
4	Parking pawl shaft
5	Pawl return spring
6	Spring guide sleeve
7	Torsion spring
8	Parking pawl bracket
9	Parking pawl
10	Manual valve lever

11	Parking rod
12	Parking pin
13	Pipe clamp
14	Transaxle case No.1 plate
15	Wiring harness clip
16	Oil cooler outlet tube
17	O-ring
18	Seal ring
19	Transaxle case plate No.2
20	Transaxle case plate No.3

05-17


Disassembly procedure

1. Remove the oil pipes and O-rings. (Refer to Workshop Manual.)

Caution

- Do not damage the oil seal.
- Do not drop the torque converter.

2. Remove the torque converter.

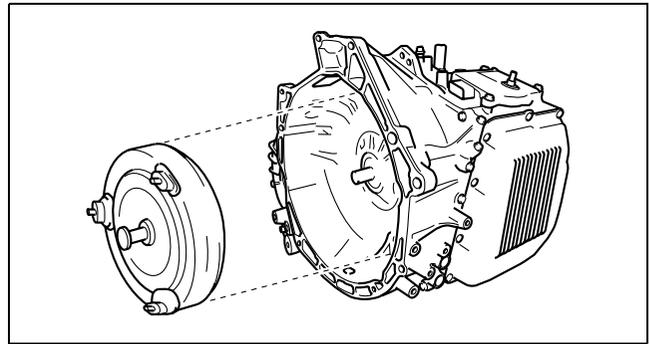


bawuu00000283

3. Remove the drain plug and gasket.
4. Drain the ATF.

Caution


- Do not repair the threads using a tap or other tools.

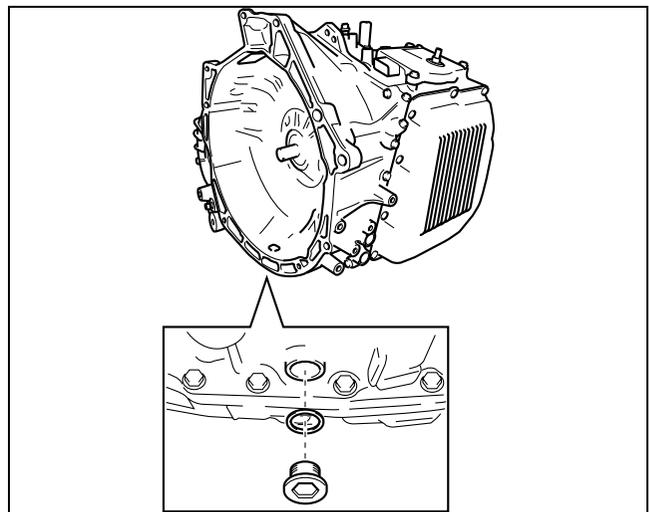

bawuu00000284

AUTOMATIC TRANSAXLE


5. Remove the stud bolts.

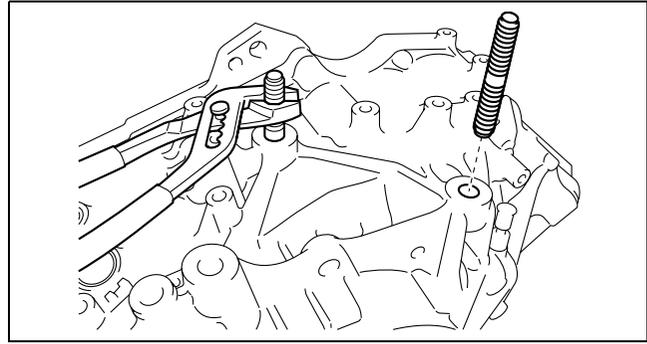

bawuua00000285


Caution

- Do not touch the terminals.

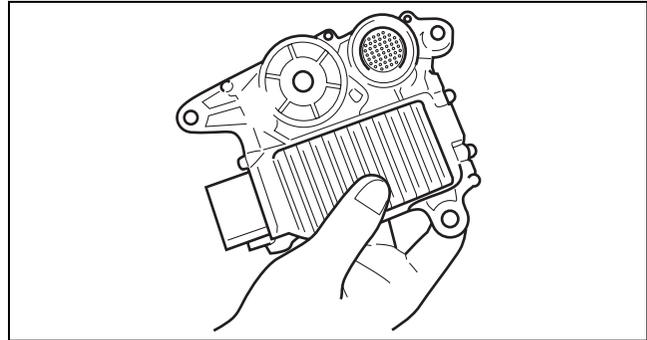

bawuua00000286

6. Remove the TCM.

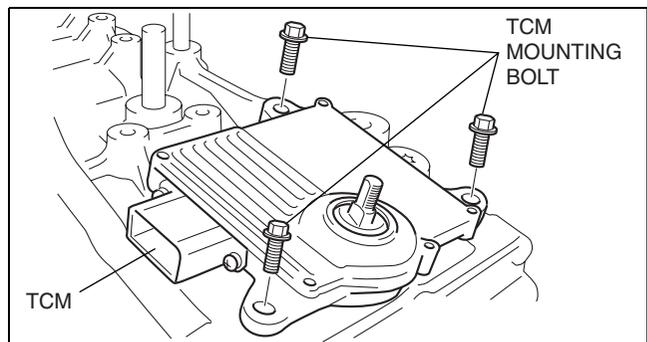


bawuua00000287

7. Set the SST as shown in the figure.

Caution


- When installing the SST to the transaxle, use bolts (M12×1.25) with a thread length of 90 mm {3.54 in}.

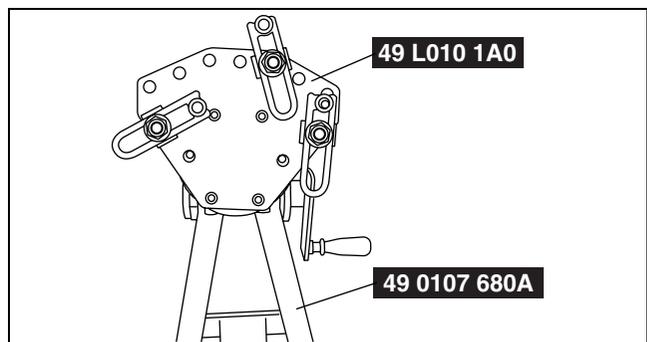

bawuua00000288

AUTOMATIC TRANSAXLE

8. Install the **SST** to the position where the transaxle stud bolts were removed.

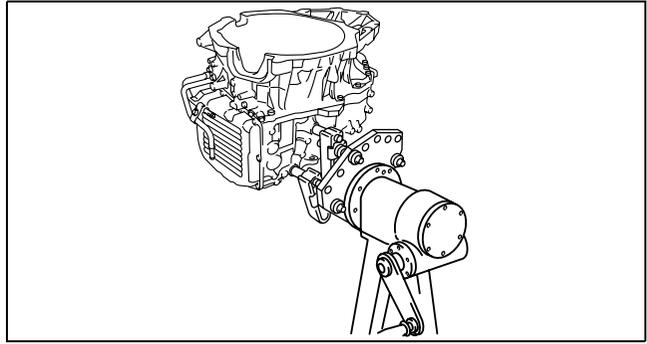


bawuuu00000289

05-17

9. Remove the control valve body cover installation bolt.

Caution

- Do not damage the fitting surface of the transaxle case and the control valve body cover.
- Do not deform the control valve body cover.

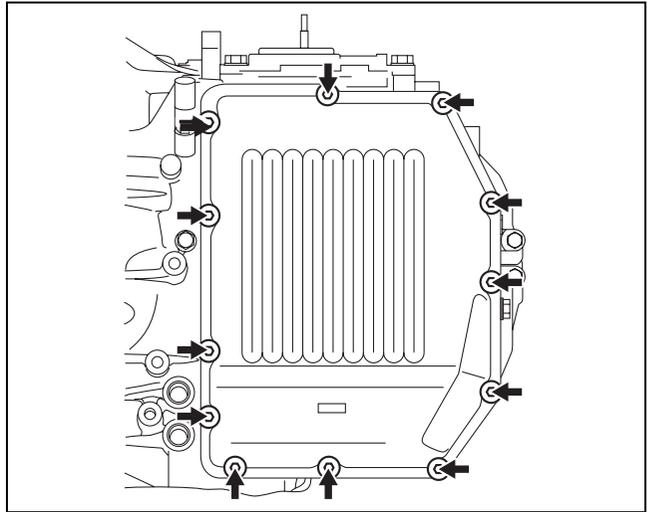

bawuuu00000290


10. Using a plastic hammer, tap the control valve body cover to remove it.

Caution

- Be careful not to damage the solenoid valves and connectors.
- Do not pull the wiring harnesses when removing the connector.


Note

- Disconnect the solenoid connector according to the following procedure:

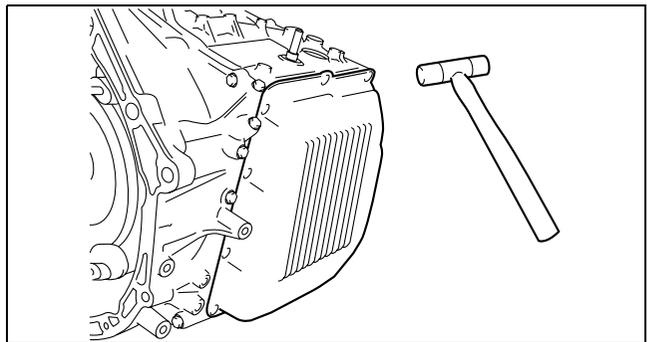

bawuuu00000291

- (1) Insert a precision screwdriver from the backside into the connector as shown in the figure.

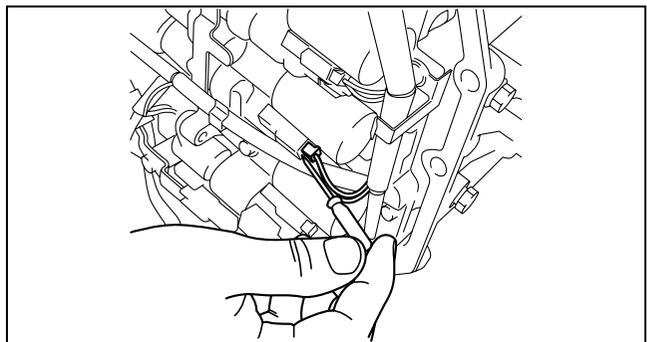


bawuuu00000292

AUTOMATIC TRANSAXLE

- (2) Pry the screwdriver in the direction of the arrow and disconnect the connector.


Caution

- Do not damage the solenoid valves and connectors with the screwdriver.
- When disconnecting connectors, grasp the connectors, not the wiring harnesses. Otherwise, the wiring harnesses may be pulled out of the connector causing poor contact.

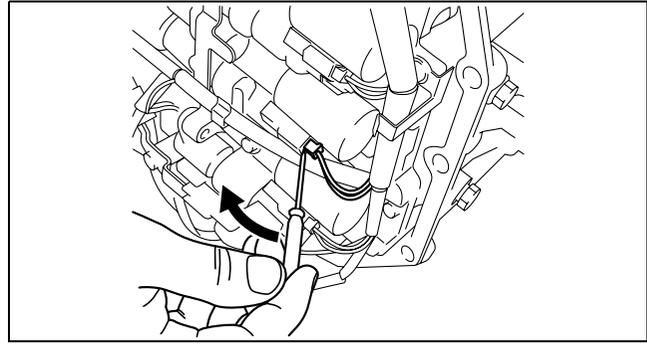

bawuua00000293

11. Disconnect the solenoid connectors, VSS connector and the input/turbine speed sensor connector.
12. Disconnect the coupler component from the clamp.

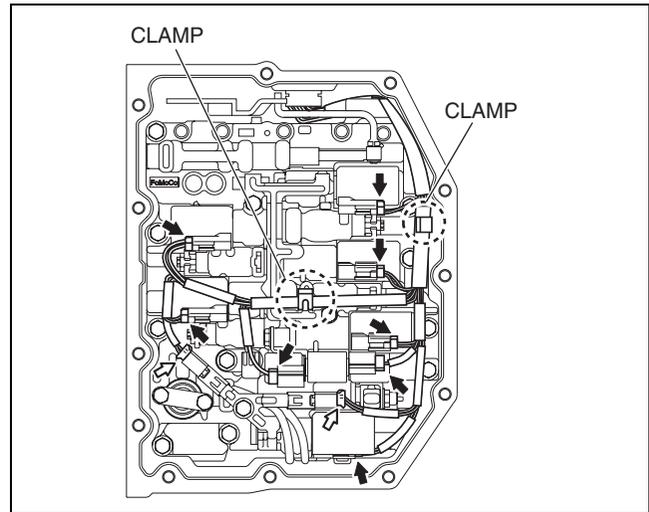


bawuua00000294

13. Remove the lock plate, and pull out the TFT sensor from the control valve body.
14. Remove the O-ring from the TFT sensor.


Note

- Be sure to secure the coupler component with tape so that it will not interfere with the control valve body component.

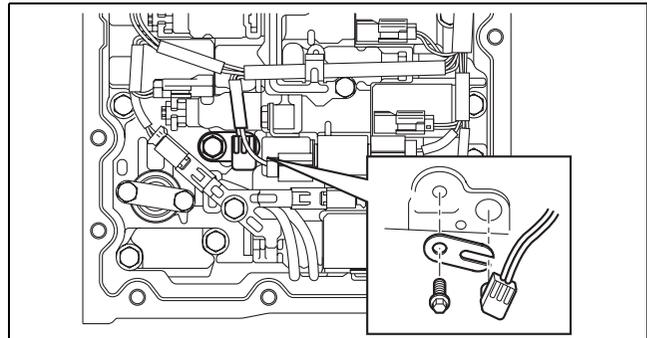

bawuua00000295


15. Fix the coupler component with tape to the transaxle case as shown in the figure.

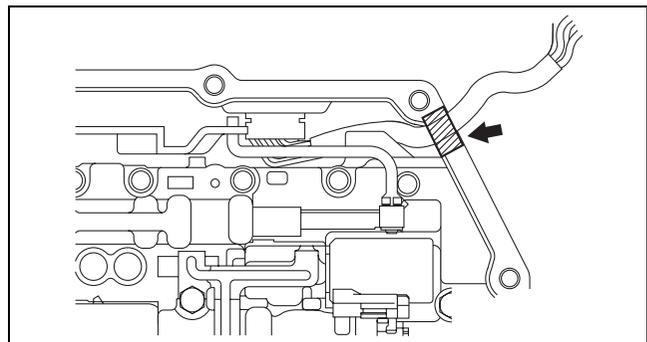

bawuua00000296

AUTOMATIC TRANSAXLE

16. Remove the VSS connector and input/turbine speed sensor connector from the solenoid clamp.

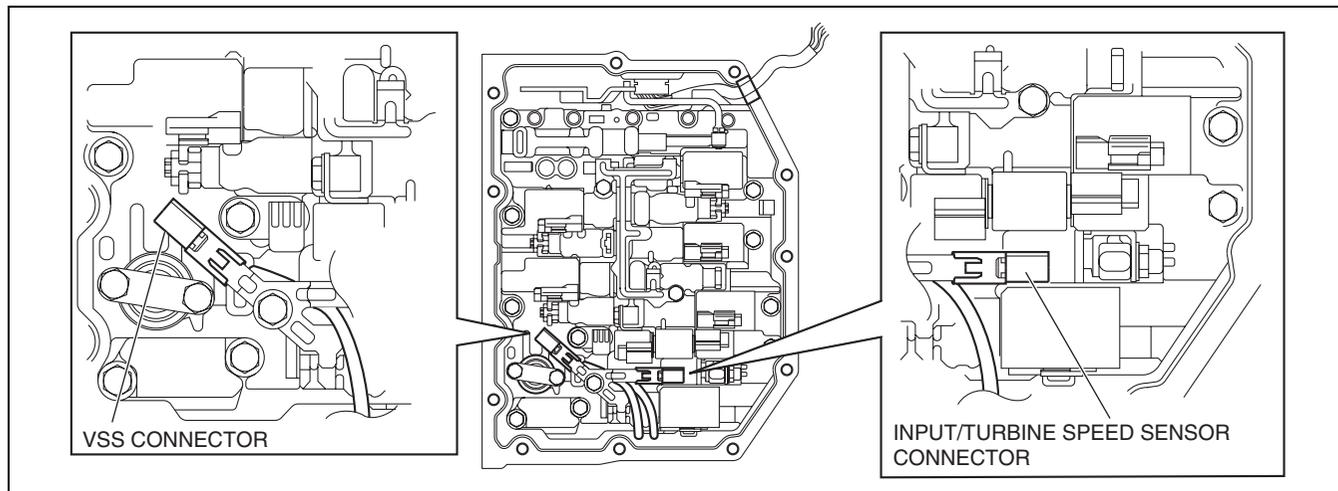


bawuuu00000297

05-17

Note

- Be sure to secure the VSS and input/turbine speed sensor with tape so that they do not interfere with the control valve body component.

17. Secure the VSS wiring harness and input/turbine speed sensor wiring harness with tape to the transaxle case as shown in the figure.

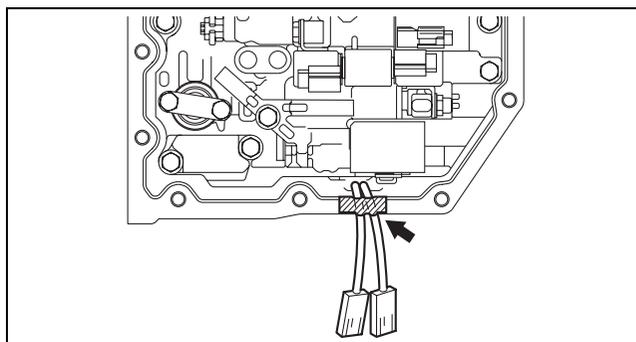


bawuuu00000298

18. Remove the suction cover and the gasket.

Caution

- Loosen the bolts evenly a little at a time in the order shown in the figure.

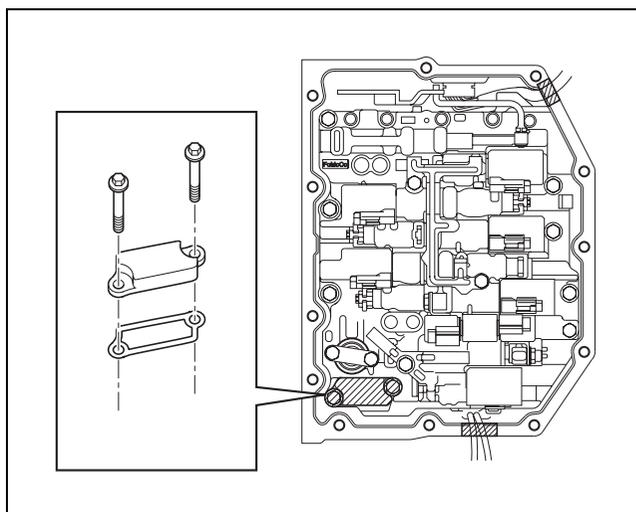


bawuuu00000299

AUTOMATIC TRANSAXLE

19. Remove the control valve body installation bolts.


Caution

- Do not drop the control valve body component.

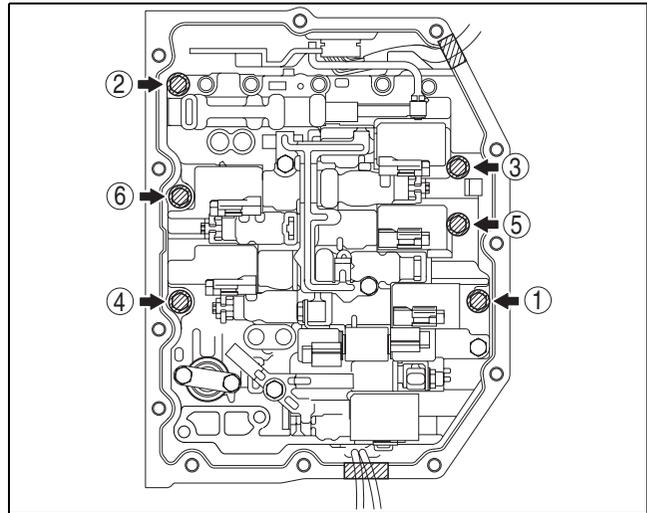

bawuua00000300

20. Disconnect the manual valve link and remove the control valve body component.

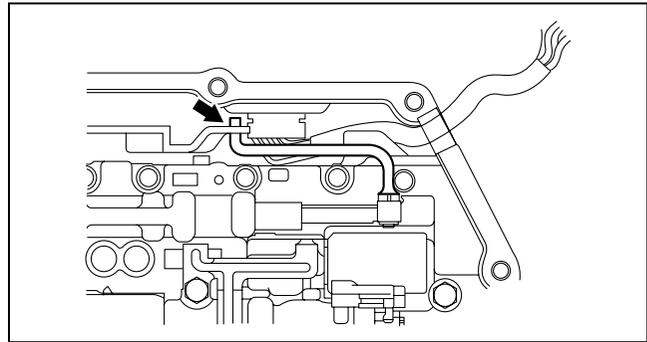


bawuua00000301

21. Remove the coupler component lock plate.

Caution

- Do not damage the wiring harness.
- Do not pull hard on the wiring harness.

22. Remove the coupler component from the transaxle case.

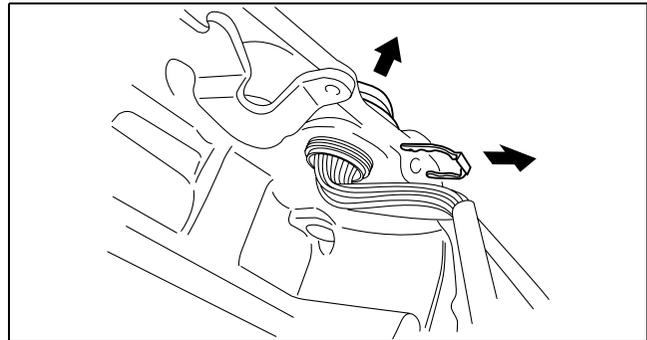


bawuua00000302

23. Remove the O-ring and the gasket from the coupler component.

Caution


- Do not damage the input/turbine speed sensor.

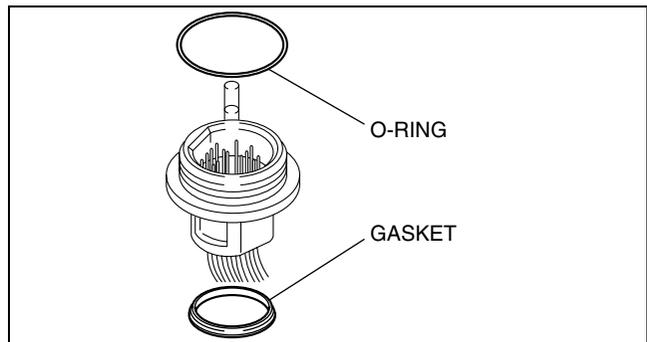

bawuua00000303


AUTOMATIC TRANSAXLE

24. Remove the input/turbine speed sensor.
25. Remove the bolts as shown in the figure.

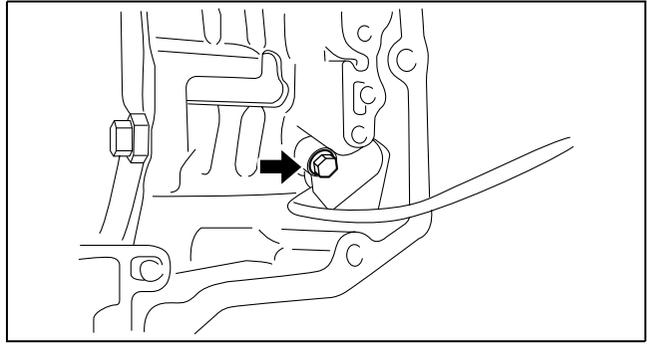

bawuuu00000304

05-17

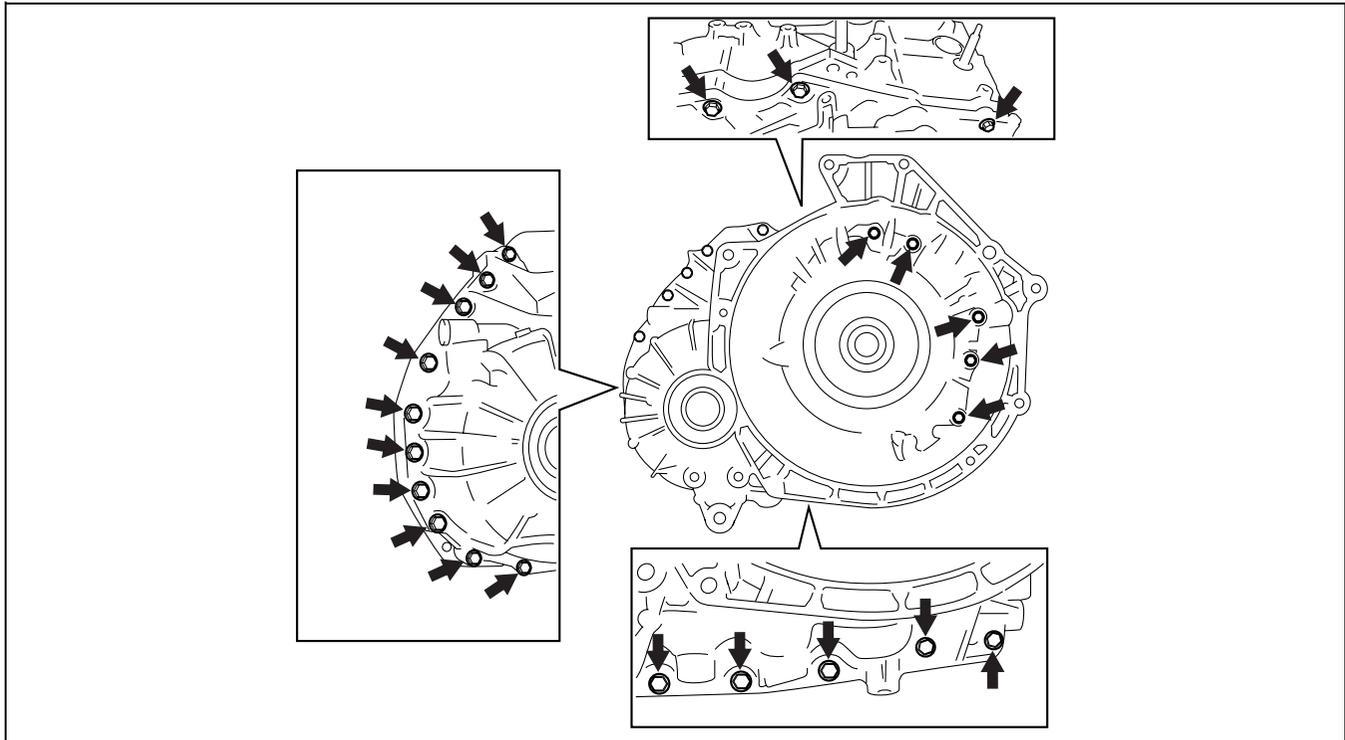


bawuuu00000305

Caution

- Do not damage the fitting surface of the converter housing and the transaxle case.


26. Using a plastic hammer, tap the converter housing to remove it.

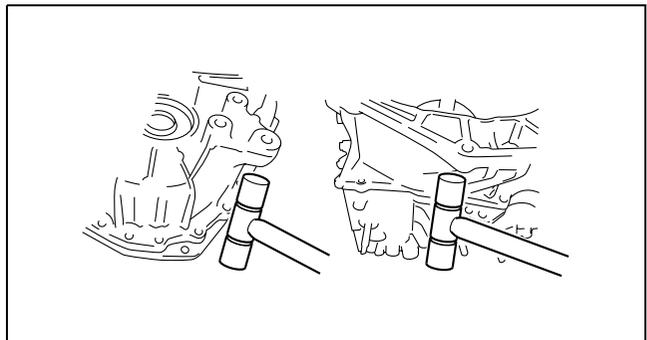

bawuuu00000306

AUTOMATIC TRANSAXLE

27. Remove the transaxle case gaskets as shown in the figure.

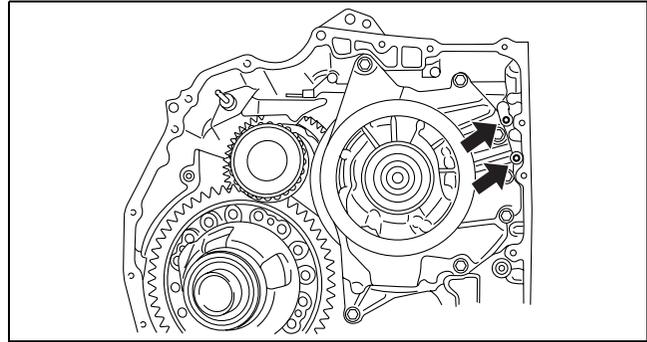


bawuua0000307

28. Remove the gaskets as shown in the figure.


Caution

- Do not damage the oil reservoir lock plate.

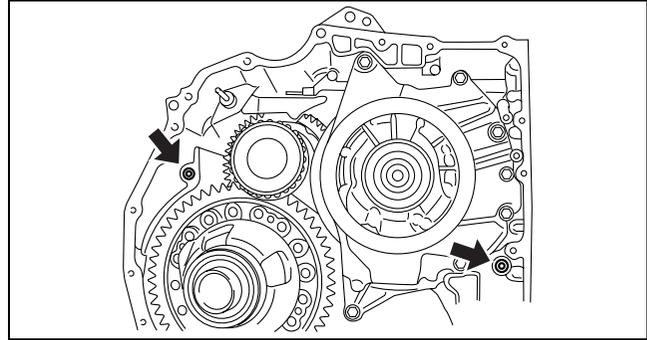

bawuua0000308

29. Remove the tube clamp and the oil reservoir lock plate.

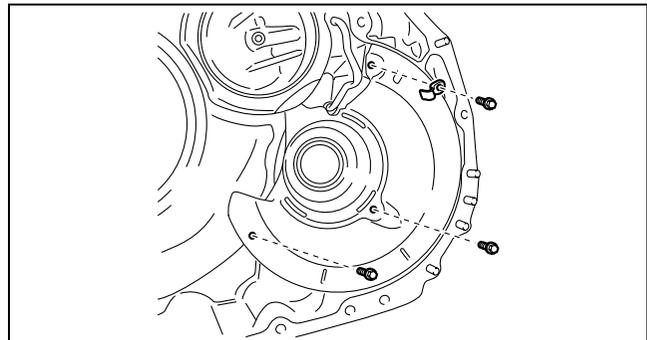


bawuua0000309

30. Remove the magnets from the oil reservoir lock plate.

Caution

- Do not damage the differential gear lube apply tube.

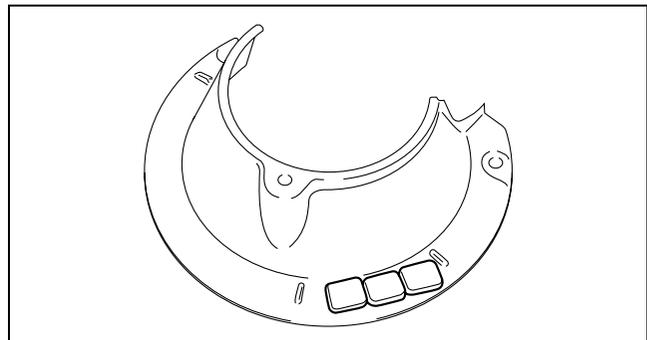


bawuua0000310

31. Using a flathead screwdriver, remove the oil pipe.

Caution


- Do not damage the converter housing.
- If using a screwdriver, use a wooden block or equivalent to avoid damaging the fitting surface of the converter housing.

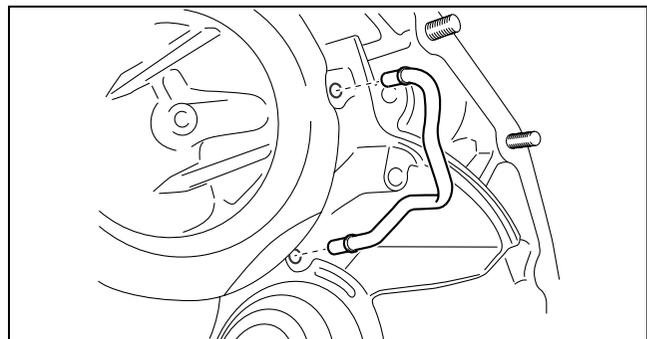

bawuua0000311

AUTOMATIC TRANSAXLE


33. Using a tape-wrapped flathead screwdriver, remove the oil seal (converter housing side).

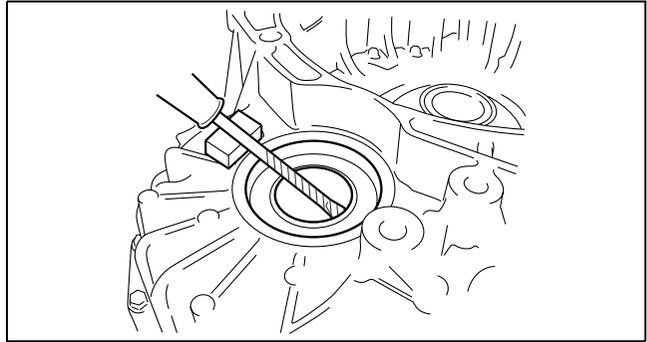

bawuuu00000312


05-17

34. Remove the oil pump component.

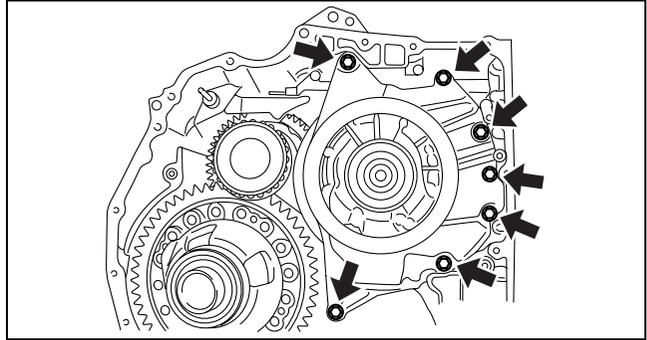

bawuuu00000313

35. Remove the oil seal and the oil strainer from the oil pump component.

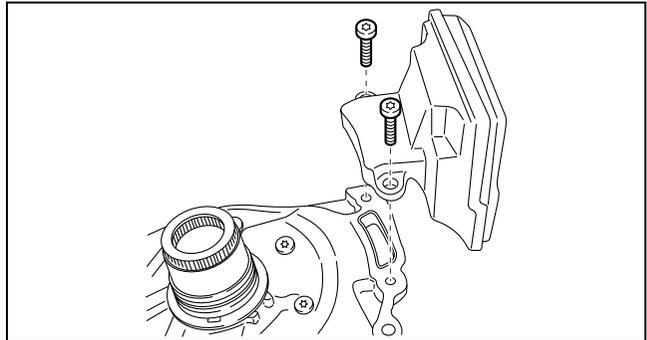


bawuuu00000314

36. Remove the C3 clutch component, input shaft and the front planetary gear component.

Note

- In some cases, the input shaft may be detached with the thrust roller bearing attached.

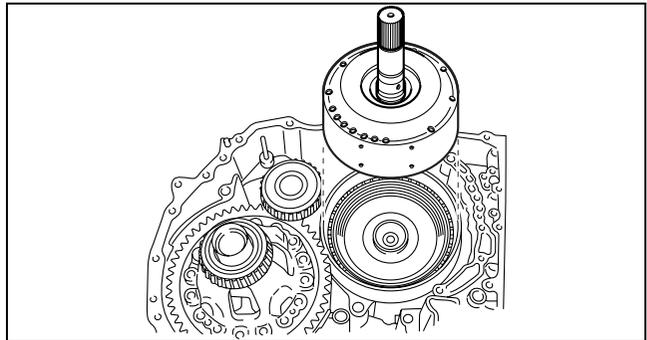


bawuuu00000315

37. Remove the C3 clutch component from the input shaft and the front planetary gear component.

Note


- In some cases, the C3 clutch component may be detached with the thrust washer attached.

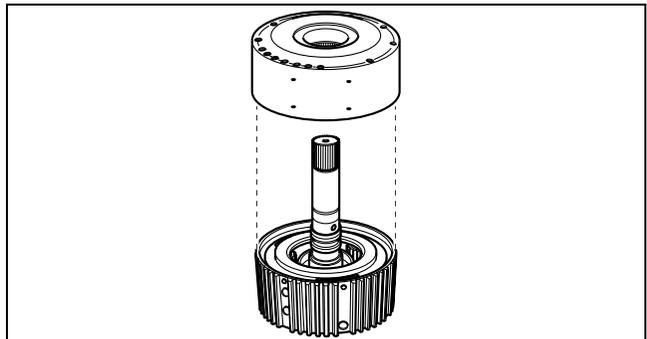

bawuuu00000316


AUTOMATIC TRANSAXLE

38. Remove the brake band anchor bolt.

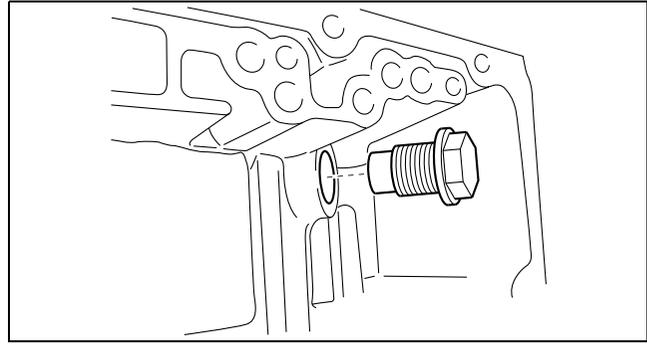

bawuua00000317

39. Remove B1 the brake band.

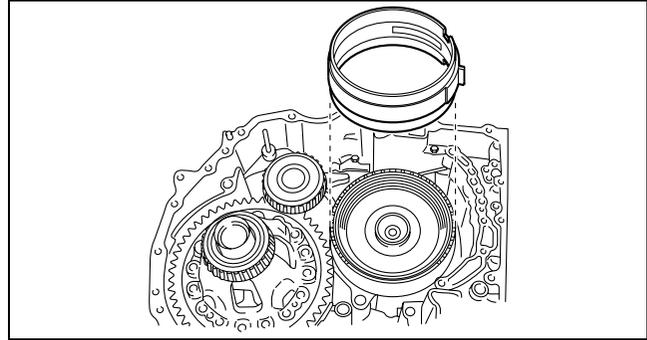


bawuua00000318

40. Inspect the lining of the brake band.

- If the lining is flaking or has changed color, or if it is worn or the print mark is wearing away, replace with a new brake band and C3 clutch. When replacing, inspect the contact surfaces between the C3 clutch drum and B1 brake band. If they are scratched or have changed color, replace with new parts.

Note

- Before replacing with a new B1 brake band, soak it at least **2 h** in ATF.

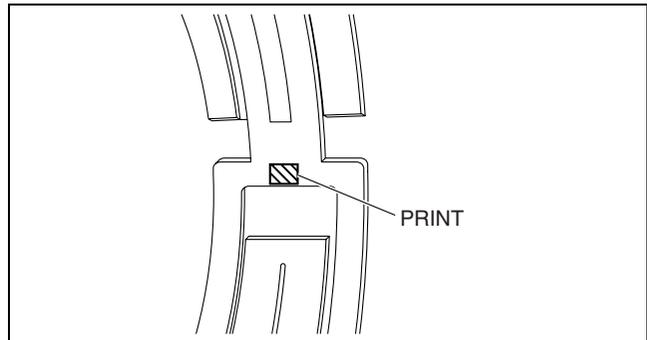


bawuua00000319

41. Remove the snap ring using snap ring pliers.


Caution

- **The brake piston cover will fly off due to the force of the piston return spring.**
- **Do not drop the brake piston cover.**
- **Do not drop the B1 brake piston.**

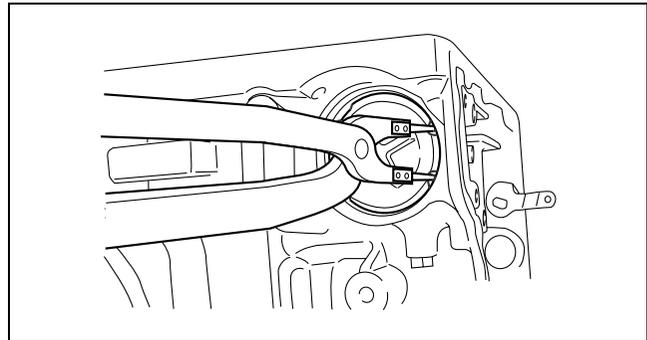

bawuua00000320

42. Remove the brake piston cover, B1 brake piston and the piston return spring.

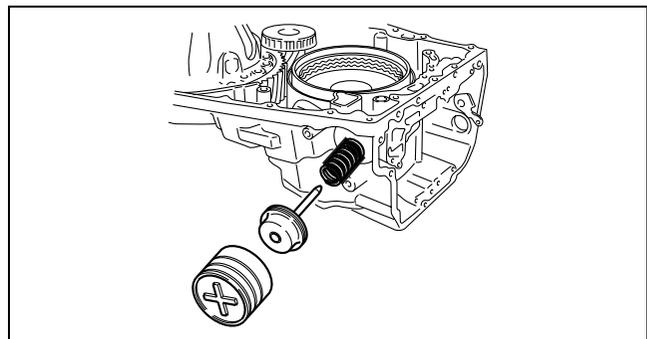


bawuua00000321

AUTOMATIC TRANSAXLE

43. Remove the thrust bearing, bearing race and the C1 clutch component.

Note


- In some cases, the C1 clutch component may be detached with the thrust bearing attached.

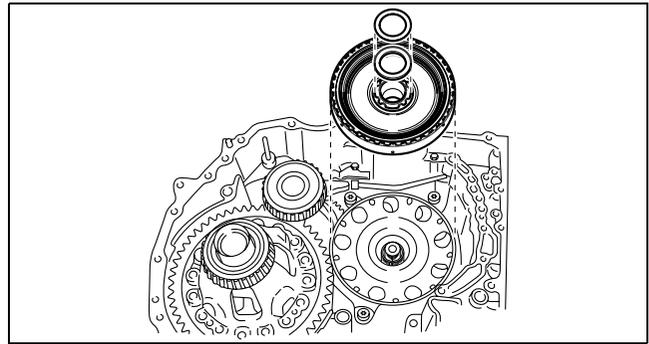

bawuuu00000322

05-17

44. Remove the thrust bearing, bearing race and the sun gear input drum.

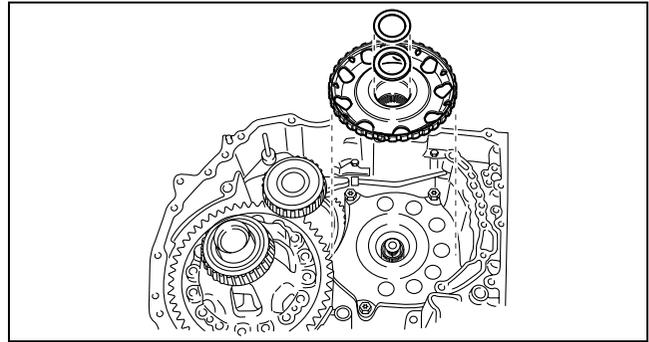


bawuuu00000323

45. Remove the detent spring cover and detent spring.

Caution

- Be careful not to apply too much force to the pawl return spring.

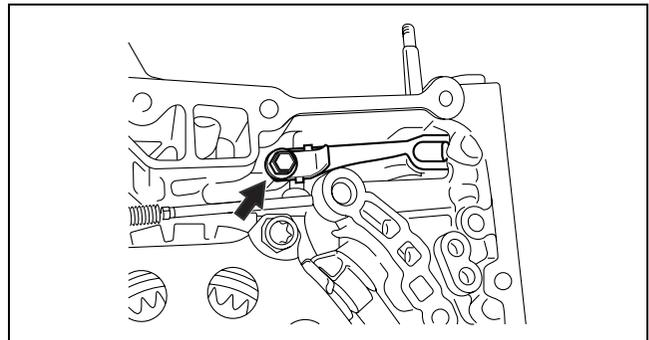


bawuuu00000324

46. Remove the pawl return spring and the parking pawl shaft.


Caution

- Be careful not to apply too much force to the torsion spring.

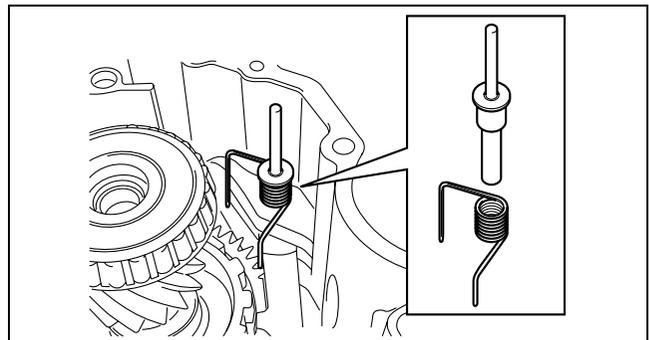

bawuuu00000325


47. Remove the torsion spring and the spring guide sleeve.

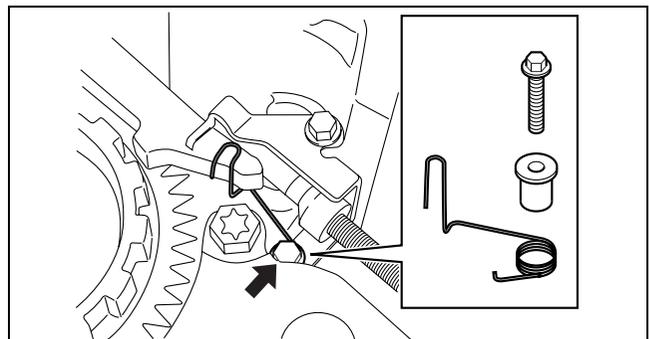

bawuuu00000326


AUTOMATIC TRANSAXLE

48. Remove the parking pawl and the parking pawl bracket.

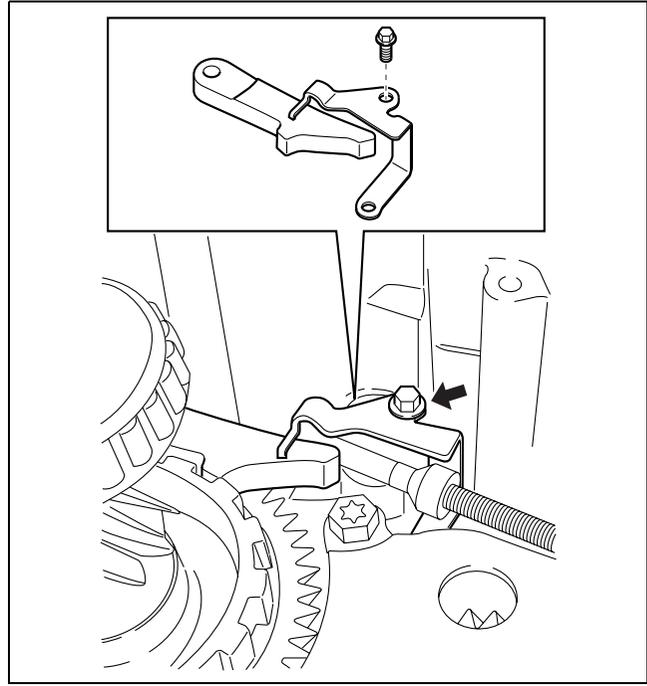


bawuua00000327

49. Disconnect the parking rod from the manual valve lever.

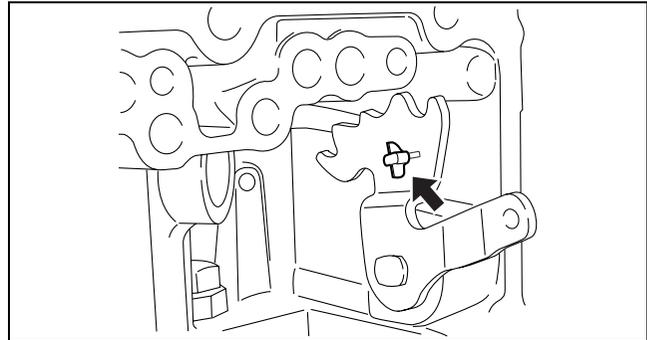


bawuua00000328

50. Remove the manual valve lever from the transaxle case.

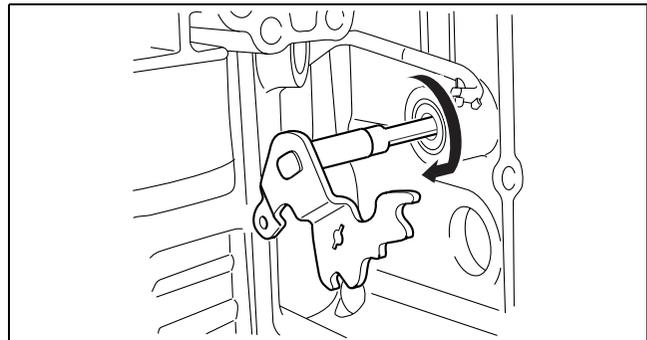

bawuua00000329

51. Remove the parking rod from the transaxle case.

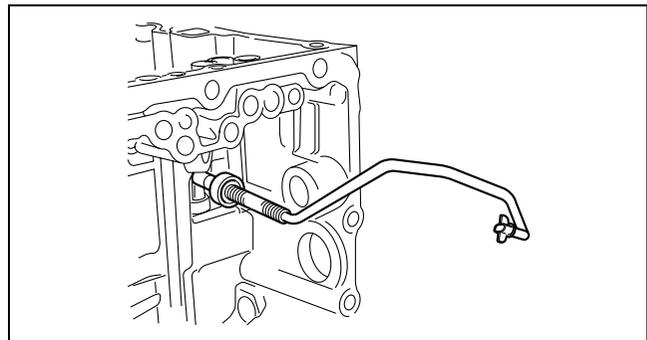


bawuua00000330

AUTOMATIC TRANSAXLE

52. Remove the parking pin from the transaxle case.

Note

- Inspect the direction of the parking pin.

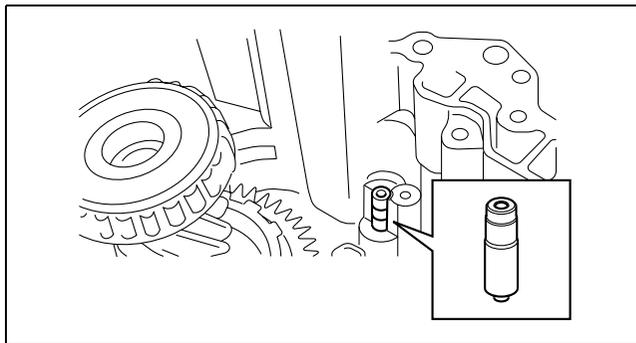


bawuuu00000331

05-17

53. Remove the counter gear component.

Note

- For easy removal, tilt the counter gear component slightly.

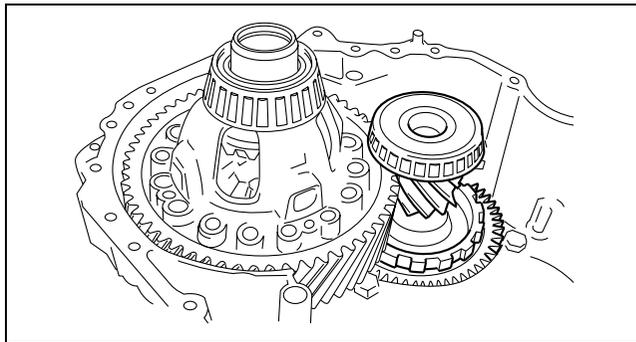


bawuuu00000332

54. Remove the differential component.

Caution

- Do not damage the VSS wiring harness.
- Do not pull hard on the VSS wiring harness.

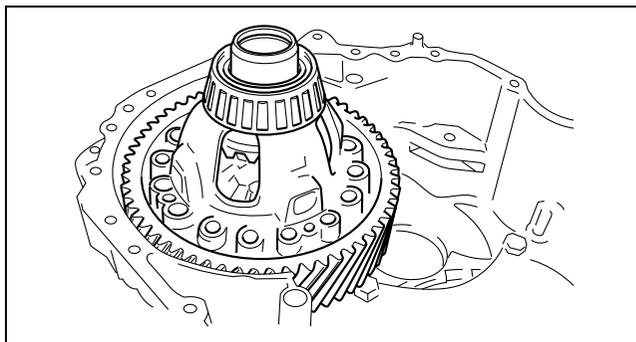


bawuuu00000333

55. Disconnect the VSS wiring harness from the tube wiring clamp.

Caution


- Do not damage the oil cooler outlet tube.

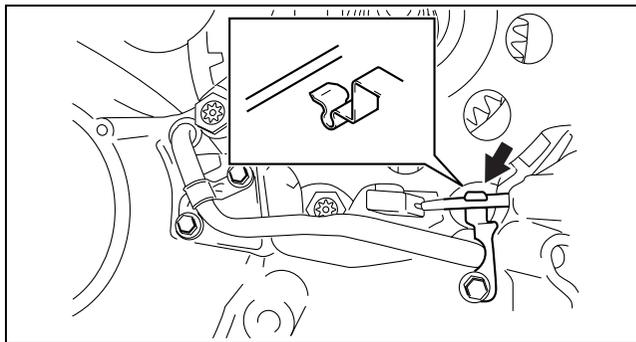

bawuuu00000334

AUTOMATIC TRANSAXLE

56. Remove the pipe clamp, transaxle case No.1 plate, wiring harness clip and the oil cooler outlet tube.
57. Remove the O-rings from the oil cooler outlet tube.

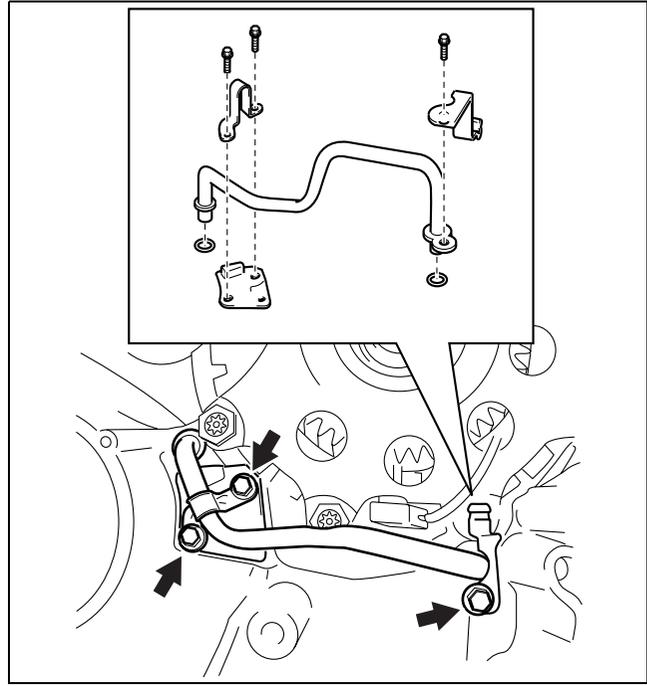


bawuua00000335

58. Using a flathead screwdriver and a hammer, pry back the crimp on the lockwashers.

Caution

- If the lockwasher crimp is not completely pried back, the tool cannot fit over the bolt properly and the bolt cannot be loosened.

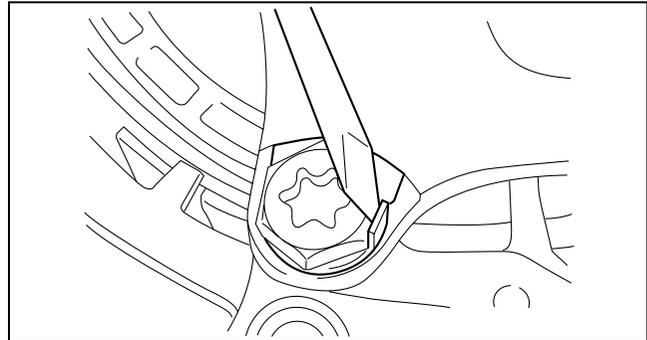


bawuua00000336

59. Remove the lockwashers, washers and the counter drive gear.


Caution

- Do not damage the VSS wiring harness.
- Do not pull hard on the VSS wiring harness.
- Do not damage the VSS.

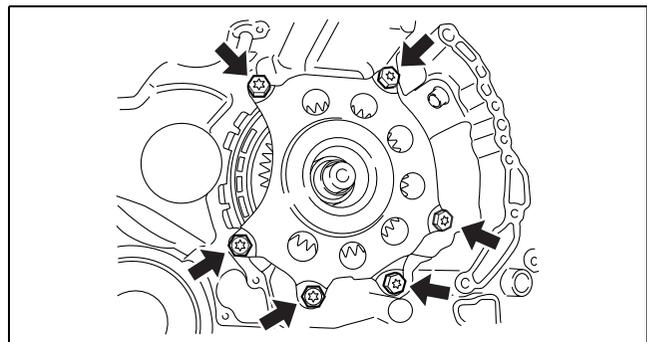

bawuua00000337

60. Remove the VSS and spacer from the counter drive gear.

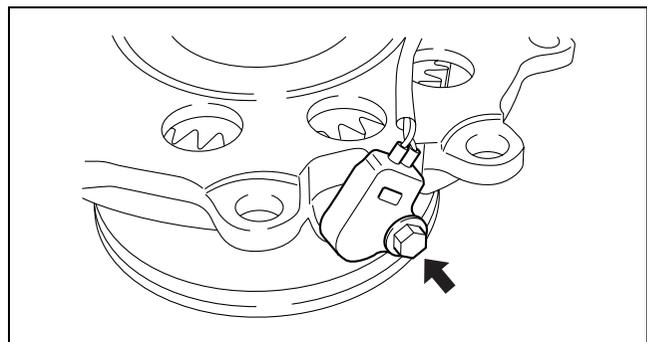


bawuua00000338

AUTOMATIC TRANSAXLE

61. Using a flathead screwdriver, remove the snap ring.

Caution

- Do not drop the sun gear.

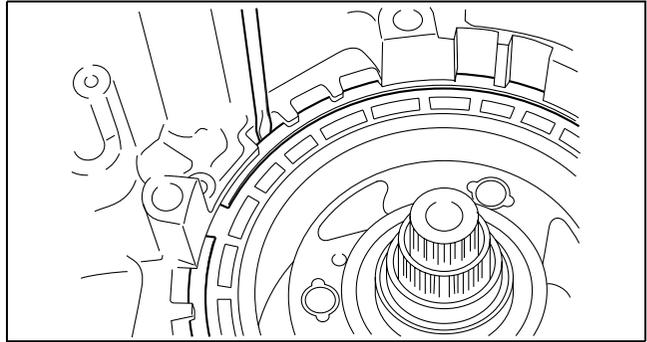

bawuuu00000339

05-17


62. Remove the rear planetary gear component and the one-way clutch.

Note

- In some cases, the sun gear may be detached with the bearing race attached.


Note

- Remove the sun gear in the center while holding it.
- The thrust washer of the rear planetary gear on the rear side might remain on the transaxle case side when removing the rear planetary gear component.

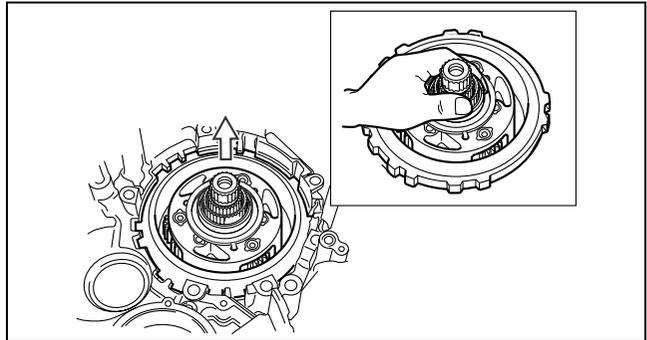


bawuuu00000340

63. Remove the thrust bearing and the bearing races.

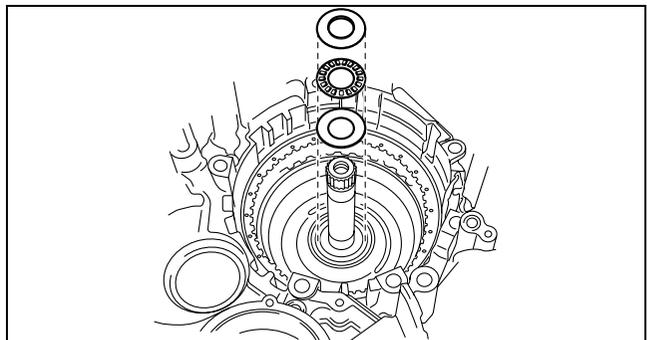

bawuuu00000341

64. Using a flathead screwdriver, remove the snap ring.

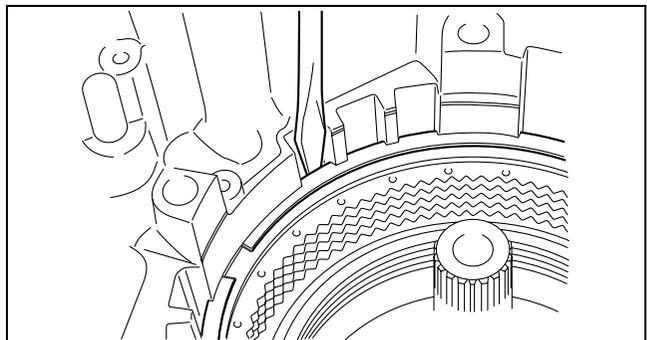


bawuuu00000342

AUTOMATIC TRANSAXLE

65. Remove the retaining plates, drive and driven plates.

Note

- Inspect the number of drive plates and driven plates.

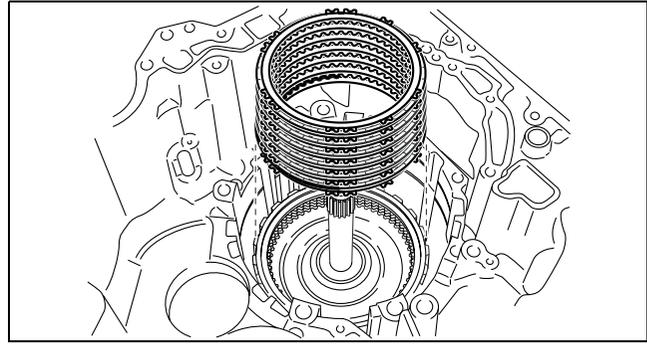


bawuua0000343

66. Inspect the lining of all drive plates.

- If the lining is flaking or has changed color, or if it is worn or the print mark is wearing away, replace with a new drive plate. When replacing, inspect the contact surfaces between the retaining plate, driven plate and drive plate. If they are scratched or have changed color, replace with new parts.


Note

- Before replacing with new drive plates, soak them at least 2 h in ATF.

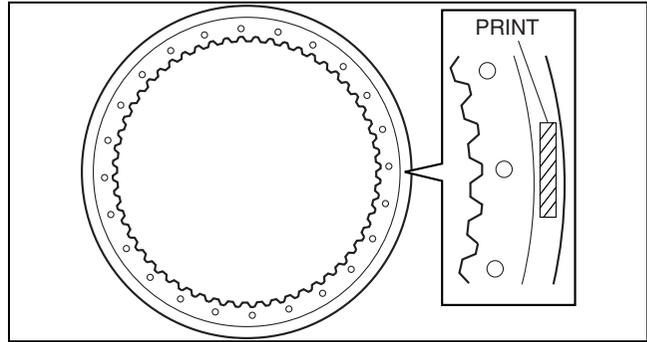


bawuua0000344

67. Remove the C2 clutch component and the thrust bearing.

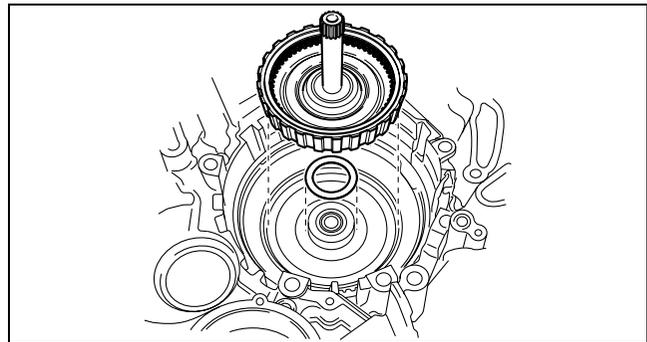


bawuua0000345

68. Remove the seal rings from the transaxle case.

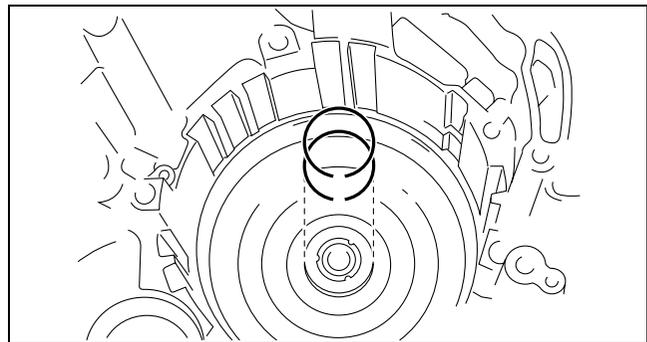

bawuua0000346

69. Remove the transaxle case plate No.2.

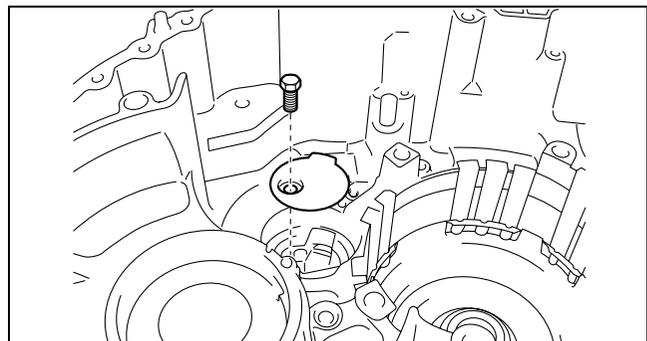

bawuua0000347


AUTOMATIC TRANSAXLE

70. Remove the transaxle case plate No.3.

Caution

- Do not damage the transaxle case.
- If using a screwdriver, use a wooden block or equivalent to avoid damaging the fitting surface of the transaxle case.

71. Remove the oil seal lip using a razor.

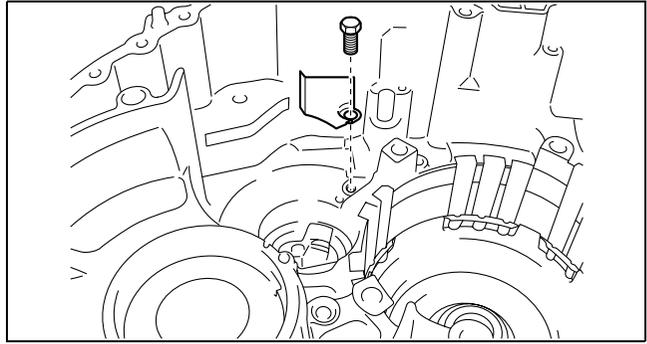


05-17


72. Using a tape-wrapped flathead screwdriver, remove the oil seal (transaxle case side).

Caution

- Do not damage the transaxle case.
- If using a screwdriver, use a wooden block or equivalent to avoid damaging the fitting surface of the transaxle case.

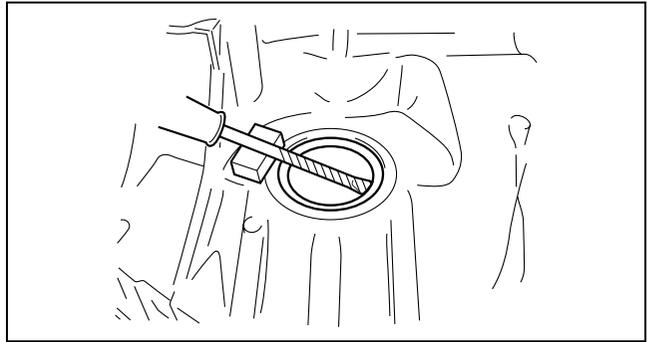

73. Using a tape-wrapped flathead screwdriver, remove the oil seal (manual shaft).

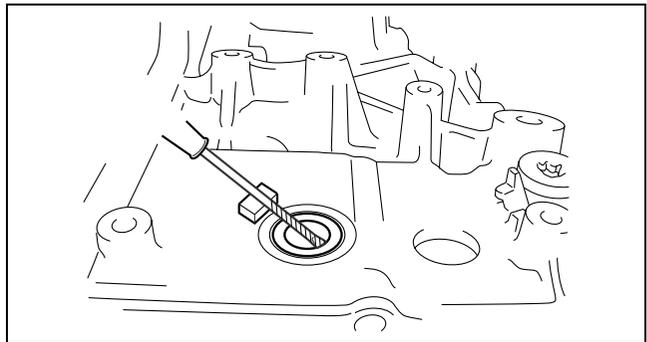


AUTOMATIC TRANSAXLE

OIL PUMP DISASSEMBLY/ASSEMBLY

id051700500100

Components

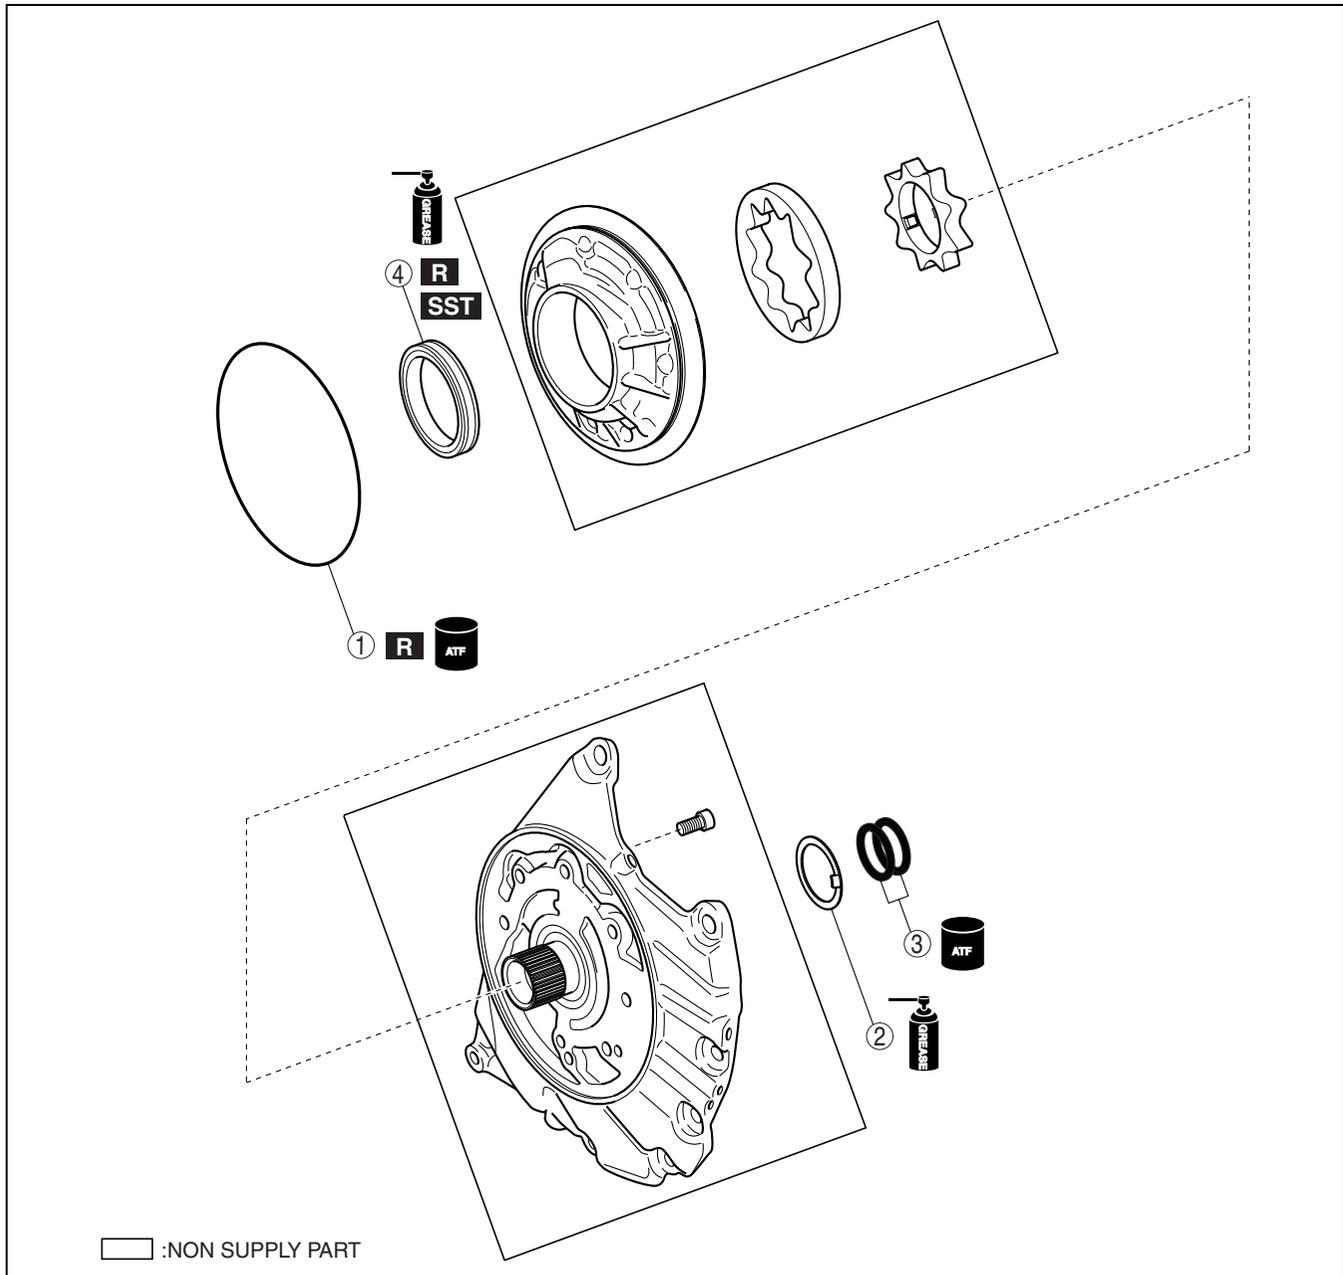

bawuua00000001


1	O-ring
2	Thrust washer

3	Seal ring
4	Oil seal

AUTOMATIC TRANSAXLE

Disassembly Procedure


1. Remove the O-ring from the oil pump.

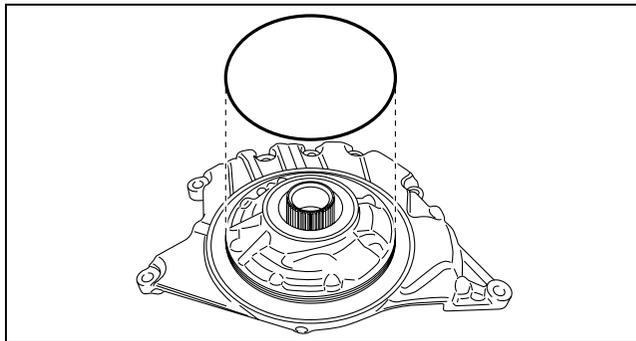

bawuuu00000002

05-17

2. Remove the thrust washer from the oil pump.

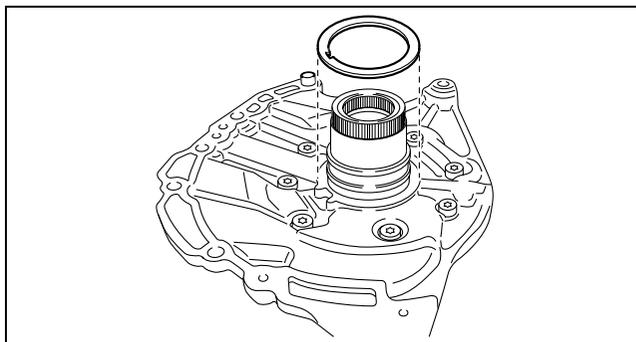


bawuuu000000003

3. Remove the seal rings from the oil pump.


Caution

- Do not damage the bushing on the oil pump body.

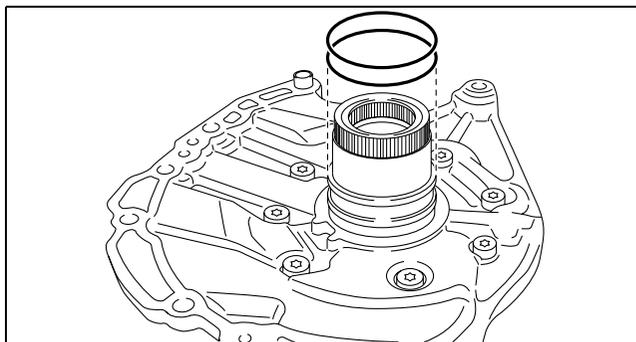

bawuuu000000004

4. Using a tape-wrapped flathead screwdriver, remove the oil seal from the oil pump body.

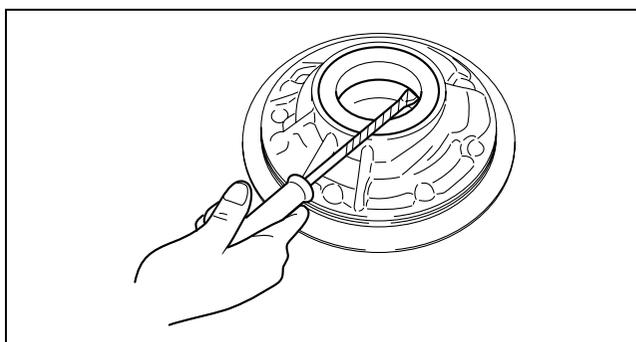

bawuuu000000005

Assembly Procedure

Caution

- Do not damage the oil seal.

1. Using the SST and a hammer, install the new oil seal to the oil pump body.

Substitution SST

- 49 U027 003

Outer diameter: 67 mm {2.64 in} or more
 Inner diameter: 54—61 mm {2.13—2.40 in}
 Plate thickness: 2 mm {0.08 in} or more

2. Apply grease to the oil seal lip.
3. Apply ATF to the new seal rings and sliding surface of the oil pump component.

Caution

- Do not expand the seal rings too much.
- Be careful not to shorten the seal rings too much, when installing the seal rings.

4. Compress the seal rings as shown in the figure. Then install the seal rings to the oil pump component.

Note

- Verify that oil seal rings rotate smoothly after installing them.

5. Apply grease to the thrust washer.

Caution


- Apply grease to the mounting surface of the thrust washer so that it does not drop when installed.

6. Install the thrust washer to the oil pump component.
7. Apply ATF to a new O-ring.


8. Install the O-ring to the oil pump component.

Caution


- Do not damage the oil seal lip.

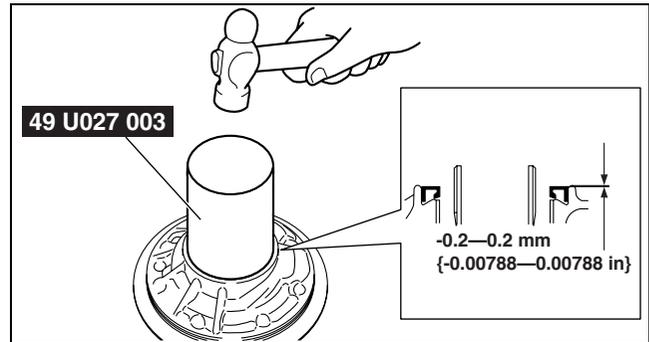


bawuua00000006

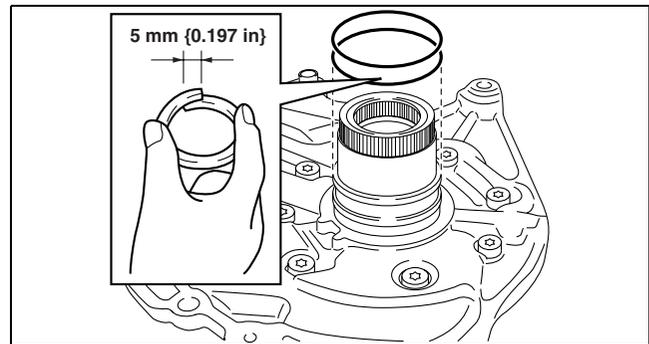

bawuua00000007

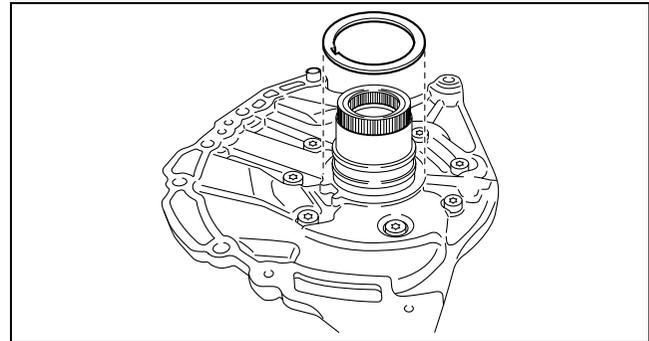


bawuua00000003

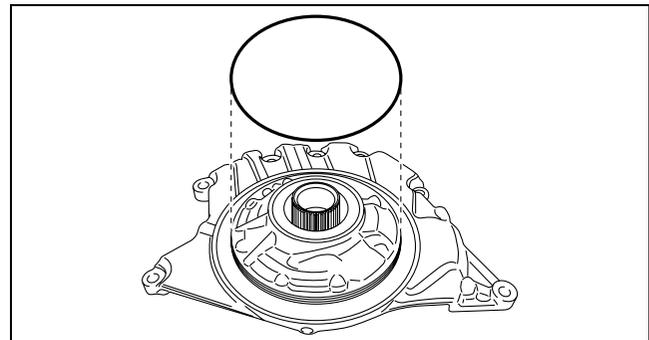

bawuua00000002

AUTOMATIC TRANSAXLE

9. Turn the drive gear with flathead screwdrivers and verify it rotates smoothly.

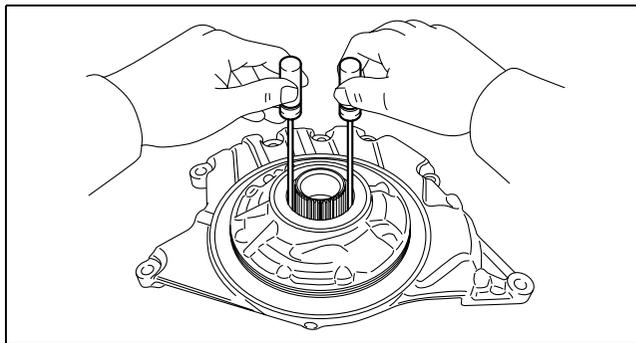


05-17

bawuuu0000008

B1 BRAKE PISTON DISASSEMBLY/ASSEMBLY

id051700500200

Components

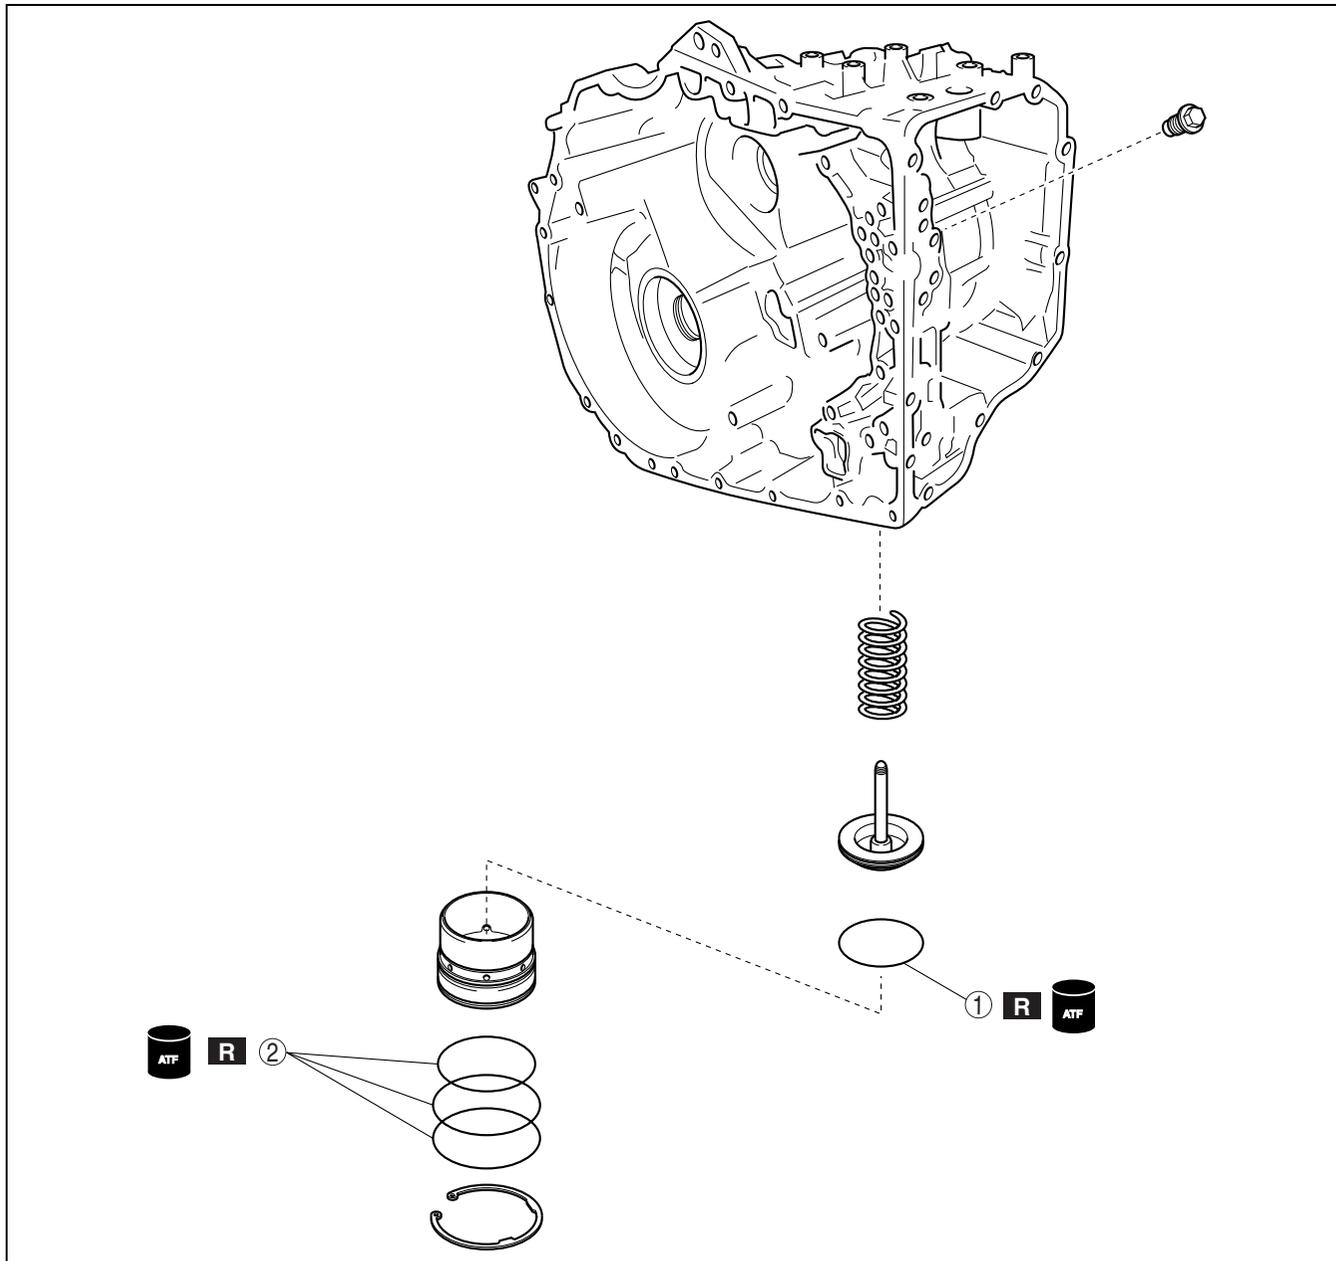

bawuuu00000351


1 O-ring

2 O-ring

AUTOMATIC TRANSAXLE


Disassembly Procedure

1. Remove the O-ring from the B1 brake piston.

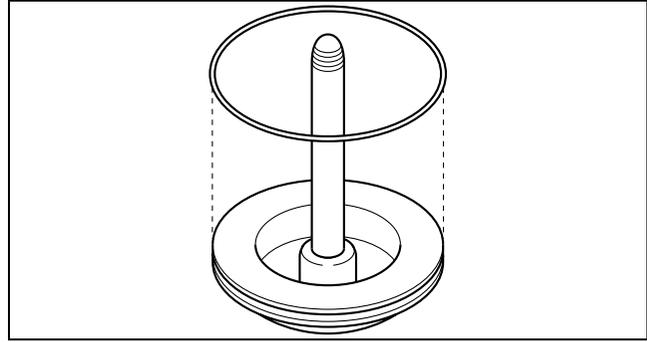

bawuua00000352

2. Remove the O-rings from the brake piston cover.

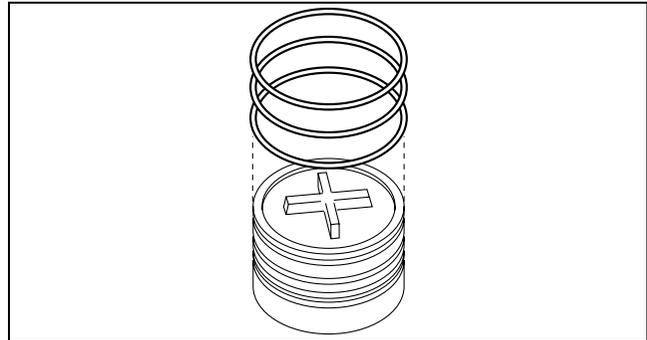

bawuua00000353


Assembly Procedure

1. Apply ATF to the new O-rings.
2. Install the O-rings to the brake piston cover.

Number of O-ring


- AJ: 3
- L3 with TC: 2

3. Apply ATF to a new O-ring.

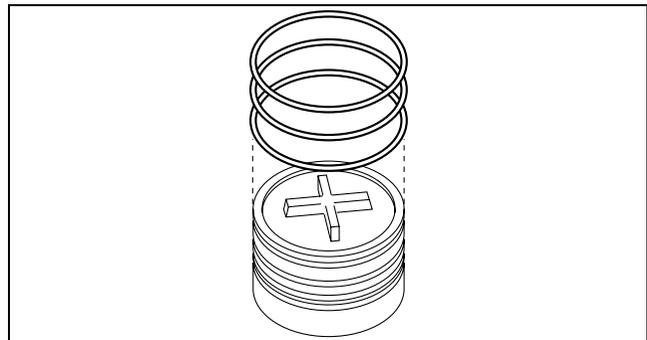

bawuua00000353

4. Install the O-ring to the B1 brake piston.

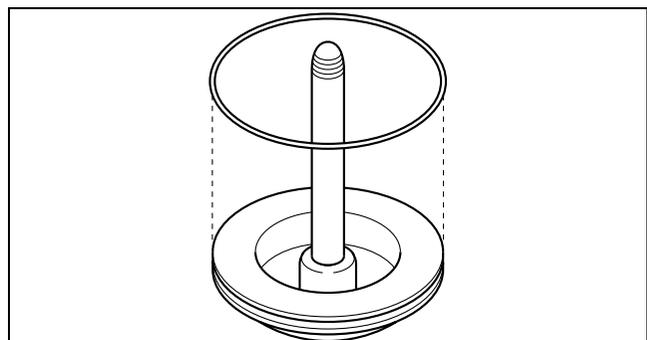


bawuua00000352

AUTOMATIC TRANSAXLE

C3 CLUTCH COMPONENT DISASSEMBLY

id051700500300

Components

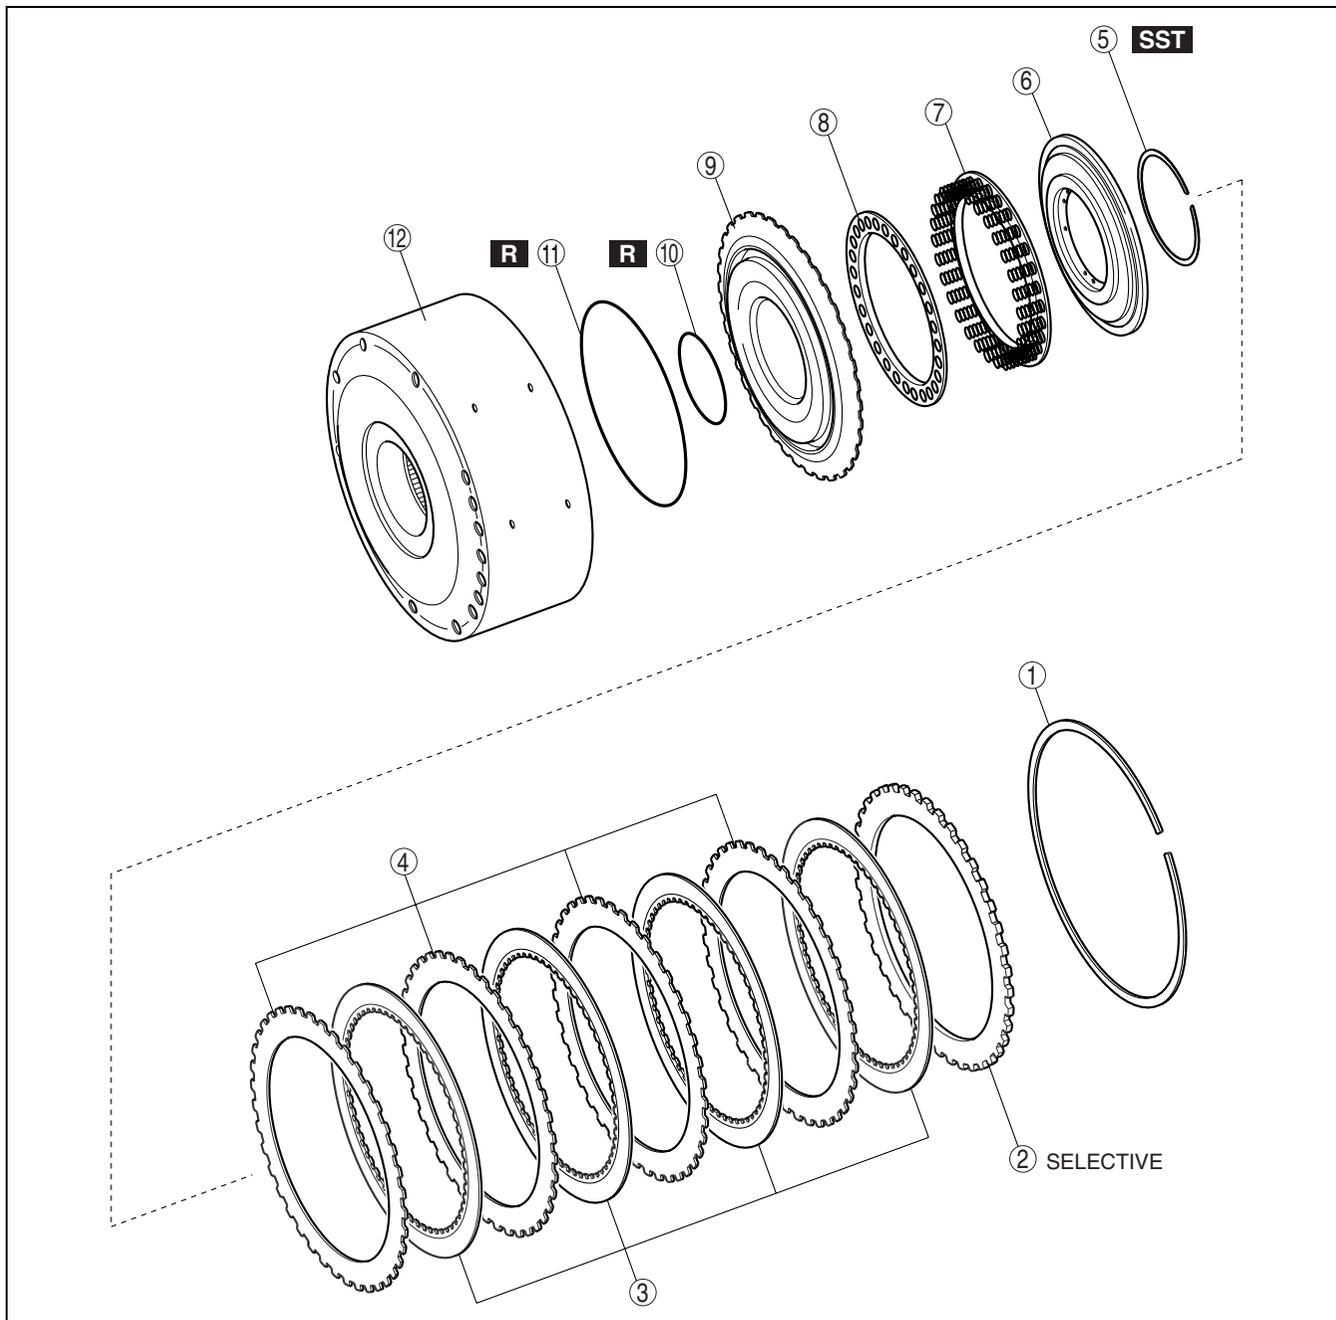

05-17

bawuua00000354


1	Snap ring
2	Retaining plate
3	Drive plate
4	Driven plate
5	Snap ring
6	C3 clutch balancer

7	Piston return spring
8	Spring retainer
9	C3 clutch piston
10	O-ring
11	O-ring
12	C3 clutch drum

AUTOMATIC TRANSAXLE

Disassembly Procedure

1. Using a flathead screwdriver, remove the snap ring from the C3 clutch drum.

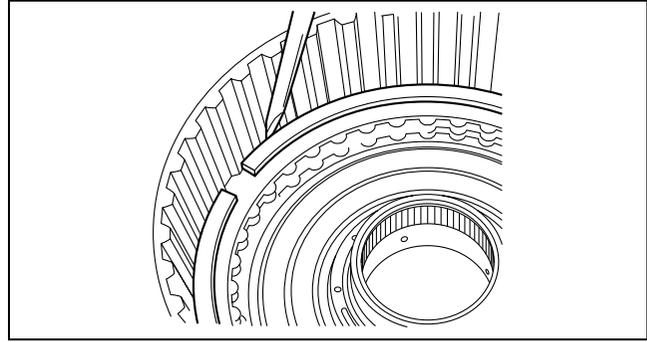


bawuua00000355

2. Remove the retaining plate, drive and driven plates from the C3 clutch drum.

Note

- Inspect the number of drive and driven plates.

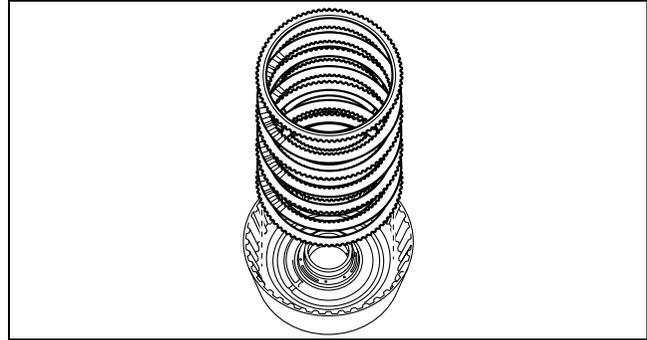

bawuua00000356

3. Place the **SST** on the clutch balancer and compress the return spring with a press.


Caution

- **Be careful not to expand the snap ring too much.**

4. Remove the snap ring using snap ring pliers.


Caution

- **Do not damage the seal on the clutch balancer.**

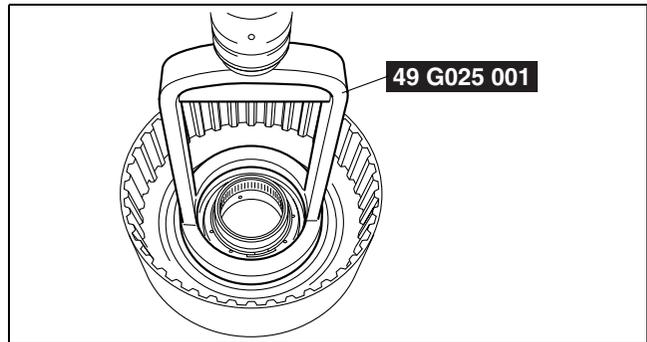

bawuua00000357

5. Remove the clutch balancer, return spring and the retainer from the C3 clutch drum.

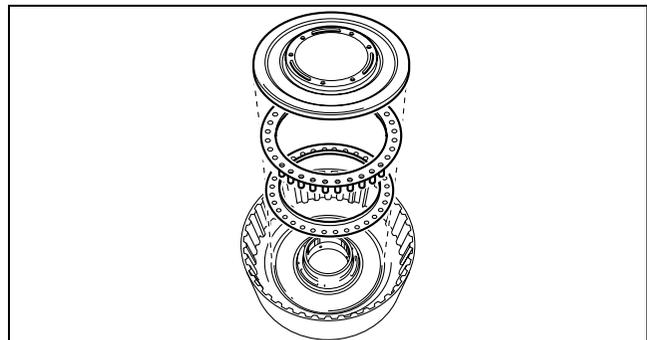

bawuua00000358


6. While pushing the C3 clutch piston by hand, apply compressed air into the oil passage as shown in the figure and remove the C3 clutch piston from the C3 clutch drum.

Air pressure

392 kPa {4.0 kgf/cm², 57 psi}


Note

- When applying compressed air, shut the 3 oil passages of the C3 clutch drum as shown in the figure.

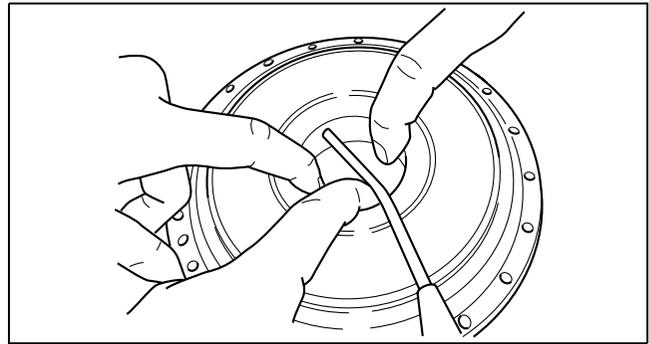

bawuuu00000359

7. Remove the O-rings from the C3 clutch drum.

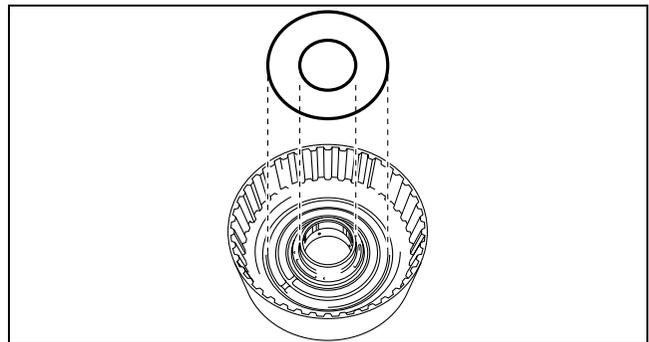


bawuuu00000360

C3 CLUTCH INSPECTION

1. Inspect the lining of all drive plates.
 - If the lining is flaking or has changed color, or if it is worn or the print mark is wearing away, replace with a new drive plate. When replacing, inspect the contact surfaces between the retaining plate, driven plate and drive plate. If they are scratched or have changed color, replace with new parts.

Note

- Before replacing with new drive plates, soak them at least **2 h** in ATF.

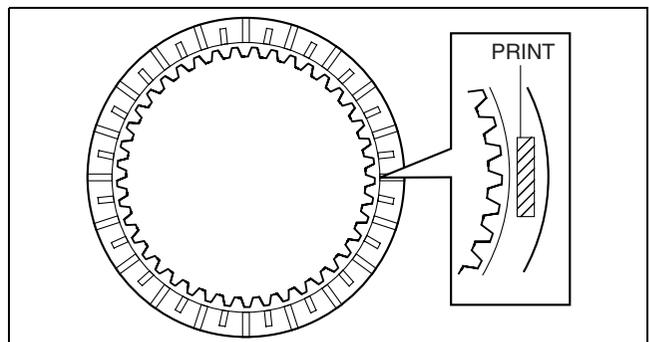


bawuuu00000495

2. Using vernier calipers, measure the free length of the piston return spring.

C3 clutch return spring free length

Standard: 12.91 mm {0.5083 in}

- If it is less than the specification, replace the piston return spring with a new one.

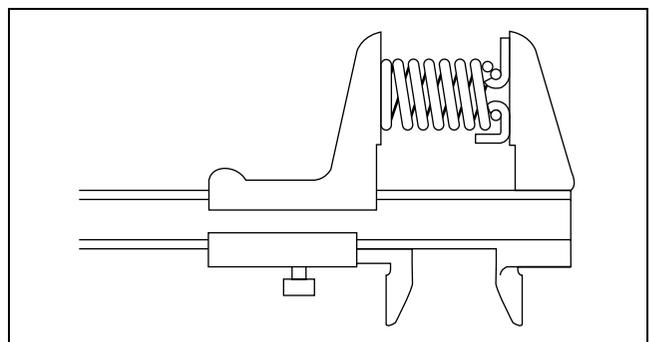


bawuuu00000496

AUTOMATIC TRANSAXLE

C3 CLUTCH COMPONENT ASSEMBLY

id051700500500

Components

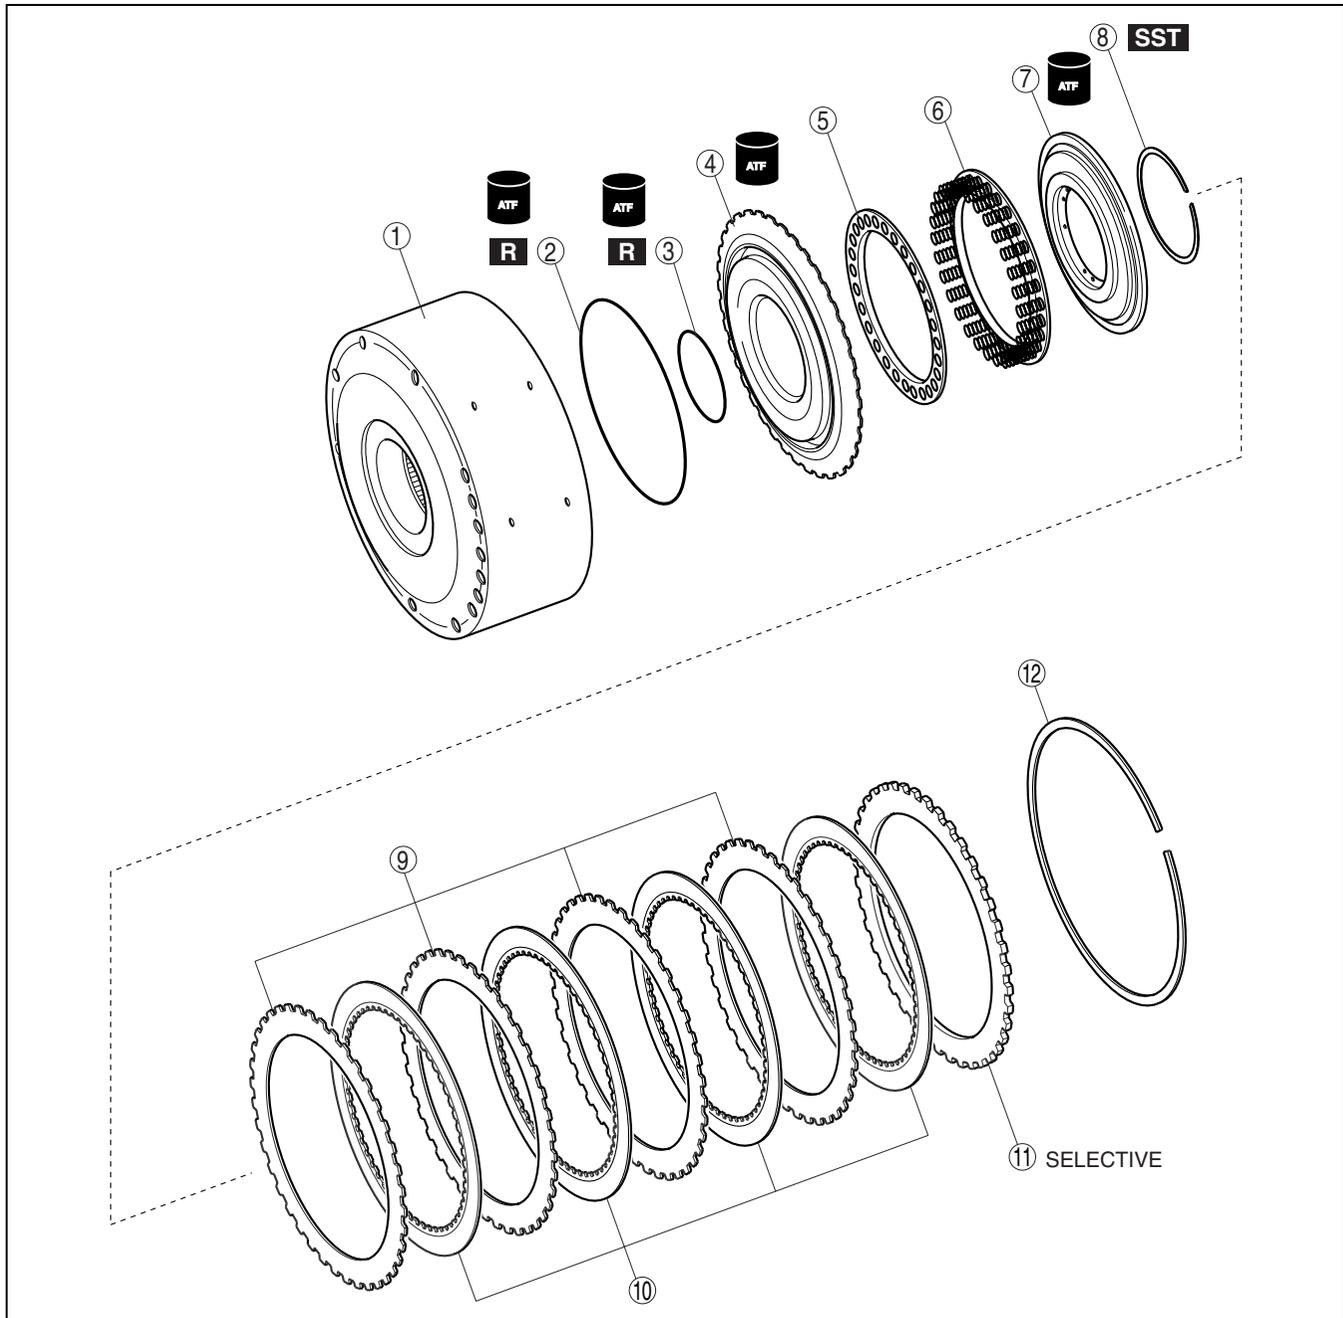

bawuua00000361

1	C3 clutch drum
2	O-ring
3	O-ring
4	C3 clutch piston
5	Spring retainer
6	Piston return spring


7	C3 clutch balancer
8	Snap ring
9	Driven plate
10	Drive plate
11	Retaining plate
12	Snap ring

Assembly Procedure

1. Apply ATF to the new O-rings and the C3 clutch drum.
2. Install the O-rings to the C3 clutch drum.
3. Apply ATF to the sliding surface of the C3 clutch piston.

Caution

- Do not damage the seal on the piston and O-rings.

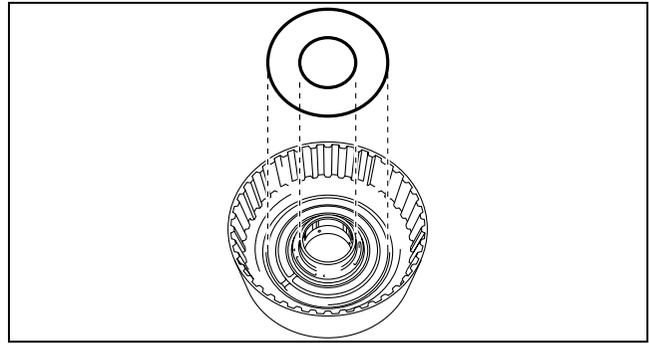


bawuuu00000362

05-17

4. Install the C3 clutch piston to the C3 clutch drum.
5. Apply ATF to the seal on the clutch balancer.


Caution

- Do not damage the seal on the clutch balancer.

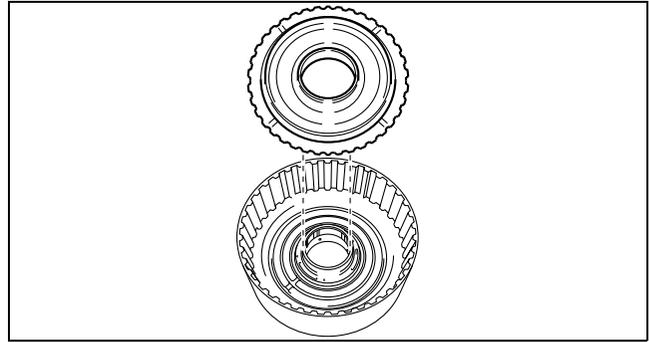

bawuuu00000363

6. Install the retainer, return spring and the clutch balancer to the C3 clutch drum.

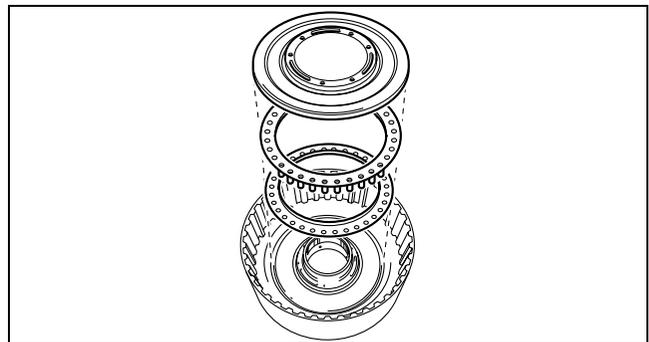


bawuuu00000364

7. Place the **SST** on the clutch balancer and compress the piston return spring with a press.

Caution

- When installing the snap ring, set the end gap of the snap ring as shown in the figure.
- Do not expand the snap ring too much.


8. Install the snap ring in the groove using snap ring pliers.

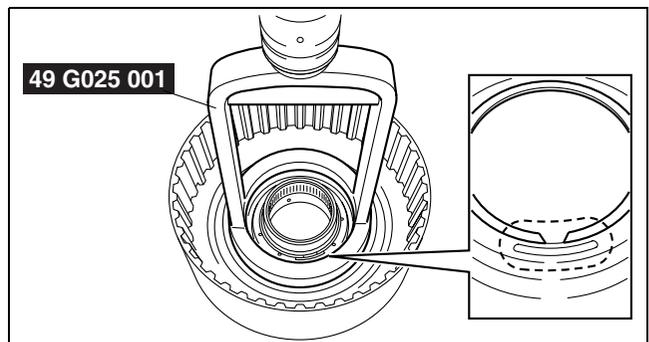

bawuuu00000365

AUTOMATIC TRANSAXLE


9. Install the driven plates, drive plates and the retaining plate in the following order to the C3 clutch drum as shown in the figure.
- Driven— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Retaining

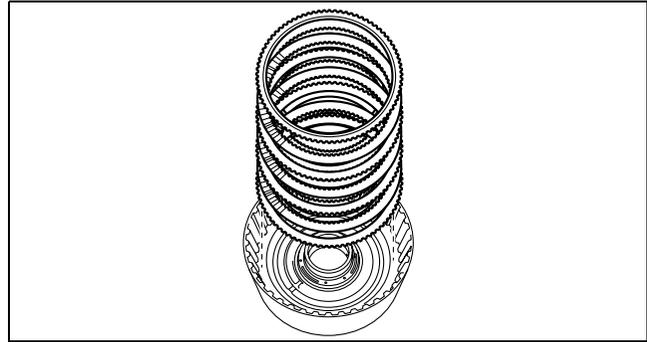

bawuua0000366

Caution

- **Inspect the number and order of the retaining plate, drive and driven plates.**

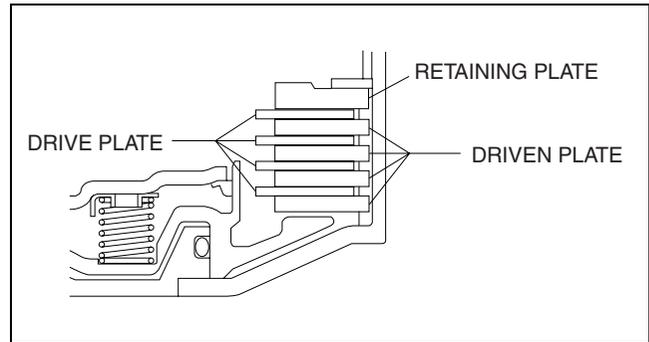


bawuua0000367

10. Using a flathead screwdriver, install the snap ring in the groove.

Caution

- **When installing the snap ring, set the end gap of the snap ring as shown in the figure.**

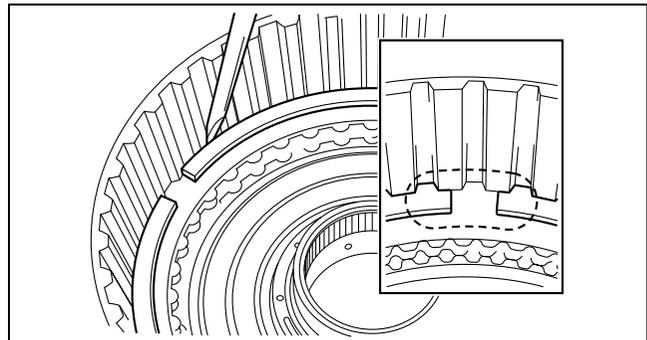

bawuua0000368

11. Install the C3 clutch component to the oil pump and set a dial indicator as shown in the figure.
12. Apply compressed air as shown in the figure and measure the C3 clutch piston stroke.


Air pressure

200 kPa {2.0 kgf/cm², 29 psi}

C3 clutch piston stroke

0.6 — 0.8 mm {0.024 — 0.031 in}

- If not within the specification, select an appropriate retaining plate.

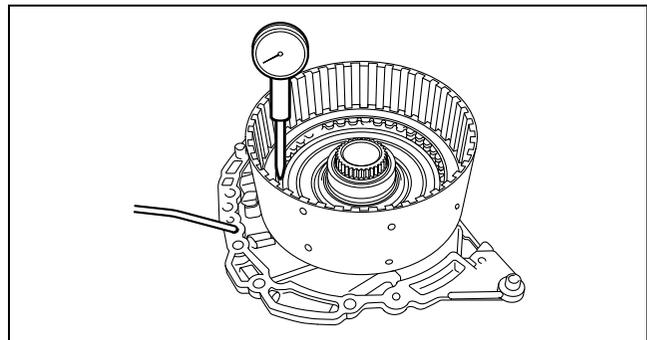

bawuua0000369

AUTOMATIC TRANSAXLE

Retaining plate size


Identification mark	Thickness (mm {in})
1	2.8 {0.110}
A	2.85 {0.112}
2	2.9 {0.114}
B	2.95 {0.116}
3	3.0 {0.118}
C	3.05 {0.120}
4	3.1 {0.122}
5	3.2 {0.126}
6	3.3 {0.130}
7	3.4 {0.134}
8	3.5 {0.138}

05-17

FRONT PLANETARY GEAR COMPONENT INPUT SHAFT DISASSEMBLY/ASSEMBLY

id051700500600

Components

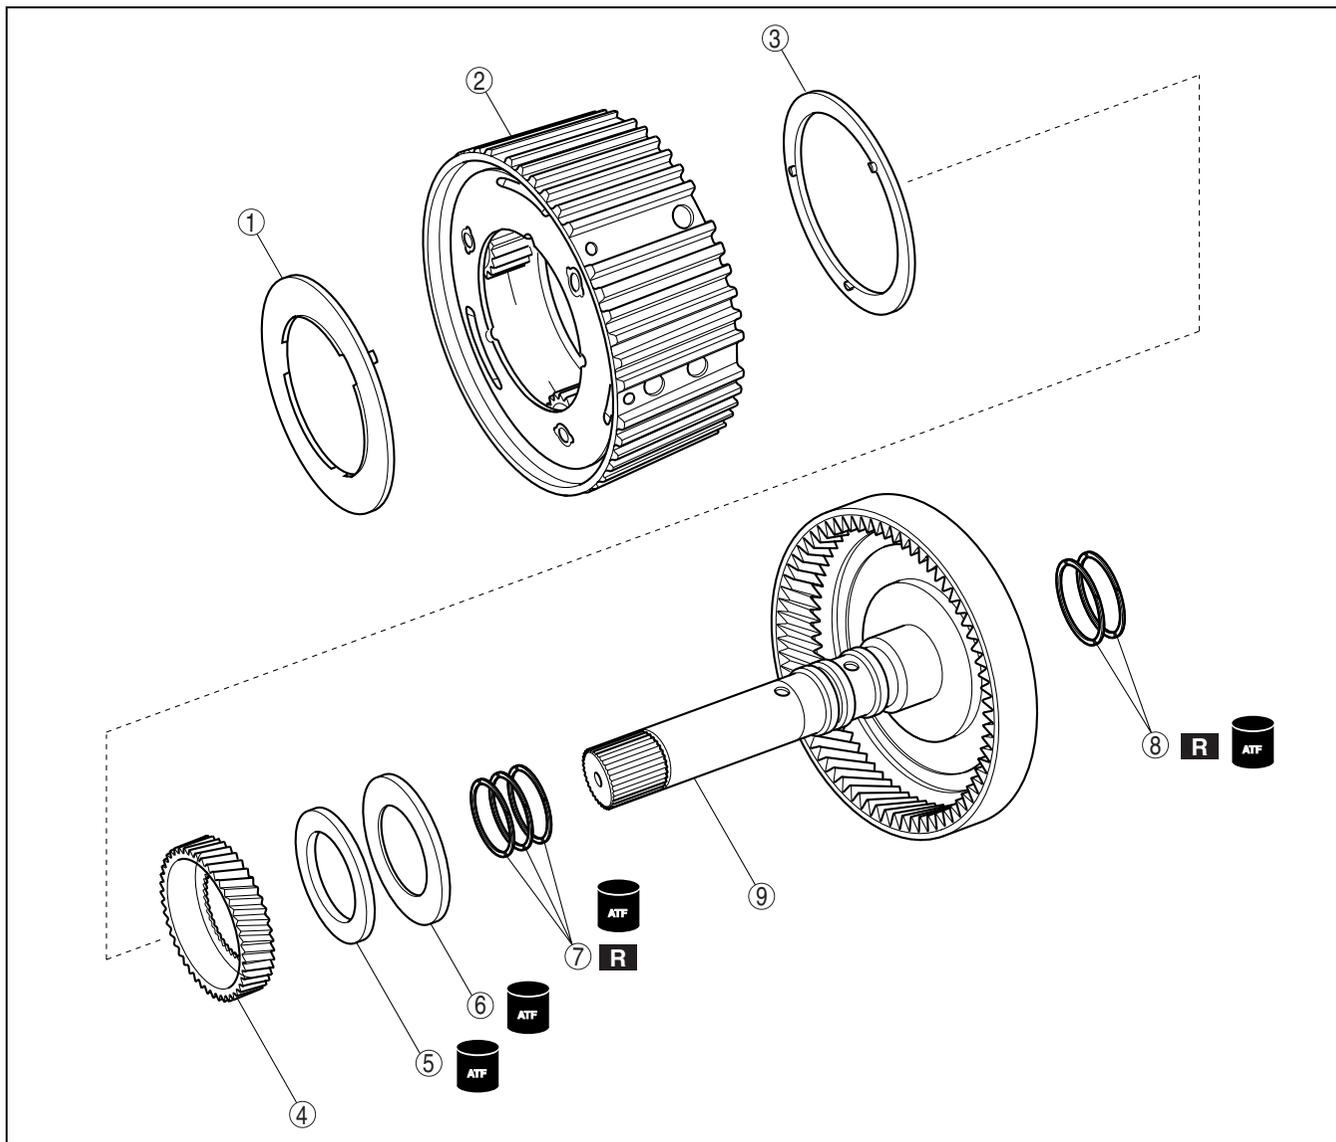

bawuua00000497


1	Thrust washer
2	Front planetary gear component
3	Thrust washer
4	Front planetary sun gear
5	Thrust bearing

6	Bearing race
7	Seal ring
8	Seal ring
9	Input shaft

AUTOMATIC TRANSAXLE


Disassembly Procedure

1. Remove the thrust washer from the front planetary gear component.

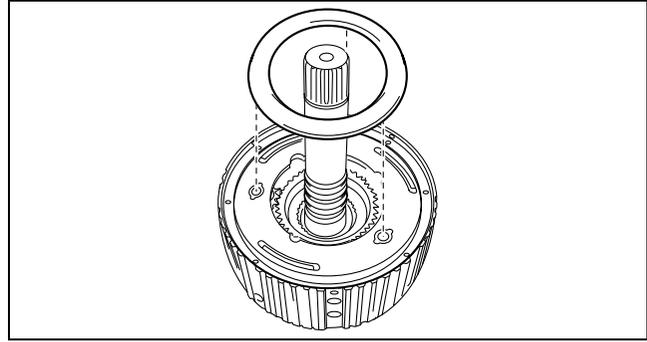

bawua00000498

2. Remove the front planetary gear component from the input shaft.

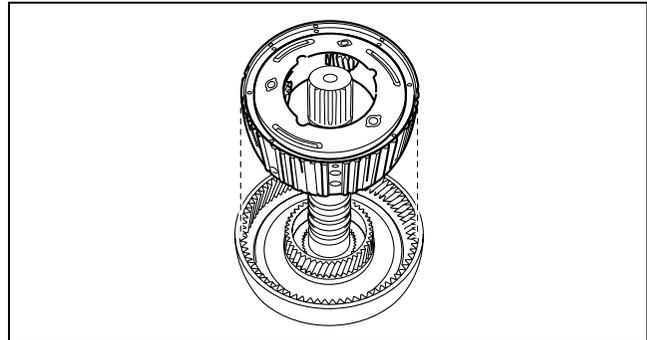


bawua00000499

3. Remove the thrust washer from the front planetary gear component.

Note

- In some cases, the thrust washer may be detached with the input shaft attached.

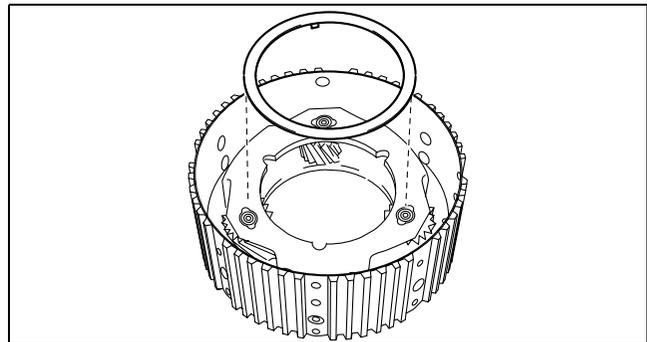


bawua00000500

4. Remove the front planetary sun gear, thrust bearing and the bearing race from the input shaft.


Note

- If it is difficult to remove the bearing race, pry it off gently using a flathead screwdriver.

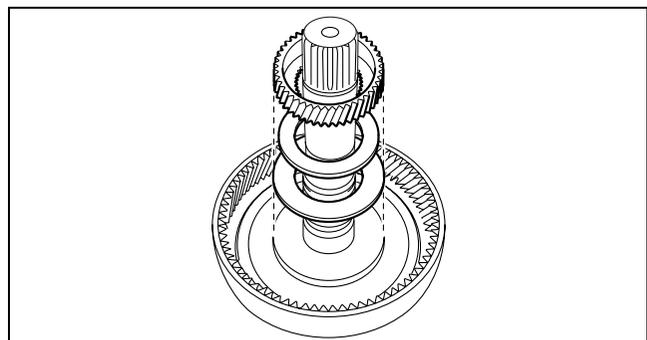


bawua00000501

5. Remove the seal rings from the input shaft.

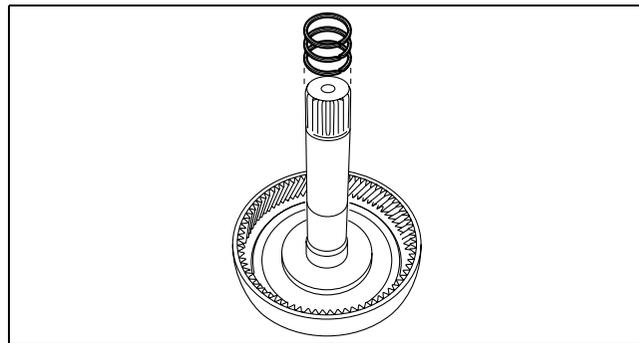

bawuuu00000502

6. Remove the seal rings from the input shaft.

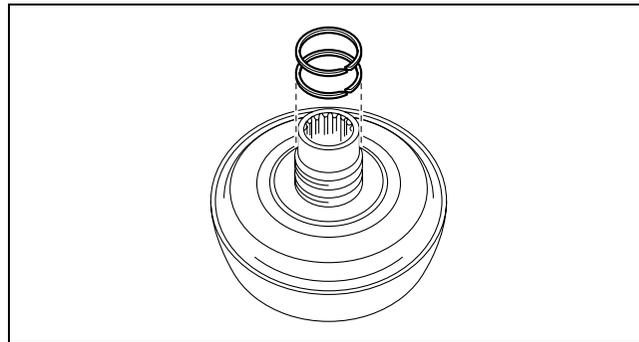

bawuuu00000503

Assembly Procedure

1. Apply ATF to the new seal rings and sliding surface of the input shaft.

Caution


- Do not expand the seal ring too much.
- Be careful not to shorten the seal rings too much, when installing the seal rings.

2. Compress the seal rings as shown in the figure. Then install the seal rings to the input shaft.

Note

- Verify that seal rings rotate smoothly after installing them.

3. Apply ATF to the bearing race.

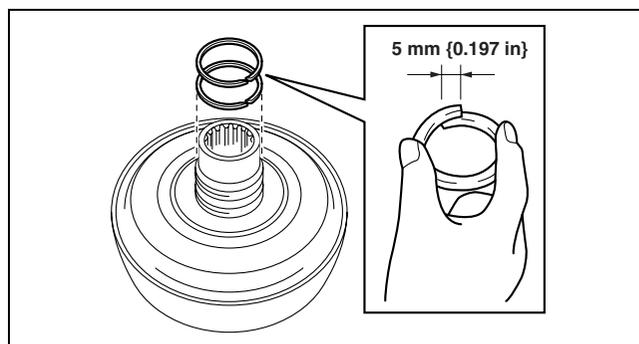


bawuuu00000504

4. Install the bearing race to the input shaft.

Caution

- Apply grease to the mounting surface of the thrust washer so that it does not drop when the front planetary gear component is installed.
- Do not apply grease to the oil holes of the thrust washer.
- Do not drop the thrust washer.


5. Apply grease to the thrust washer.

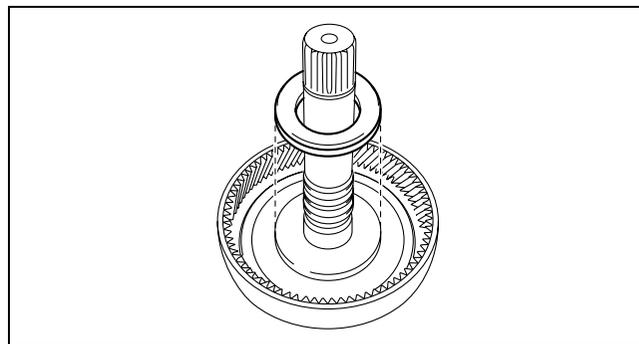

bawuuu00000505


AUTOMATIC TRANSAXLE

6. Install the thrust washer to the front planetary gear component.

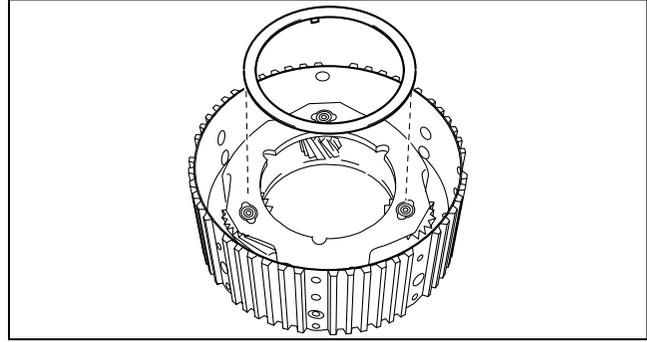


bawuua00000500

7. Install the front planetary gear component to the input shaft.
8. Apply ATF to the thrust bearing.

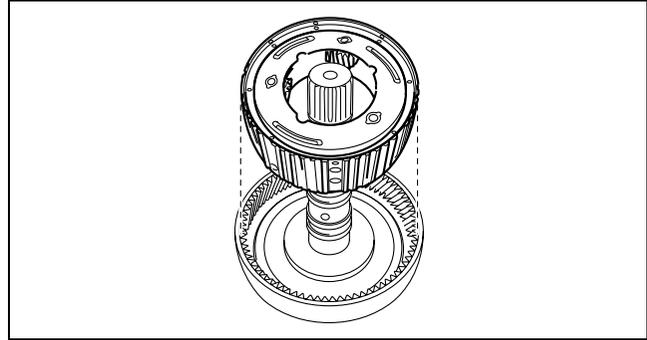

bawuua00000506

9. Install the thrust bearing to the input shaft as shown in the figure.

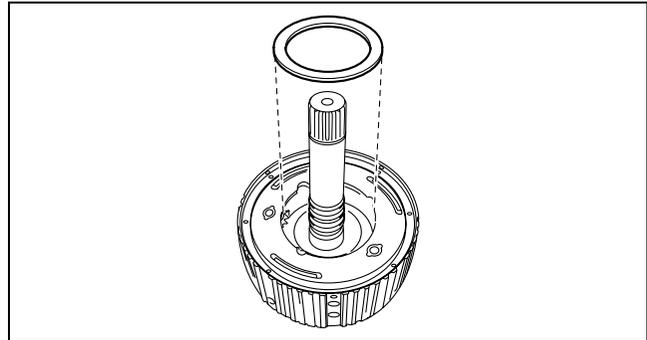


bawuua00000507

10. Install the front planetary sun gear to the input shaft as shown in the figure.
11. Apply ATF to the new seal rings and sliding surface of the input shaft.

Caution

- Do not expand the oil seal rings too much.
- Be careful not to shorten the seal rings too much, when installing the seal rings.

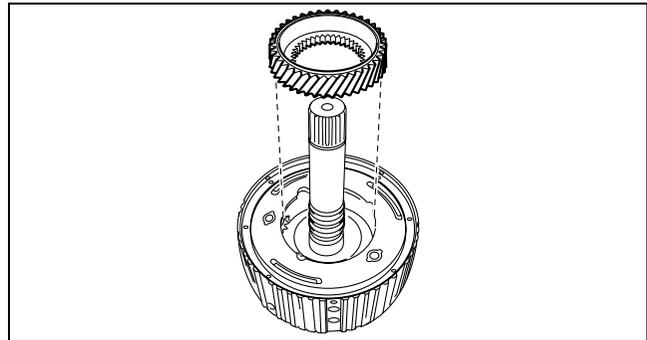

bawuua00000508

AUTOMATIC TRANSAXLE


12. Compress the seal rings as shown in the figure. Then install the seal rings to the input shaft.

Note

- Verify that seal rings rotate smoothly after installing them.

Caution


- **Apply grease to the mounting surface of the thrust washer so that it does not drop when the front planetary gear component is installed.**
- **Do not coat grease to the oil holes of the thrust washer.**

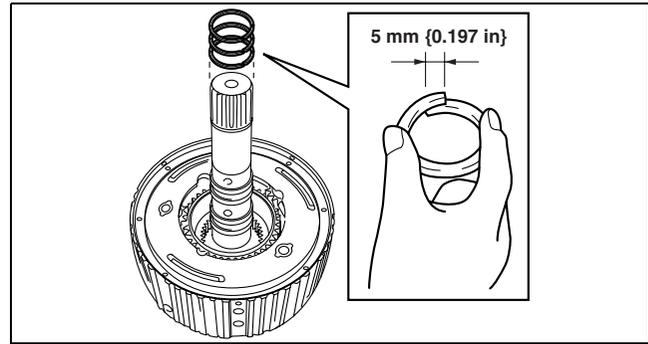

bawuuu00000509

05-17

13. Apply grease to the thrust washer.
14. Install the thrust washer to the front planetary gear component.

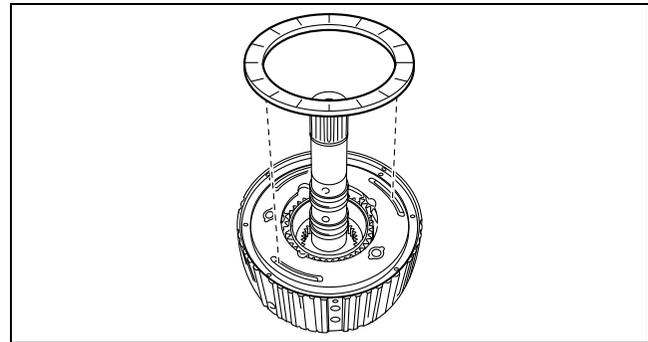


bawuuu00000510

AUTOMATIC TRANSAXLE

C1 CLUTCH COMPONENT DISASSEMBLY

id051700500700

Components

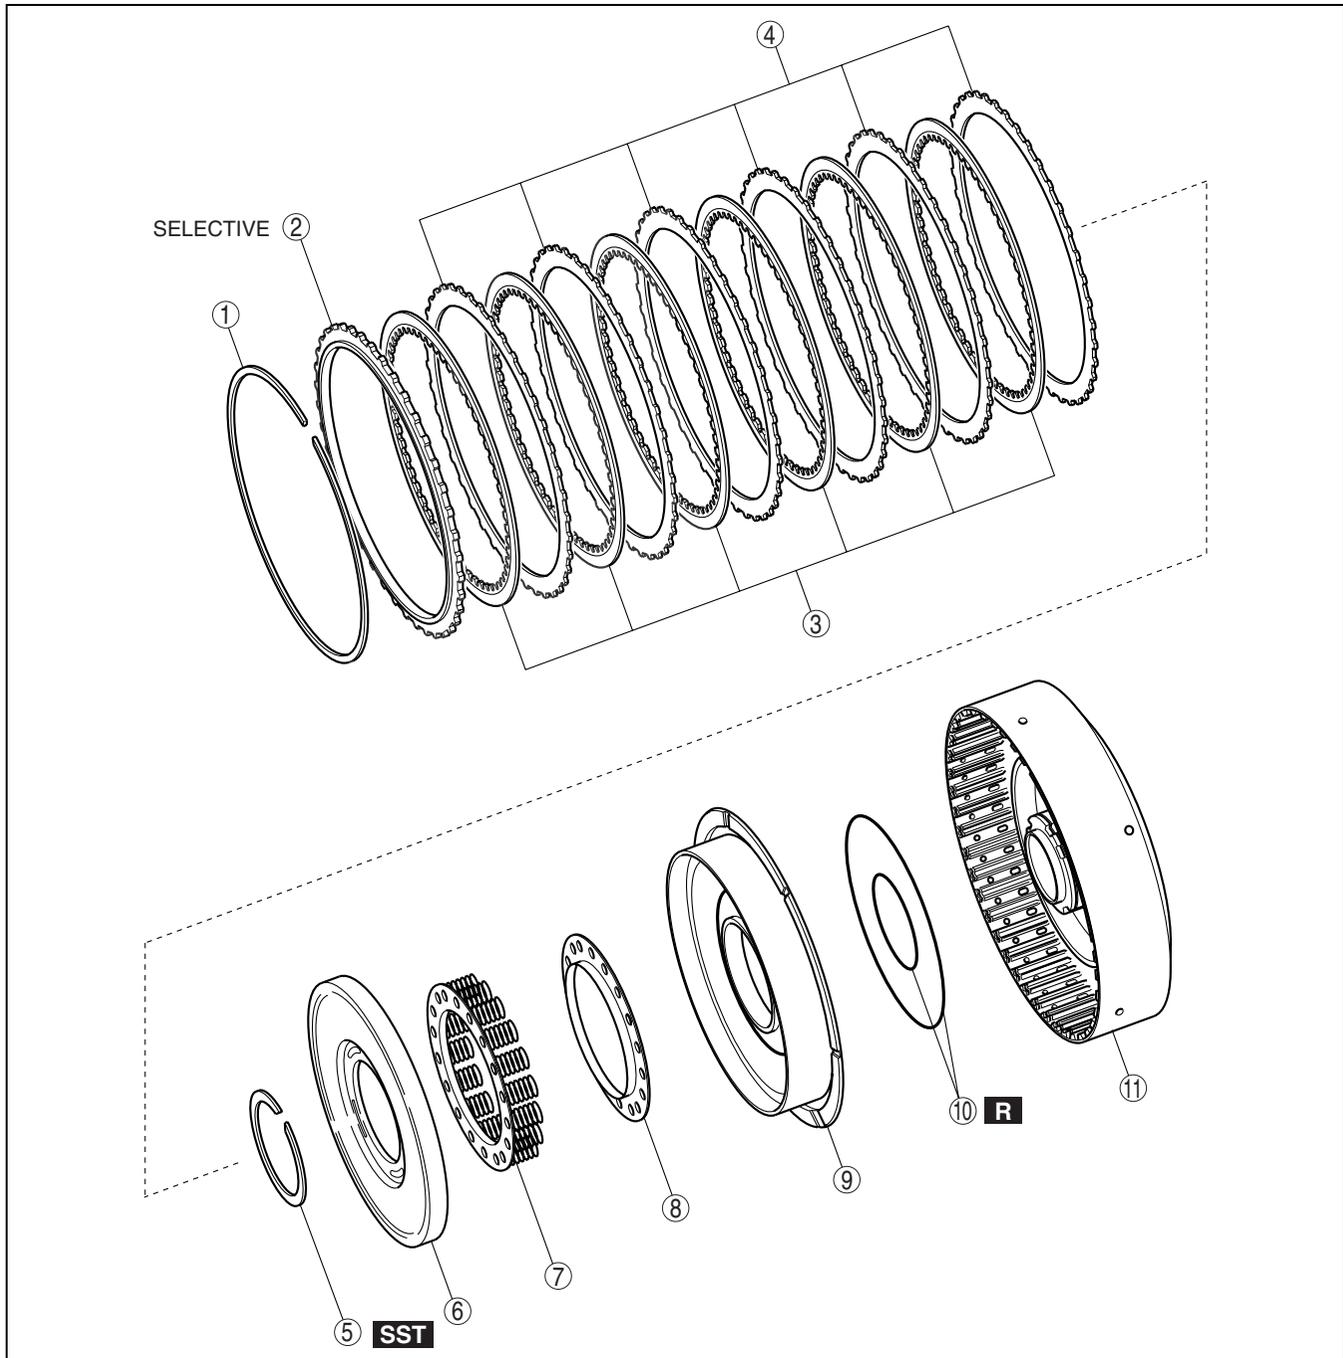


bawuua00000370

1	Snap ring
2	Retaining plate
3	Drive plate
4	Driven plate
5	Snap ring
6	C1 clutch balancer

7	Piston return spring
8	Spring retainer
9	C1 clutch piston
10	O-ring
11	C1 clutch drum

Disassembly Procedure

- Using a flathead screwdriver, remove the snap ring from the C1 clutch drum.

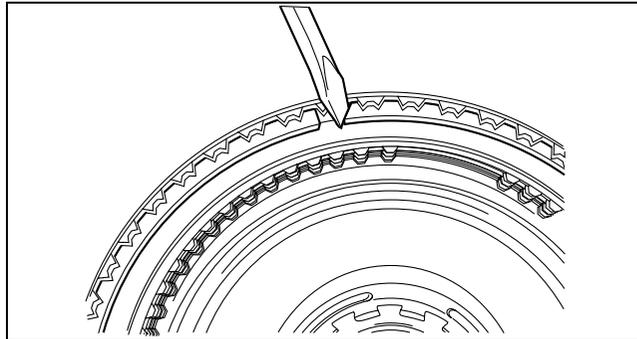


bawuuu00000371

05-17

- Remove the retaining plate, drive and driven plates from the C1 clutch drum.

Note

- Inspect the number of drive and driven plates.

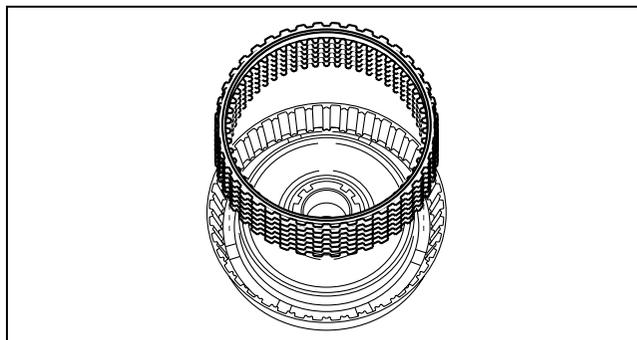

bawuuu00000372

- Place the **SST** on the clutch balancer and compress the return spring with a press.


Caution

- Do not expand the snap ring too much.

- Remove the snap ring using snap ring pliers.


Caution

- Do not damage the seal on the clutch balancer.

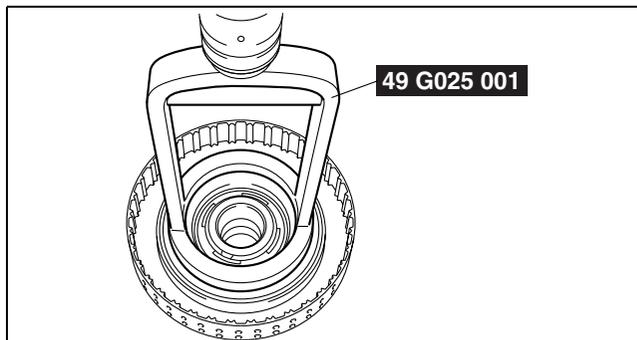

bawuuu00000373

- Remove the clutch balancer, return spring and the retainer from the C1 clutch drum.

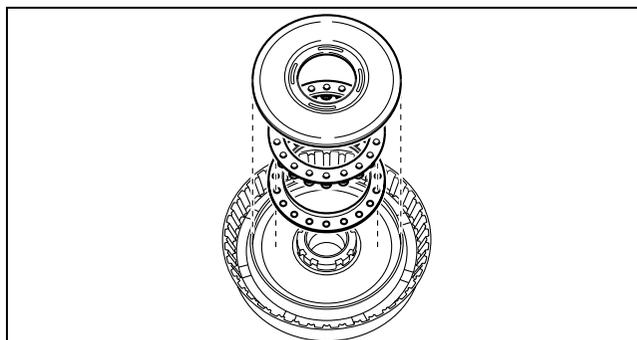

bawuuu00000374

AUTOMATIC TRANSAXLE


6. While pushing the C1 clutch piston by hand, apply compressed air into the oil passage as shown in the figure and remove the forward clutch piston from the C1 clutch drum.

Air pressure

392 kPa {4.0 kgf/cm², 57 psi}


Note

- When applying compressed air, block the one oil passage of the C1 clutch drum as shown in the figure.

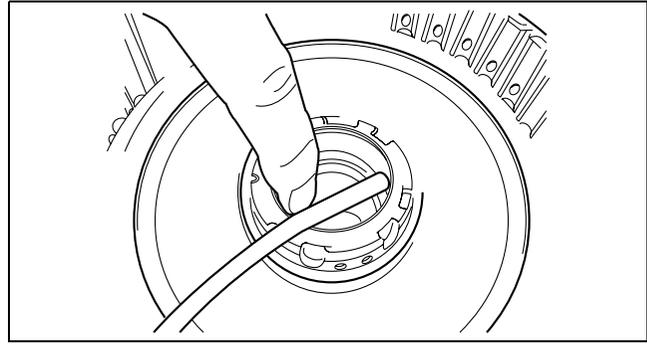

bawuua00000375

7. Remove the O-rings from the C1 clutch drum.

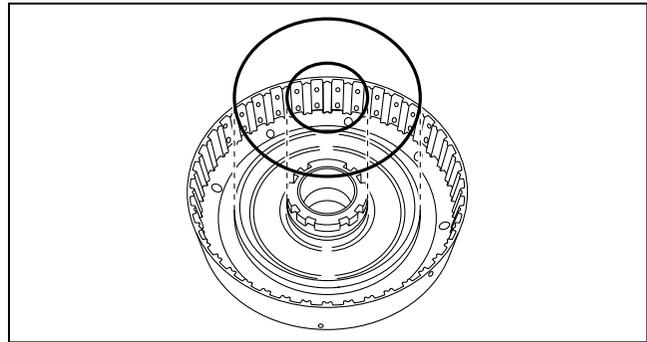


bawuua00000376

C1 CLUTCH INSPECTION

1. Inspect the lining of all drive plates.
 - If the lining is flaking or has changed color, or if it is worn or the print mark is wearing away, replace with a new drive plate. When replacing, inspect the contact surfaces between the retaining plate, driven plate and drive plate. If they are scratched or have changed color, replace with new parts.

Note

- Before replacing with new drive plates, soak them at least **2 h** in ATF.

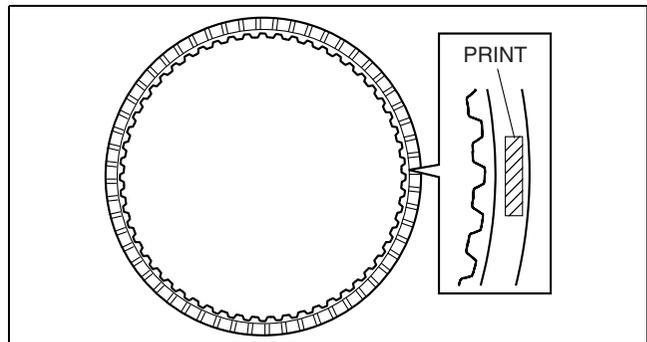


id051700500800

bawuua00000511

2. Using vernier calipers, measure the free length of the piston return spring.

C1 clutch return spring free length Standard: 17.01 mm {0.6697 in}

- If it is less than the specification, replace the piston return spring with a new one.

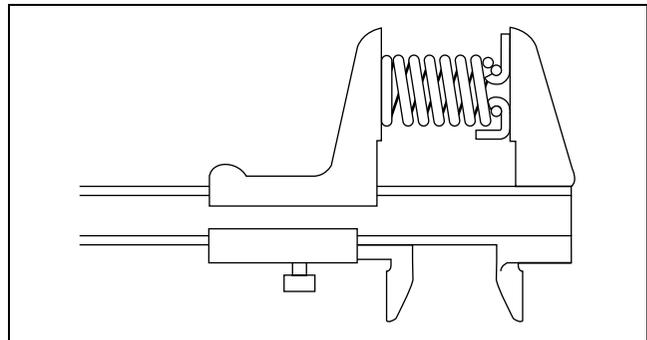


bawuua00000512

AUTOMATIC TRANSAXLE

C1 CLUTCH COMPONENT ASSEMBLY

id051700500900

Components

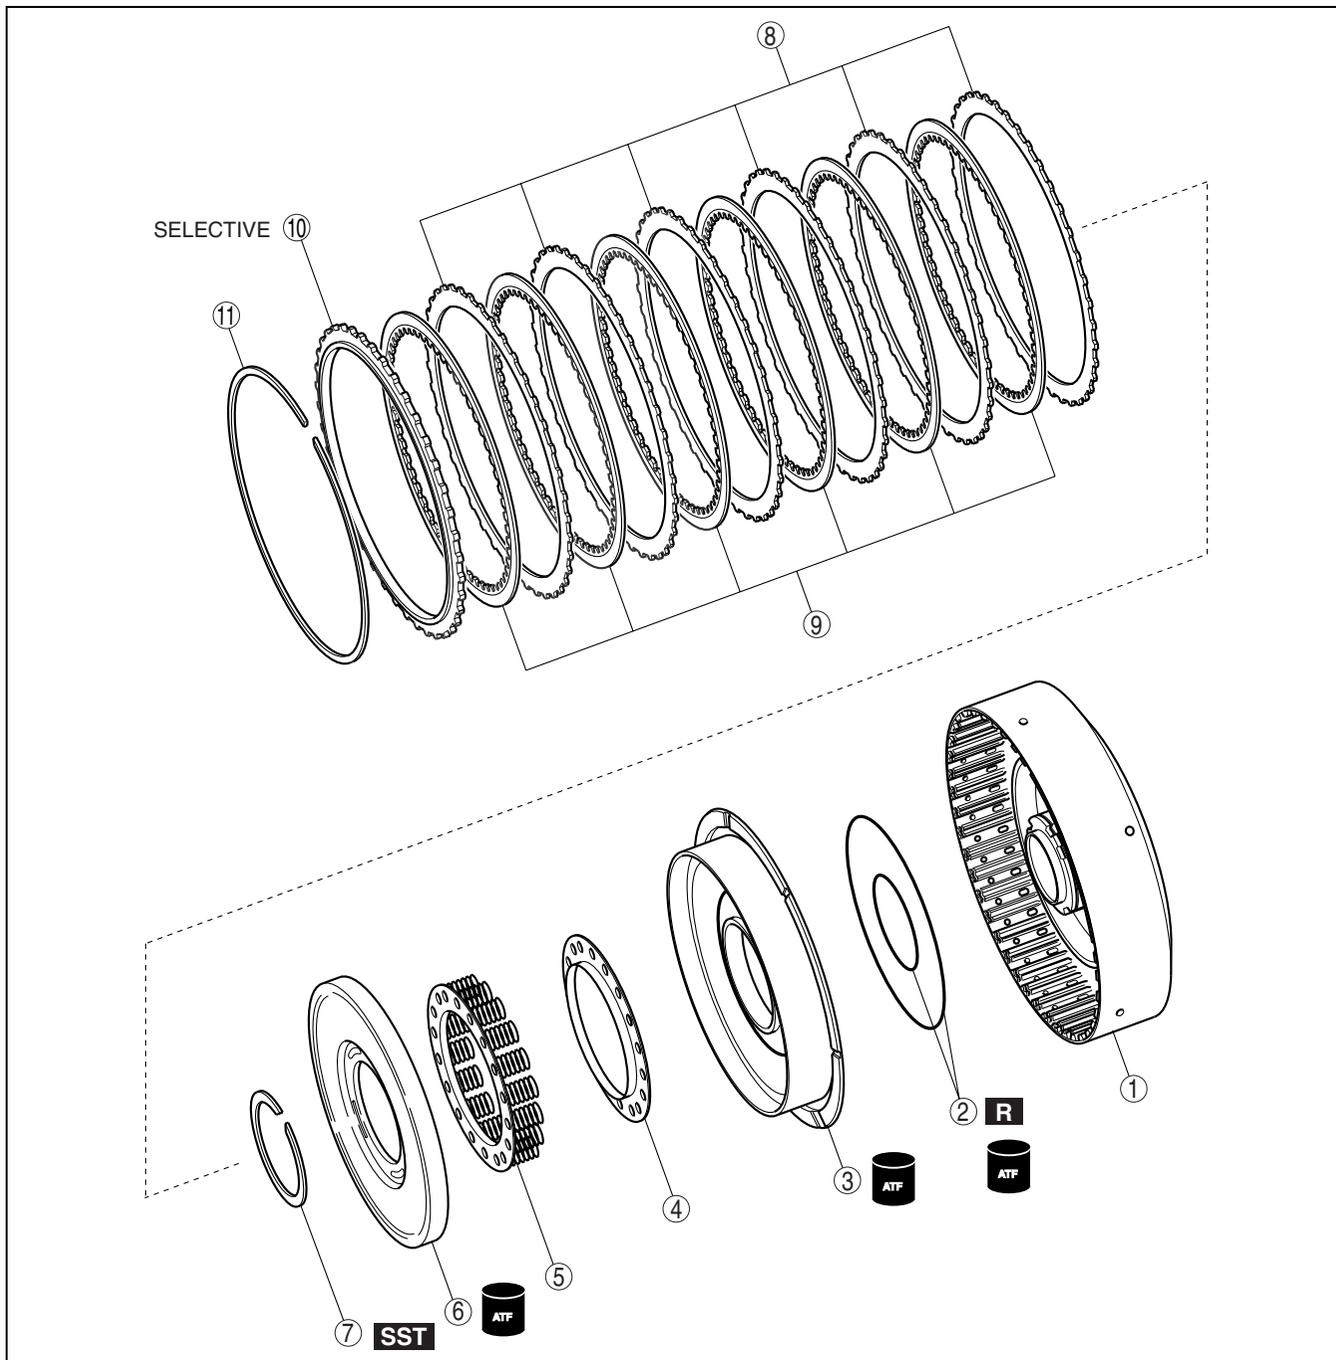

05-17

bawuuu00000377

1	C1 clutch drum
2	O-ring
3	C1 clutch piston
4	Spring retainer
5	Piston return spring
6	C1 clutch balancer

7	Snap ring
8	Driven plate
9	Drive plate
10	Retaining plate
11	Snap ring


AUTOMATIC TRANSAXLE

Assembly Procedure

1. Apply ATF to the new O-rings and the C1 clutch drum.
2. Install the O-rings to the C1 clutch drum.
3. Apply ATF to the sliding surface of the forward clutch piston.

Caution

- Do not damage the seal on the piston and O-ring.

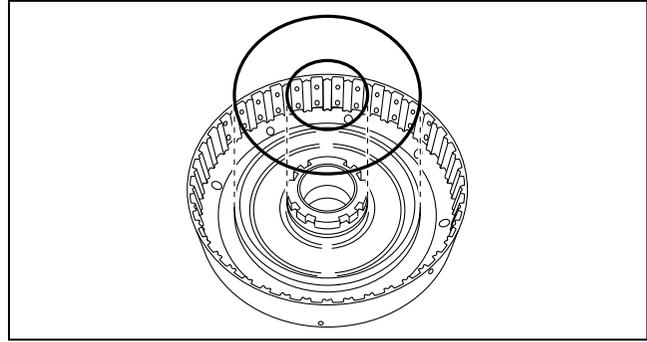


bawuua00000378

4. Install the C1 clutch piston to the C1 clutch drum.
5. Apply ATF to the seal on the clutch balancer.


Caution

- Do not damage the seal on the clutch balancer.

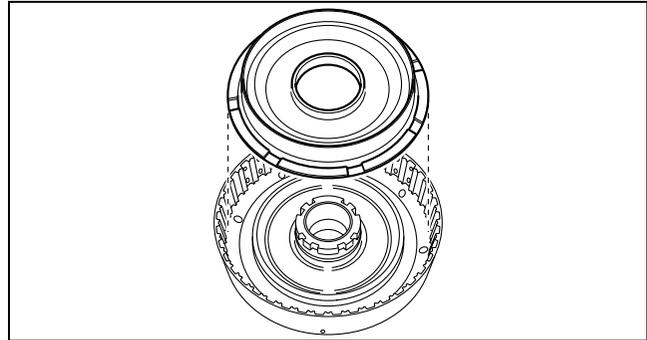

bawuua00000379

6. Install the retainer, return spring and the clutch balancer to the C1 clutch drum.

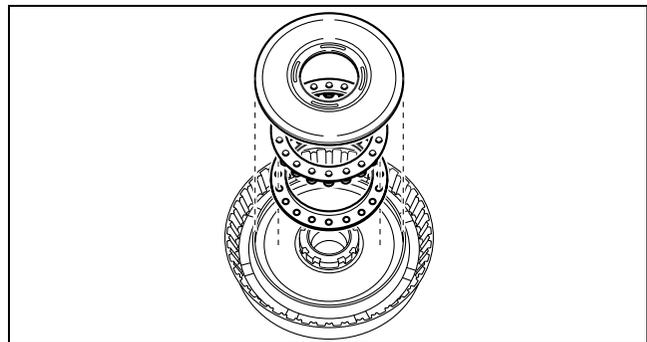


bawuua00000380

7. Place the **SST** on the clutch balancer and compress the return spring component with a press.

Caution

- When installing the snap ring, set the end gap of the snap ring as shown in the figure.
- Do not expand the snap ring too much.

8. Install the snap ring in the groove using snap ring pliers.

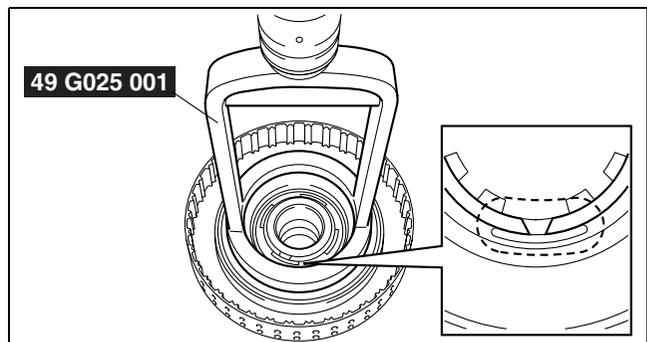

bawuua00000381


9. Install the driven plates, drive plates and the retaining plate in the following order to the C1 clutch drum as shown in the figure.

Six drive plates type

- Driven— Drive— Driven— Drive— Driven—
Drive— Driven— Drive— Driven— Drive—
Driven— Drive— Retaining

Seven drive plates type


- Driven— Drive— Driven— Drive— Driven—
Drive— Driven— Drive— Driven— Drive—
Driven— Drive— Driven— Drive— Retaining

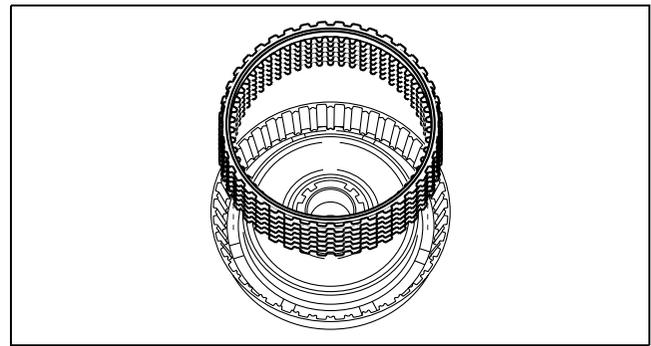

bawuuu00000382

Caution

- **Inspect the number and order of the retaining plate, drive and driven plates.**

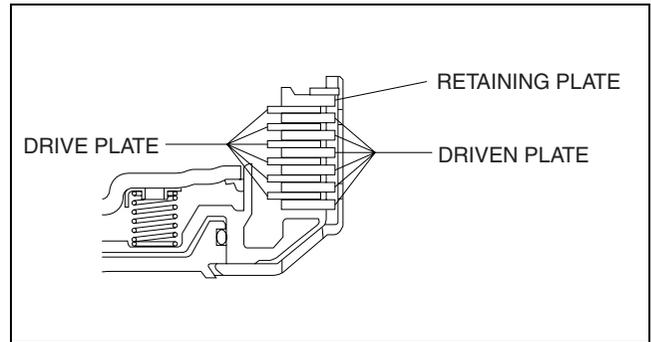


bawuuu00000383

10. Using a flathead screwdriver, install the snap ring in the groove.

Caution

- **When installing the snap ring, set the end gap of the snap ring as shown in the figure.**

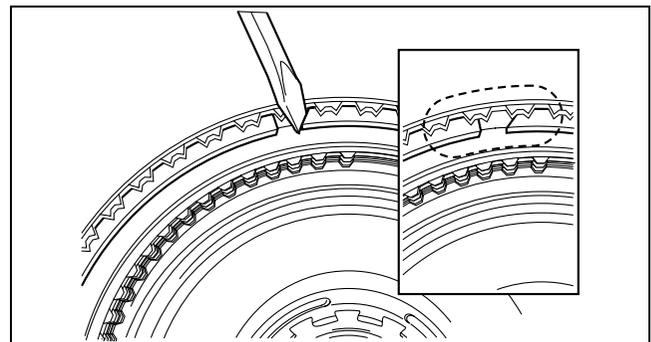

bawuuu00000384

11. Install the C1 clutch component on the input shaft and set a dial indicator as shown in the figure.

12. Apply compressed air as shown in the figure and measure the C1 clutch piston stroke.


Air pressure

200 kPa {2.0 kgf/cm², 29 psi}

C1 clutch piston stroke

1.2 — 1.4 mm {0.047 — 0.055 in}

- If not within the specification, select an appropriate retaining plate.

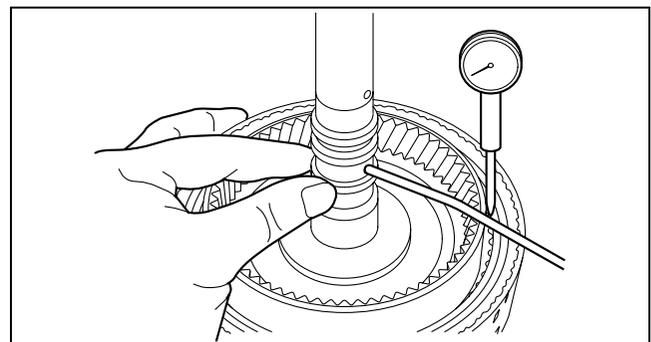

bawuuu00000385

AUTOMATIC TRANSAXLE

Retaining plate size


Identification mark	Thickness (mm {in})
1	2.8 {0.110}
2	2.9 {0.114}
3	3.0 {0.118}
4	3.1 {0.122}
A	3.15 {0.124}
5	3.2 {0.126}
B	3.25 {0.128}
6	3.3 {0.130}
C	3.35 {0.132}
7	3.4 {0.134}
8	3.5 {0.138}

AUTOMATIC TRANSAXLE

COUNTER DRIVE GEAR DISASSEMBLY/ASSEMBLY

id051700501000

Components

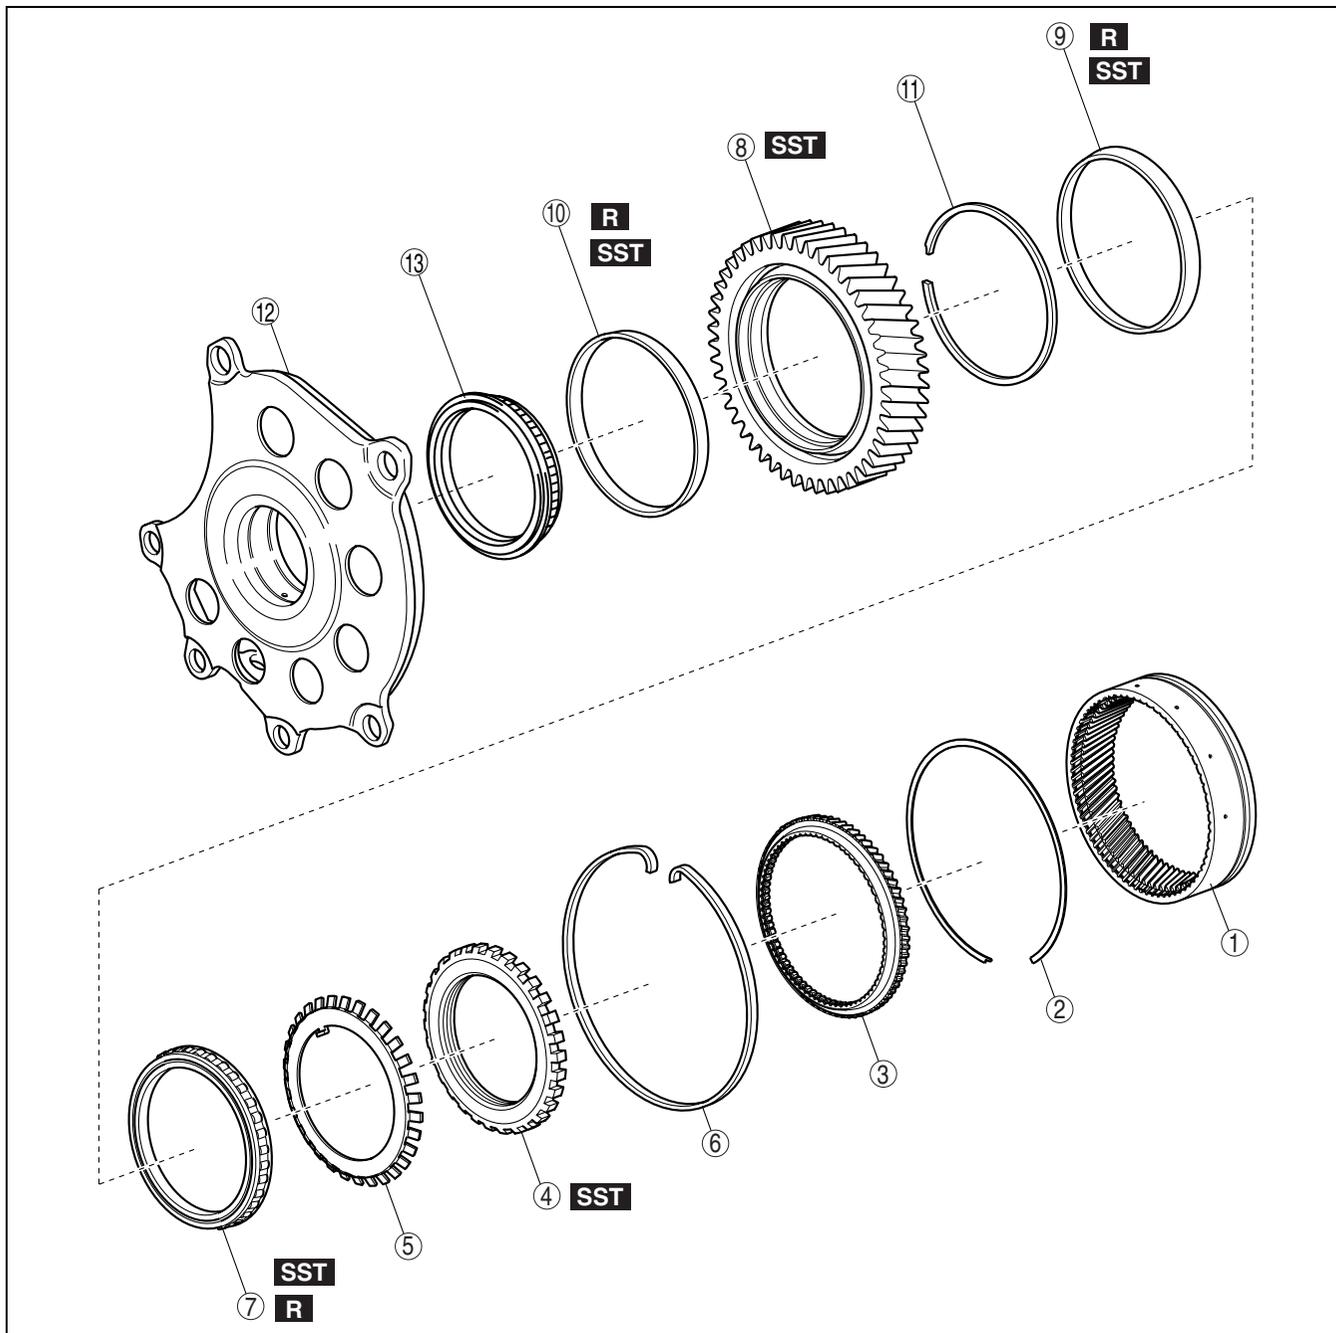

05-17

bawuu00000386


1	Rear planetary ring gear
2	Snap ring
3	Rear planetary ring gear flange
4	Nut
5	Washer
6	Snap ring
7	Tapered roller bearing

8	Counter drive gear
9	Bearing race
10	Bearing race
11	Snap ring
12	Center support
13	Tapered roller bearing

AUTOMATIC TRANSAXLE


Disassembly Procedure

1. Using the snap ring pliers, loosen the snap ring and remove the rear planetary ring gear.

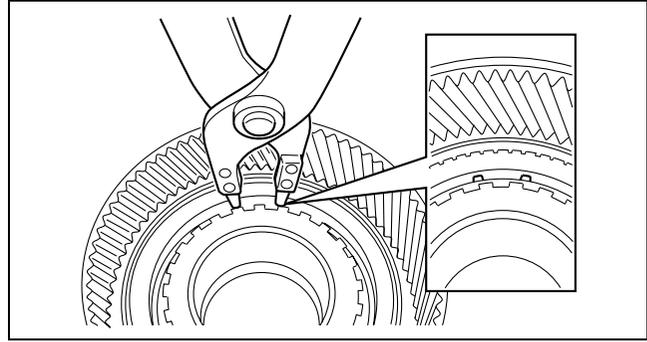

bawuua00000387

2. Using a flathead screwdriver, remove the snap ring from the rear planetary ring gear.
3. Remove the ring gear flange from the rear planetary ring gear.

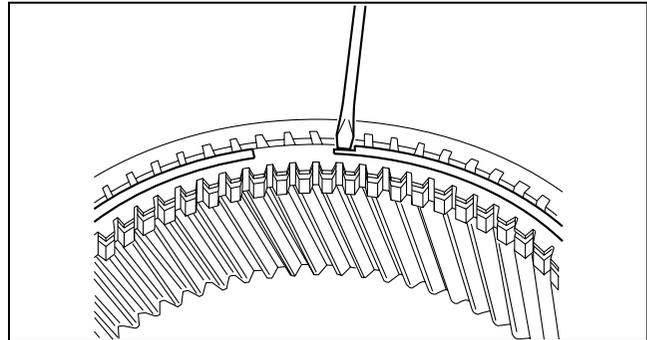


bawuua00000388

4. Using a flathead screwdriver and hammer, pry back the crimps locking the washer.


Caution

- If the lockwasher crimps are not completely pried back, the tool cannot fit over the bolt properly and the bolt cannot be loosened.

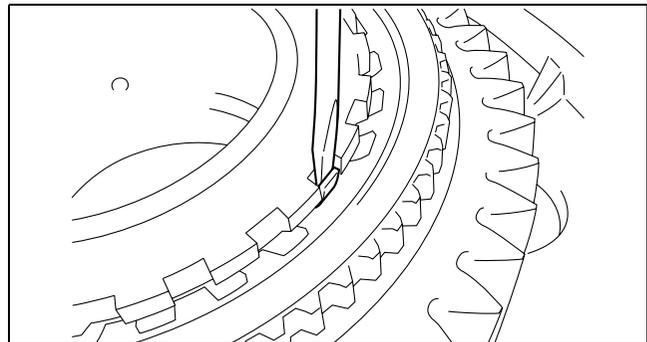

bawuua00000389

5. Using the SST, remove the nut and the washer.

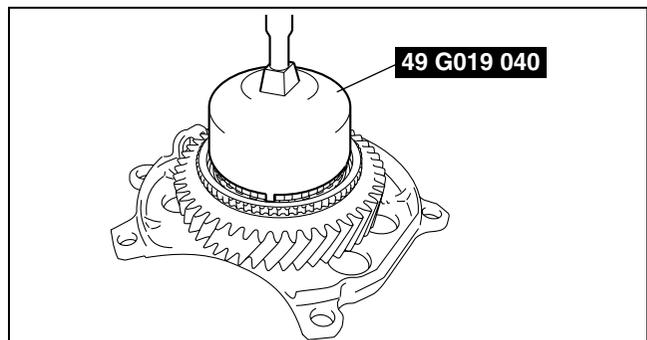


bawuua00000390

AUTOMATIC TRANSAXLE

- Using a flathead screwdriver, remove the snap ring from the counter drive gear.

Caution


- Do not drop the tapered roller bearing.

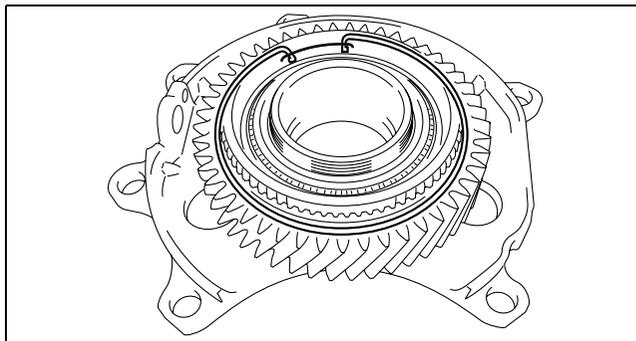

bawuuu00000391


05-17

- Using the **SST**, remove the counter drive gear and tapered roller bearing.

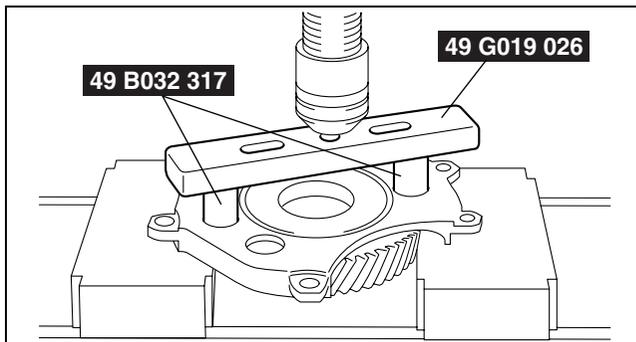


bawuuu00000392

- Using a flathead screwdriver and hammer, remove the bearing race inner from the counter drive gear.

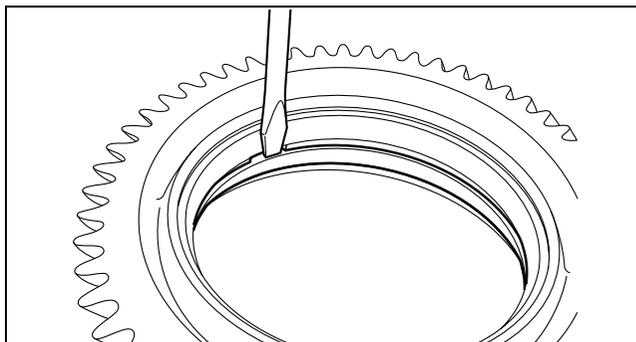

bawuuu00000393


- Using a flathead screwdriver and hammer, remove the bearing race outer from the counter drive gear.

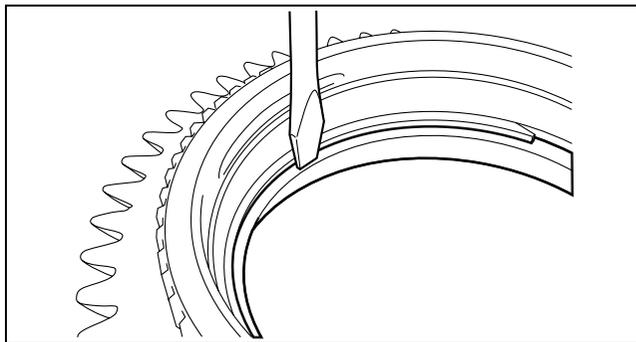

bawuuu00000394

AUTOMATIC TRANSAXLE


- Using a flathead screwdriver, remove the snap ring from the counter drive gear.

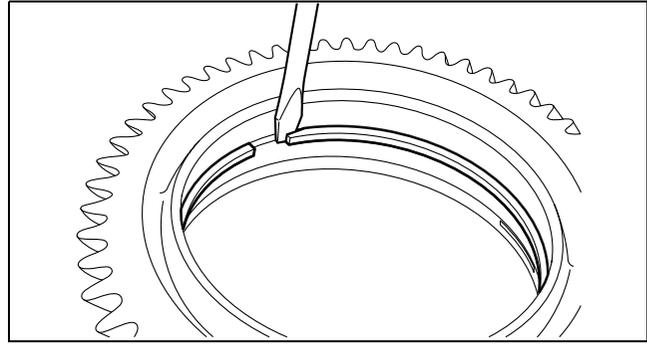

bawuua00000395

Note

- The tapered roller bearing cannot be removed from the center support.
- The tapered roller bearing and center support must be replaced as a set.

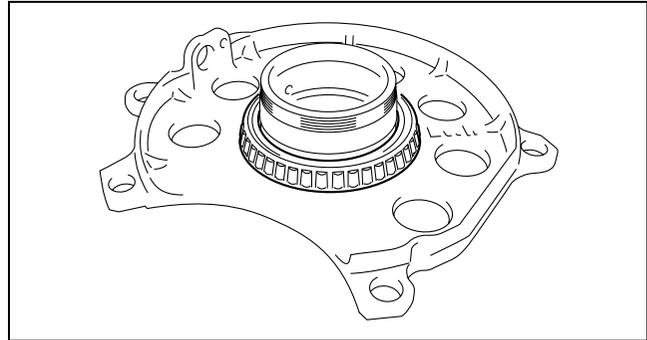

bawuua00000396

Assembly Procedure

Note


- The tapered roller bearing and bearing race outer must be replaced as a set.

- Using the **SST** and a press, install the tapered roller bearing to the center support.

Substitution SST


- 49 L033 101**

Outer diameter: 70—76 mm {2.76—2.99 in}
Inner diameter: 68.2 mm {2.69 in} or more
Plate thickness: 1 mm {0.04 in} or more

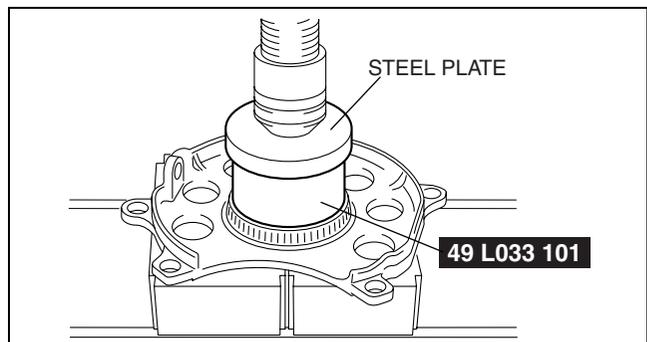

bawuua00000397


- Using a flathead screwdriver, install the hole snap ring to the counter drive gear.

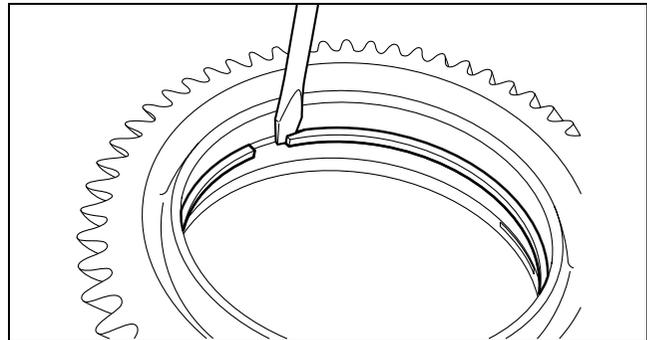

bawuua00000395

AUTOMATIC TRANSAXLE

3. Using the old bearing race and the steel plate as shown in the figure, install the new bearing race outer to the counter drive gear.

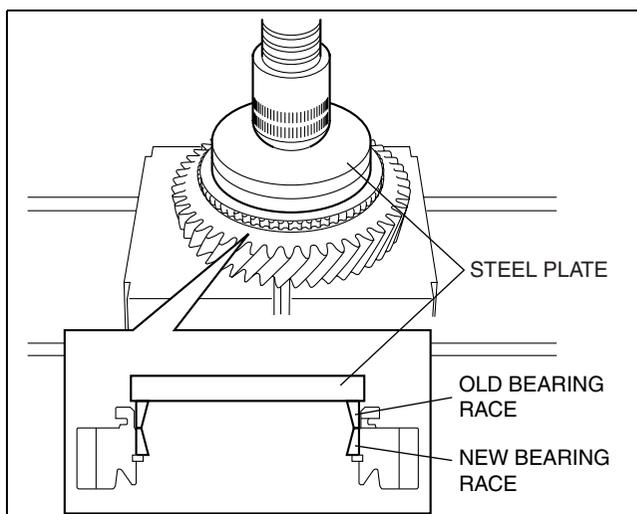


bawuuu00000398

4. Using the old bearing race and the steel plate as shown in the figure, install the new bearing race inner to the counter drive gear.

Caution

- Do not press fit the bearing too deeply.
- Verify that the bearing is press fit to allow the installation of the nut.

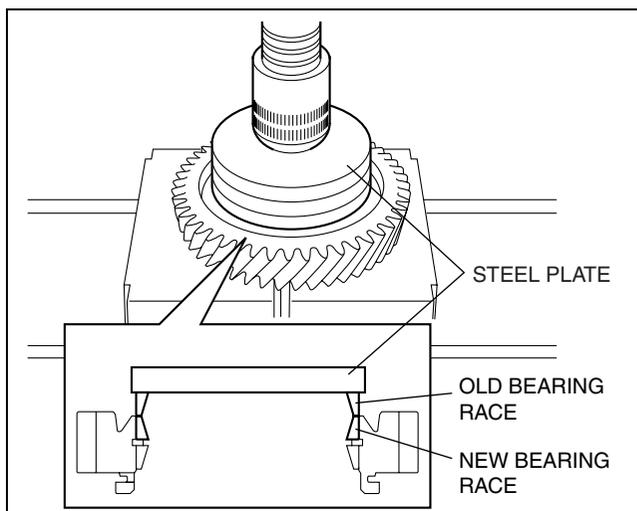

bawuuu00000399


5. Using the **SST** and a press, install the counter drive gear with the tapered roller bearing.

Substitution SST

- **49 W027 001**
Outer diameter: 70— 81 mm {2.76— 3.18 in}
Plate thickness: 1 mm {0.04 in} or more


Note

- Verify that the claw of the washer is fit into the groove on the center support.
- Verify that the nut is installed in the correct direction.

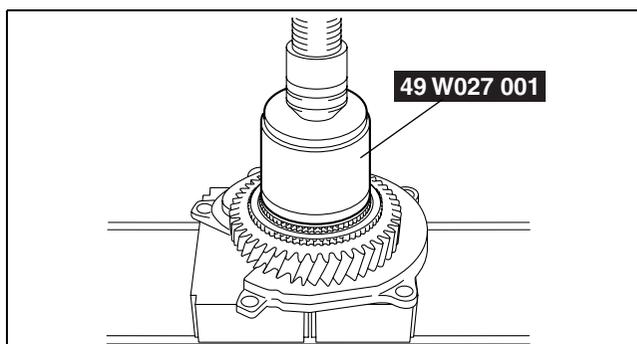

bawuuu00000400

6. Install the washer and nut.
7. Using the **SST**, tighten the nut.

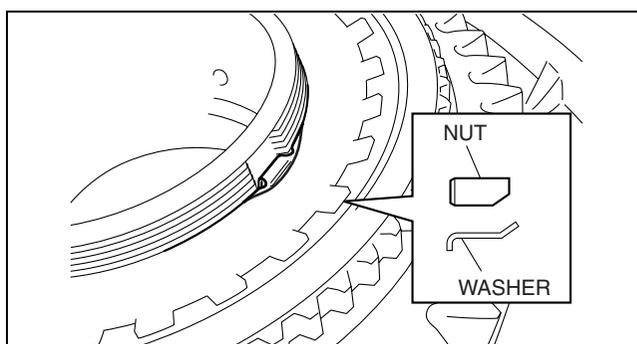


bawuuu00000401

05-17

AUTOMATIC TRANSAXLE

8. Using a spring balance, measure the starting and rotating torque of the counter drive gear.

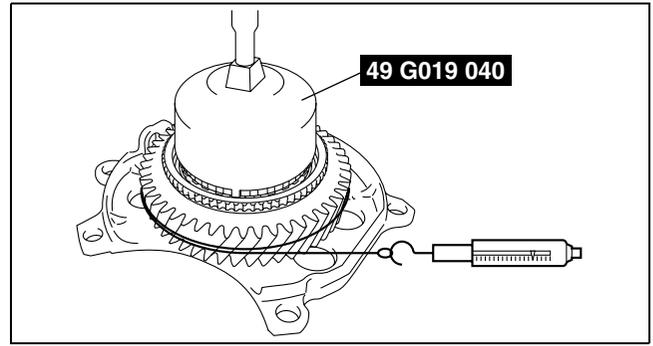


bawuua00000402

Counter drive gear starting and rotating torque

N·m {kgf·cm, in·lbf}


Bearing	Starting torque	Rotating torque
New	0.40 — 0.50 {4.08 — 5.09, 3.55 — 4.41}	0.40 — 0.48 {4.08 — 4.89, 3.55 — 4.24}
Reused	0.20 — 0.25 {2.04 — 2.54, 1.77 — 2.20}	0.20 — 0.24 {2.04 — 2.44, 1.77 — 2.11}

- Adjust the starting and rotating torque by tightening the nut.
 - If the starting and rotating torque does not fall within the specification, loosen the nut and retighten the nut to adjust torque.
9. Using a flathead screwdriver and hammer, crimp down the washer.

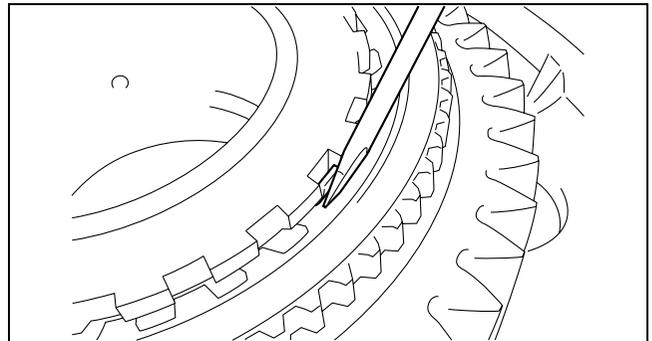


bawuua00000403

10. Using a flathead screwdriver, install the hole snap ring to the counter drive gear.
11. Install the rear planetary ring gear flange to the rear planetary ring gear.

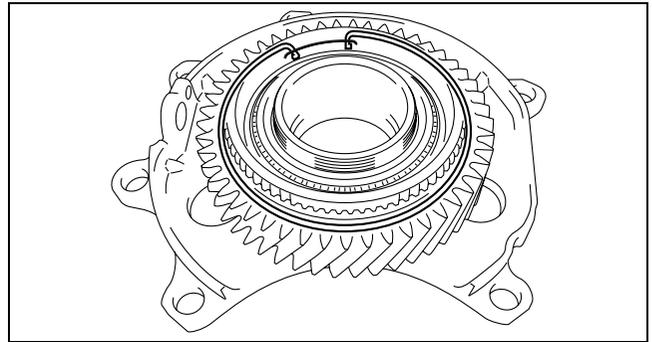

bawuua00000391


12. Using a flathead screwdriver, install the snap ring in the groove.
13. Install the rear planetary ring gear to the counter drive gear.

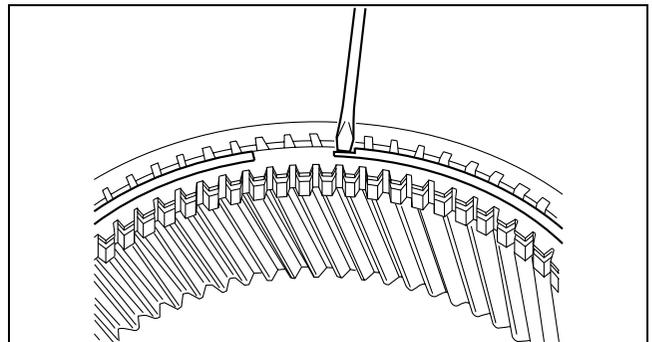

bawuua00000388

AUTOMATIC TRANSAXLE

- Using the snap ring pliers, while loosening the snap ring, install the rear planetary ring gear.

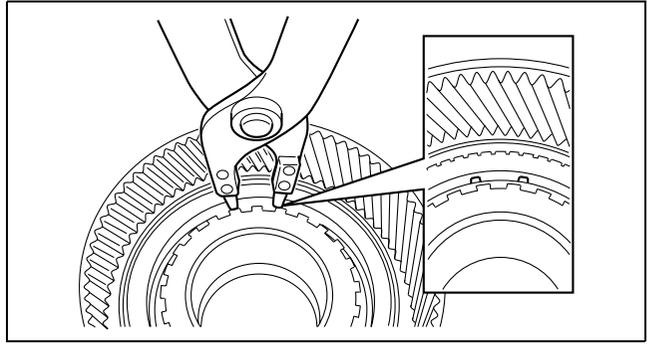


bawuuu00000387

05-17

ONE-WAY CLUTCH COMPONENT INSPECTION

- Hold the one-way clutch component in place. Verify that the rear planetary gear rotates when turned clockwise and does not rotate when turned counterclockwise.

id051700501100

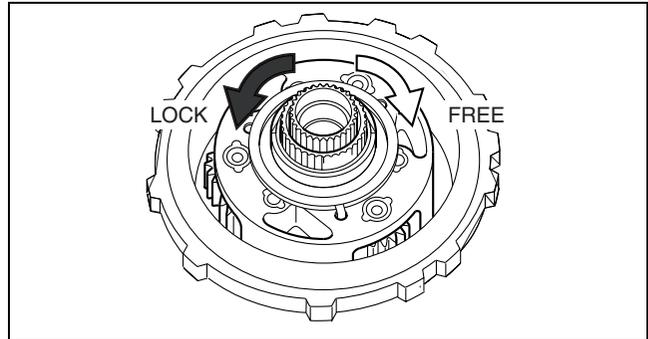


bawuuu00000513

AUTOMATIC TRANSAXLE

REAR PLANETARY GEAR COMPONENT AND ONE-WAY CLUTCH COMPONENT DISASSEMBLY

id051700501200

Components

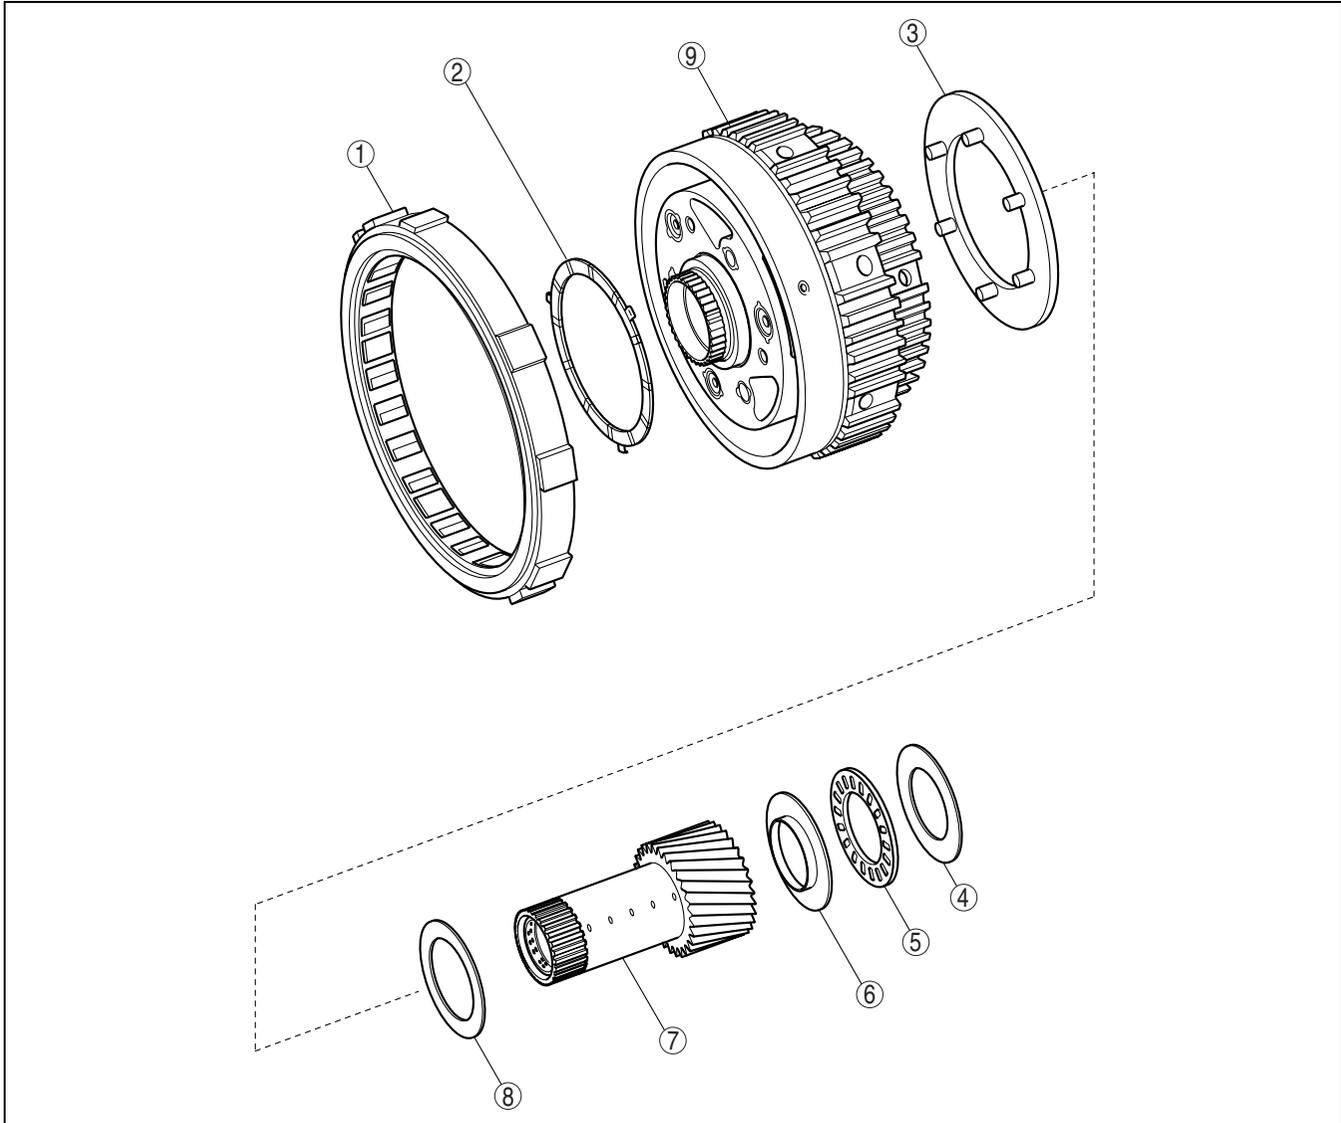


bawuua00000514

1	One-way clutch component
2	Thrust washer
3	Thrust washer
4	Bearing race
5	Thrust bearing

6	Bearing race
7	Planetary sun gear
8	Bearing race
9	Rear planetary gear component


Disassembly Procedure

1. Remove the one-way clutch component from the rear planetary gear component.

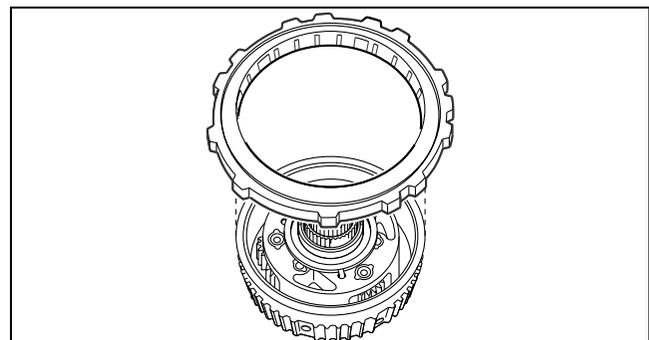

bawuua00000515


2. Remove the thrust washer from the rear planetary gear component.

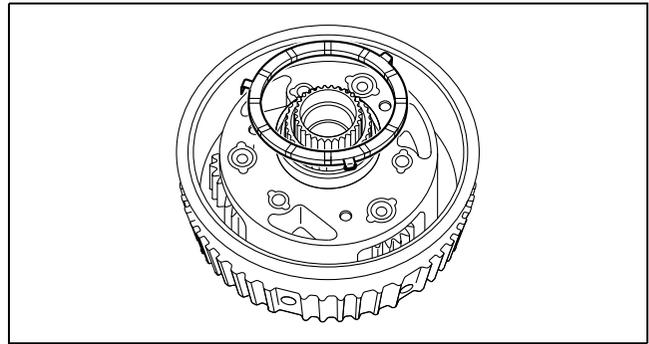

bawuuu00000516

05-17

3. Remove the thrust washer from the rear planetary gear component.

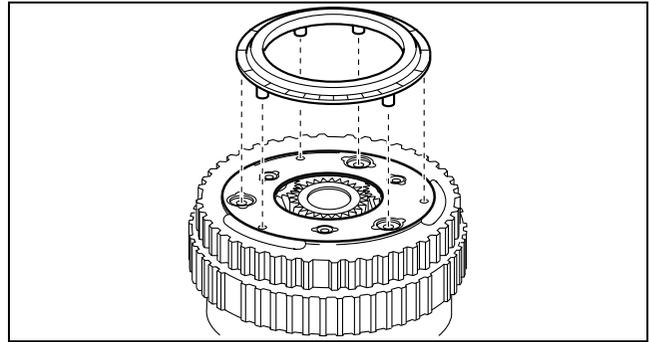


bawuuu00000517

4. Remove the planetary sun gear and bearing races from the rear planetary gear component.

Note

- If it is difficult to remove the bearing race, remove it gently using a flathead screwdriver.

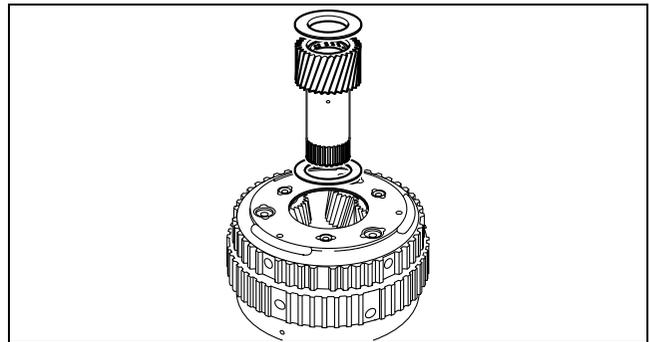

bawuuu00000518

REAR PLANETARY GEAR INSPECTION

id051700501300

Note

- Measure at different places and take an average.


1. Using a dial indicator, measure the inner diameter of the rear planetary gear bushings.

Rear planetary gear bushing inner diameter

Front side: 33.26 — 33.286 mm {1.3095 — 1.3104 in}

Rear side: 33.26 — 33.286 mm {1.3095 — 1.3104 in}

- If it exceeds the specification, replace the rear planetary gear component with a new one.
- When the rear planetary gear component is replaced, inspect the contact surface opposed to the planetary sun gear.
- If the surface of it is scratched or has changed color, replace the planetary sun gear with a new one.

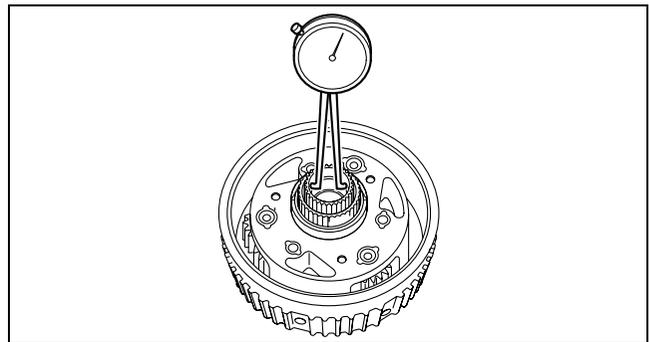

bawuuu00000519

AUTOMATIC TRANSAXLE


2. Using a dial indicator, measure the inner diameter of the planetary sun gear bushings.

Rear planetary sun gear bushing inner diameter

Front side: 24.2 — 24.226 mm {0.9528 — 0.9537 in}

Rear side: 24.2 — 24.226 mm {0.9528 — 0.9537 in}

- If it exceeds the specification, replace the planetary sun gear component with a new one.
- When the planetary sun gear component is replaced, inspect the contact surface opposed to the intermediate shaft.
- If the surface of it is scratched or has changed color, replace the intermediate shaft with a new one.

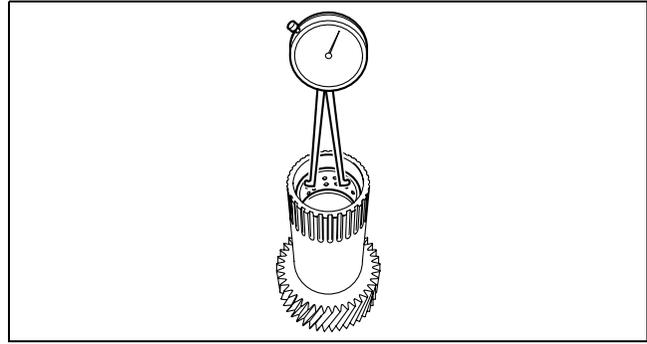


bawuua00000520

REAR PLANETARY GEAR COMPONENT AND ONE-WAY CLUTCH COMPONENT ASSEMBLY

id051700501400

Components

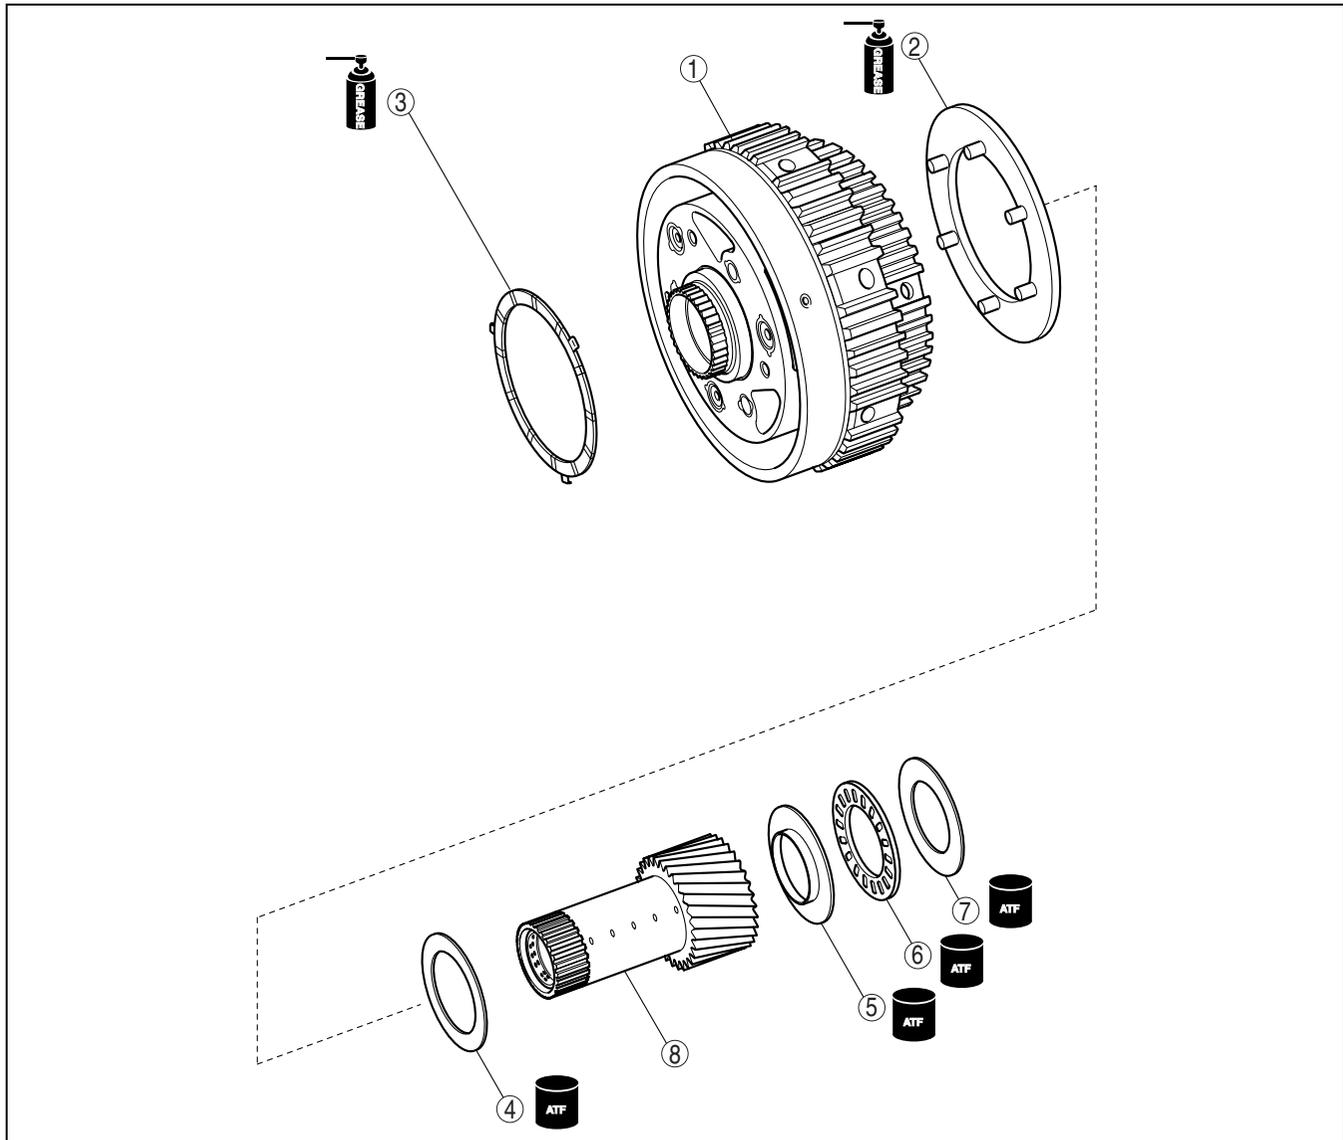

bawuua00000521

1	Rear planetary gear component
2	Thrust washer
3	Thrust washer
4	Bearing race

5	Bearing race
6	Thrust bearing
7	Bearing race
8	Planetary sun gear

Assembly Procedure

Caution

- Apply grease to the mounting surface of the thrust washer so that it will not drop when the rear planetary gear component is installed.
- Do not apply grease to the oil holes of the thrust washer.

1. Apply grease to the thrust washer.
2. Install the thrust washer to the rear planetary gear component.

Caution


- Apply grease to the mounting surface of the thrust washer so that it will not drop when the rear planetary gear component is installed.
- Do not apply grease to the oil holes of the thrust washer.

3. Apply grease to the thrust washer.
4. Install the thrust washer to the rear planetary gear component.


Caution

- Apply grease to the mounting surface of the thrust washer so that it will not drop when the rear planetary gear component is installed.
- Do not apply grease to the oil holes of the thrust washer.


5. Apply ATF to the bearing races and the thrust bearing.
6. Install the bearing races to the planetary sun gear as shown in the figure.
7. Install the planetary sun gear to the rear planetary gear component.

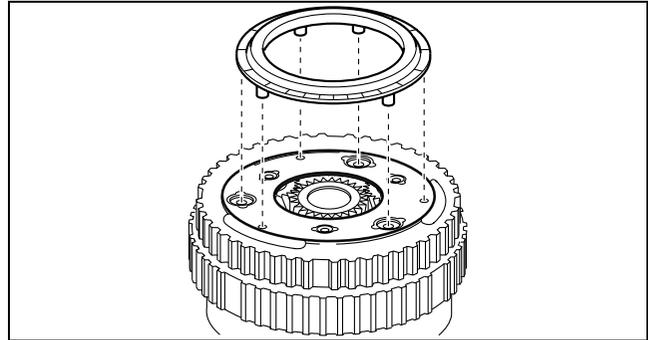

bawuuu00000522

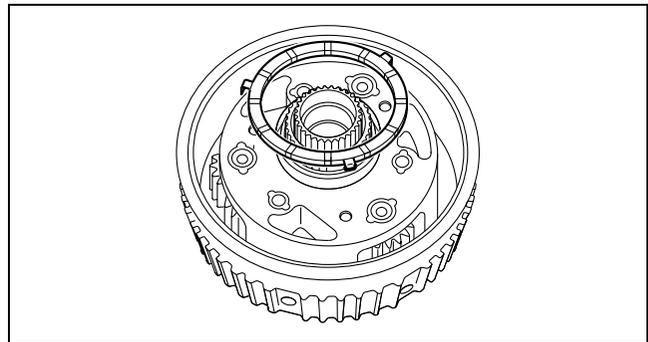

bawuuu00000523

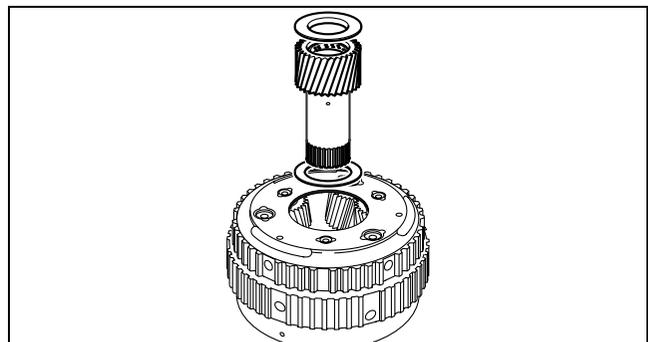

bawuuu00000524


05-17

AUTOMATIC TRANSAXLE

C2 CLUTCH COMPONENT DISASSEMBLY

id051700501500

Components

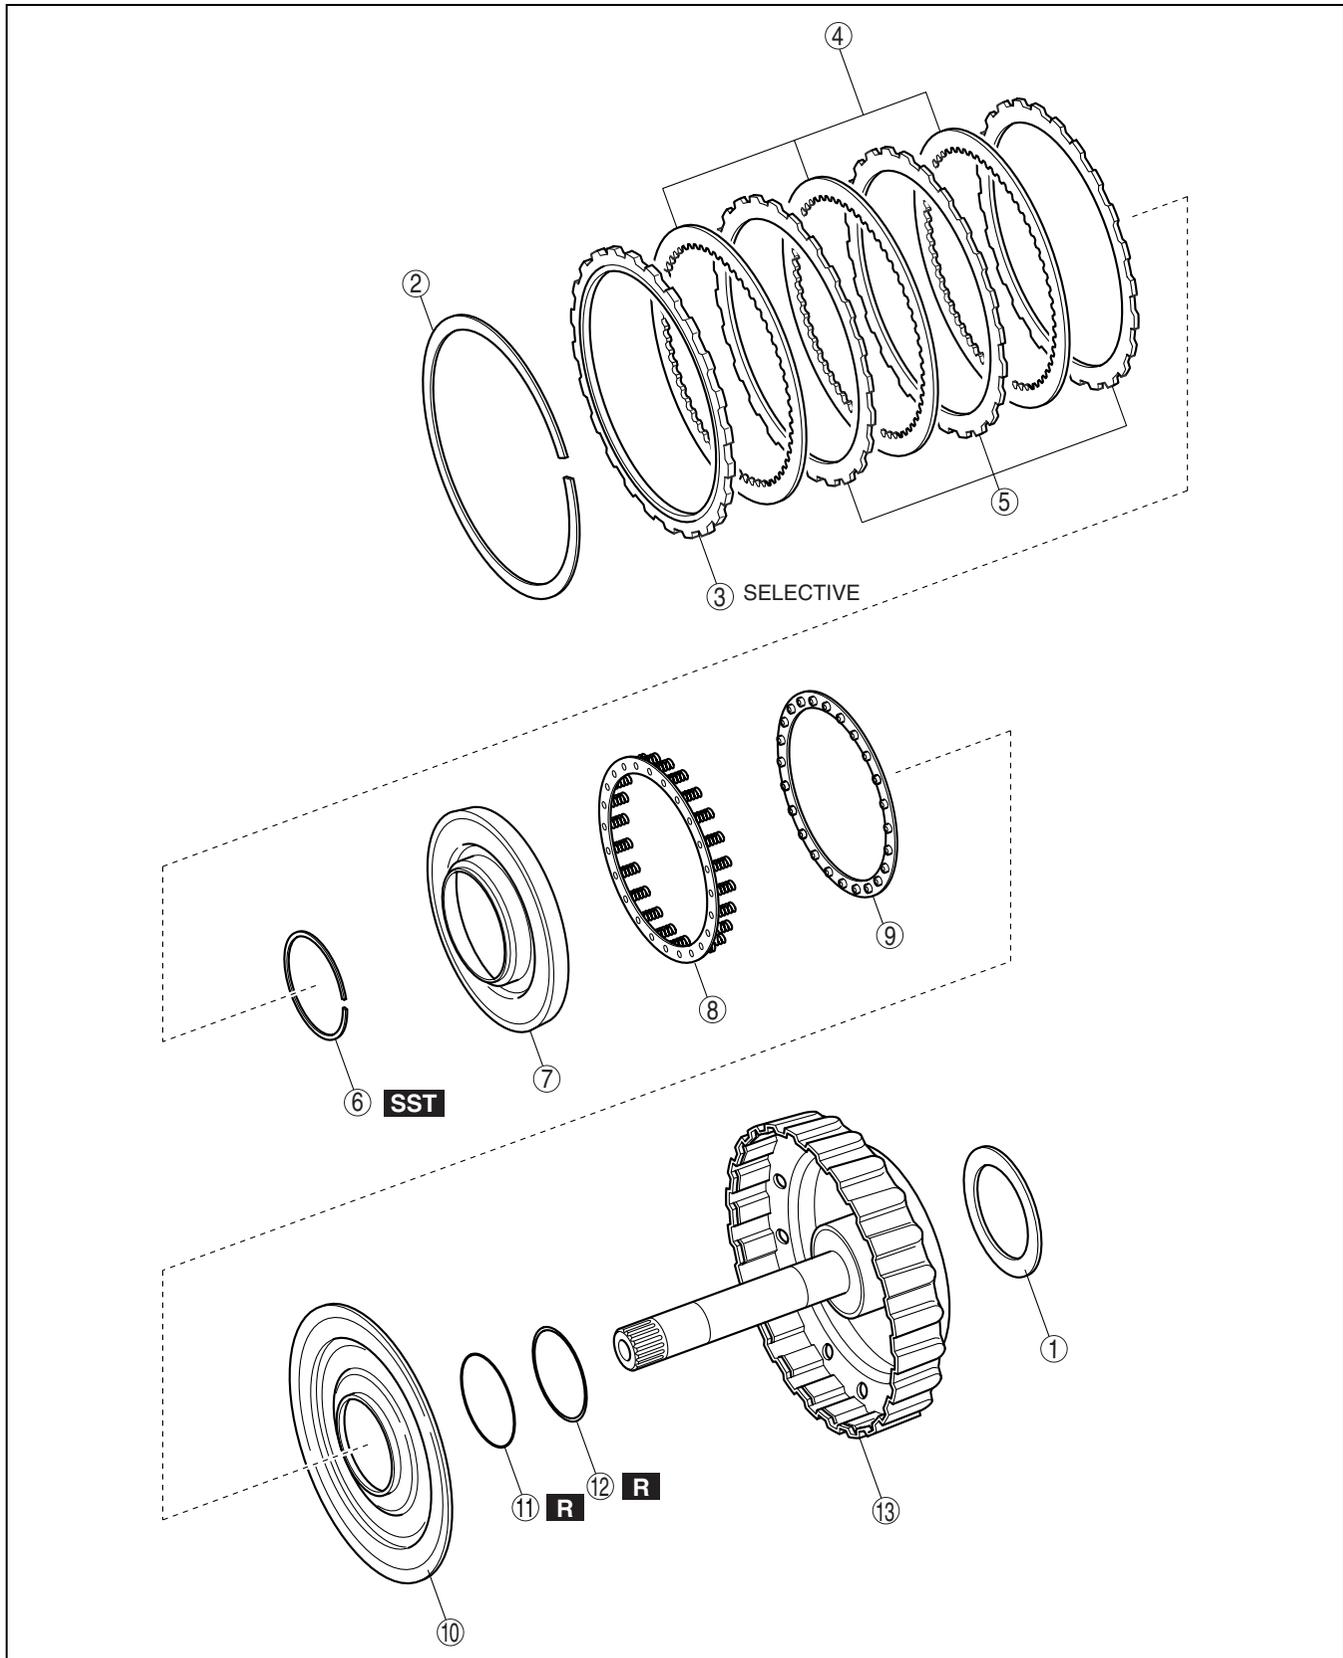

bawuua0000045

1	Thrust bearing
2	Snap ring
3	Retaining plate

4	Drive plate
5	Driven plate
6	Snap ring

AUTOMATIC TRANSAXLE

7	C2 clutch balancer
8	Piston return spring
9	Spring retainer
10	C2 clutch piston


11	O-ring
12	O-ring
13	Intermediate shaft

Disassembly Procedure

1. Remove the thrust bearing from the intermediate shaft.

Note


- If the bearing is difficult to remove, blow air between the bearing and the intermediate shaft.

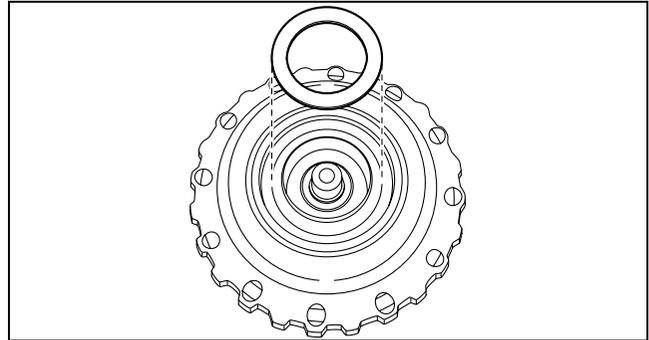

bawuuu0000046

05-17

2. Using a flathead screwdriver, remove the snap ring from the intermediate shaft.

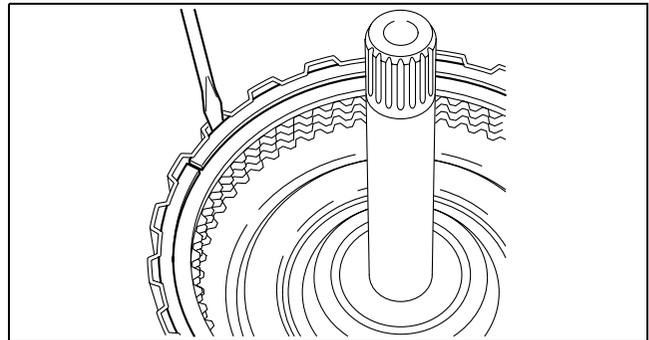


bawuuu0000047

3. Remove the retaining plate, drive and driven plates from the intermediate shaft.

Note

- Inspect the number of drive and driven plates.

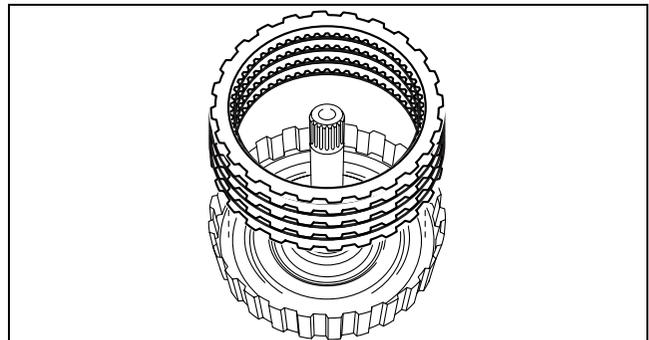

bawuuu0000048

4. Place the **SST** on the clutch balancer and compress the return spring with a press.


Caution

- Do not contract the return spring too much.
- Do not expand the snap ring too much.

5. Remove the snap ring using snap ring pliers.

Caution

- Do not damage the seal on the clutch balancer.

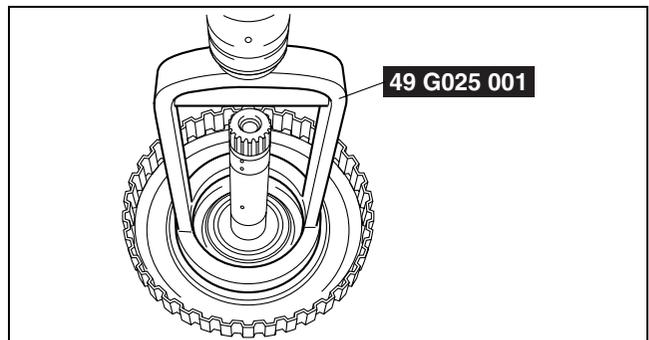


bawuuu0000049

AUTOMATIC TRANSAXLE

- Remove the clutch balancer, return spring and the spring retainer from the intermediate shaft.

Caution

- Do not damage the seal on the piston.

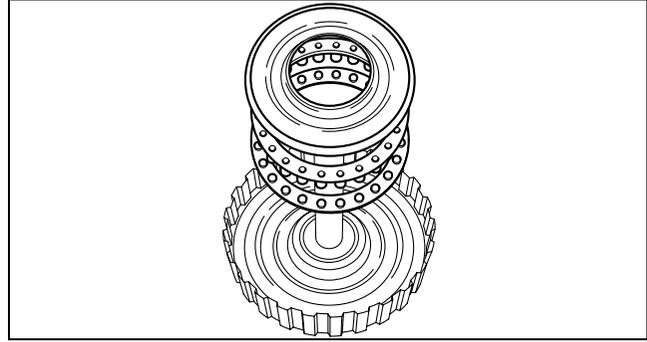

bawuua00000050


- While pushing the C2 clutch piston by hand, apply compressed air into the oil passage as shown in the figure and remove the C2 clutch piston from the intermediate shaft.

Air pressure

392 kPa {4.0 kgf/cm², 57 psi}


Note

- When applying compressed air, block the three oil passages of the intermediate shaft as shown in the figure.

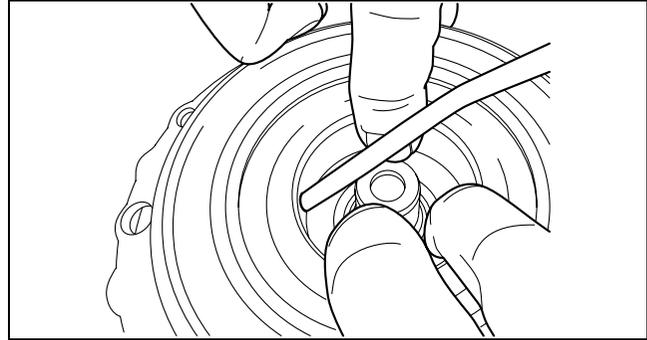

bawuua00000051

- Remove the O-rings from the intermediate shaft.

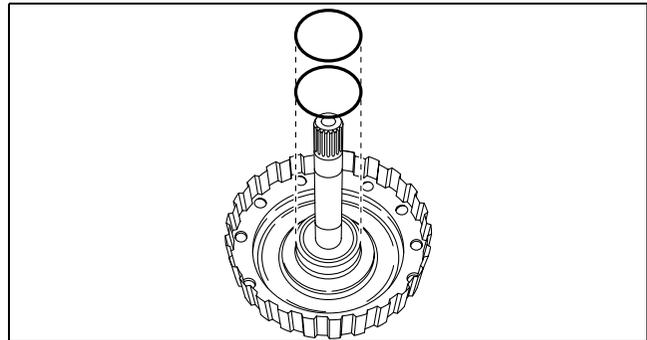

bawuua00000052


C2 CLUTCH INSPECTION

id051700501600

1. Inspect the lining of all drive plates.
 - If the lining is flaking or has changed color, or if it is worn or the print mark is wearing away, replace with a new drive plate. When replacing, inspect the contact surfaces between the retaining plate, driven plate and drive plate. If they are scratched or have changed color, replace with new parts.

Note

- Before replacing with new drive plates, soak them at least **2 h** in ATF.

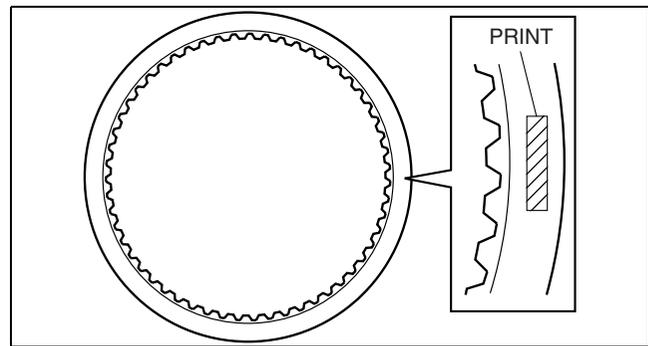


bawuuu00000525

05-17

2. Using vernier calipers, measure the free length of the piston return spring.

C2 clutch return spring free length
Standard: 14.02 mm {0.5520 in}

- If it is less than the specification, replace the piston return spring with a new one.

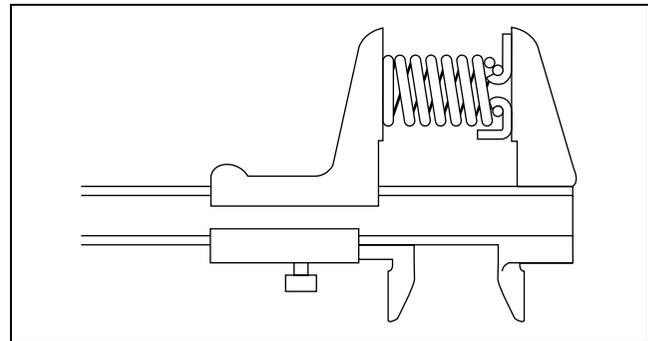


bawuuu00000526

AUTOMATIC TRANSAXLE

C2 CLUTCH COMPONENT ASSEMBLY

id051700501700

Components

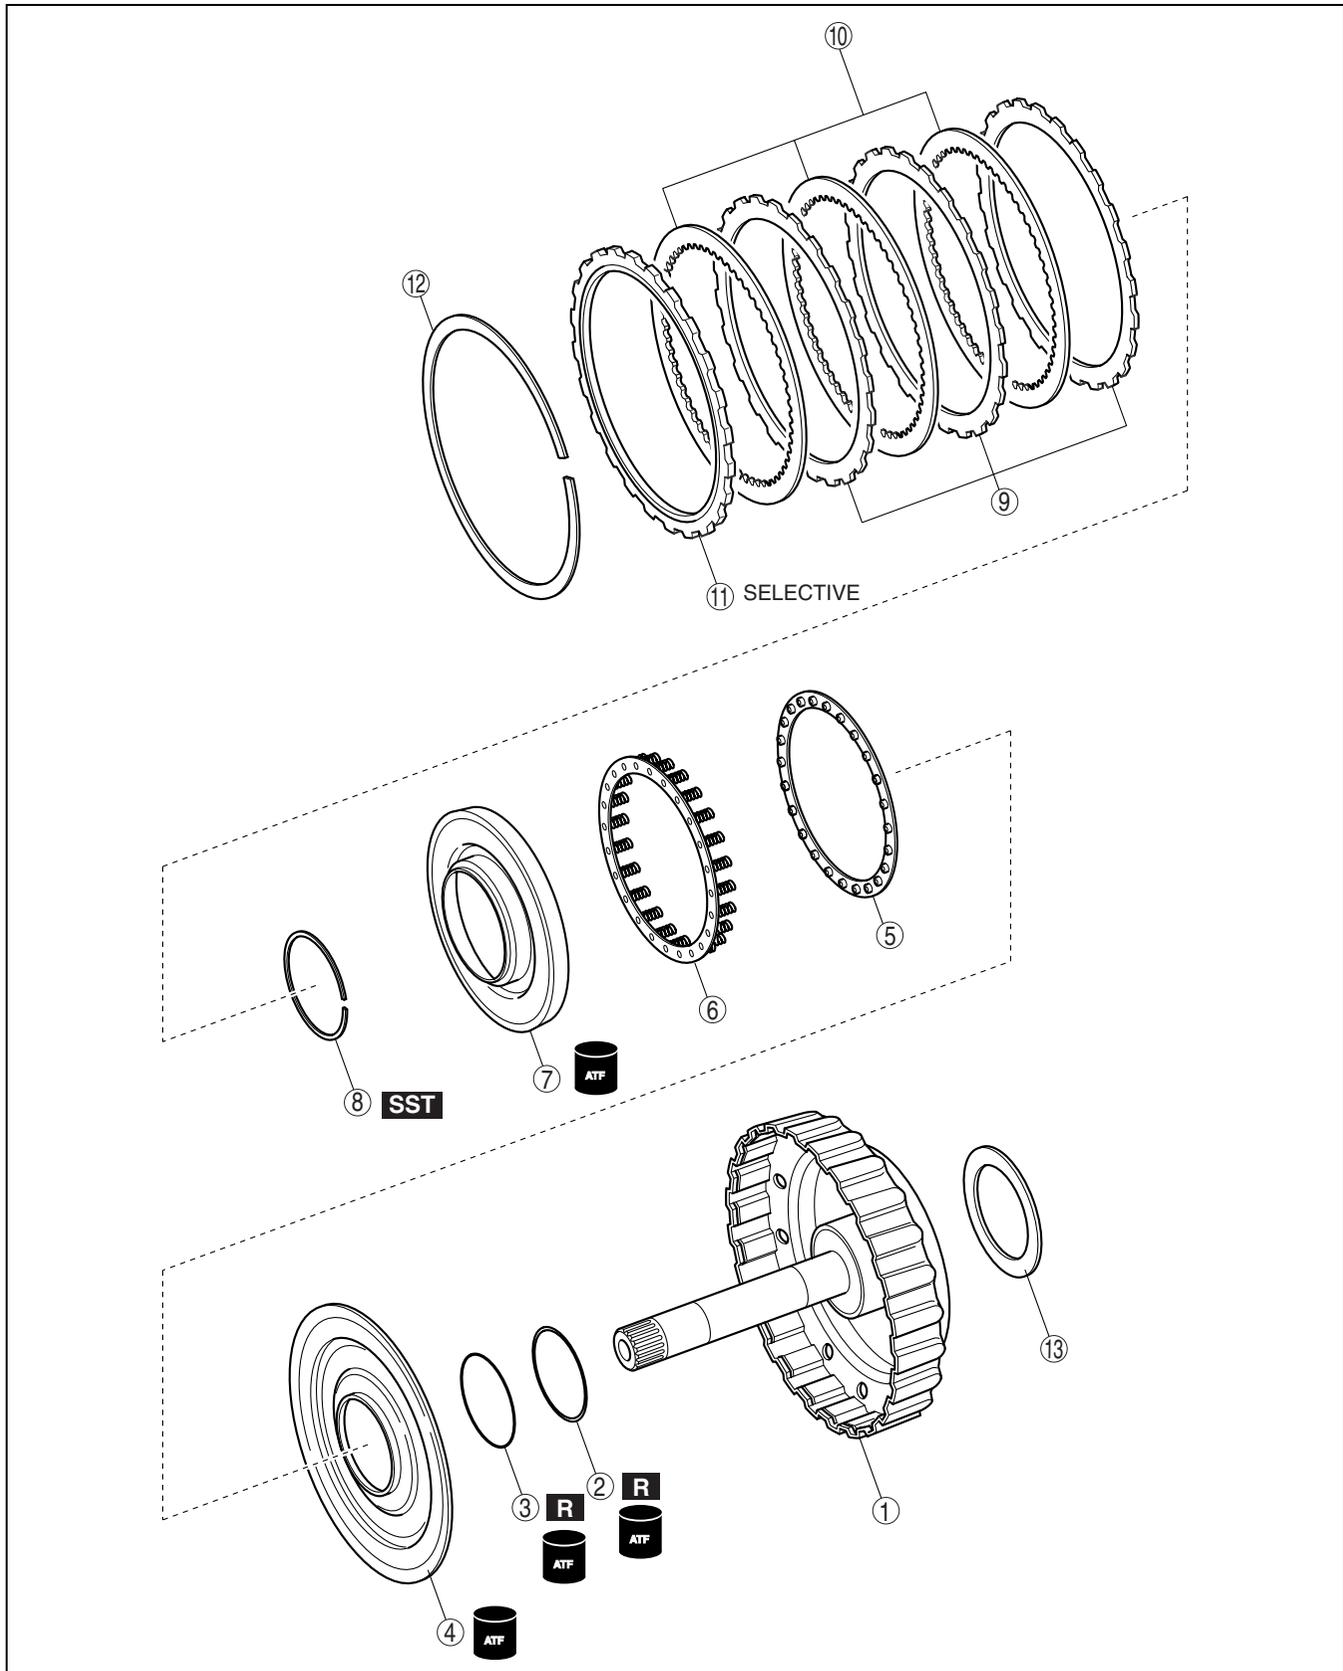

bawua0000086

1	Intermediate shaft
2	O-ring
3	O-ring

4	C2 clutch piston
5	Spring retainer
6	Piston return spring


AUTOMATIC TRANSAXLE

7	C2 clutch balancer
8	Snap ring
9	Driven plate
10	Drive plate

11	Retaining plate
12	Snap ring
13	Thrust bearing

Assembly Procedure

1. Apply ATF to the new O-rings and the intermediate shaft.
2. Install the O-rings to the intermediate shaft.

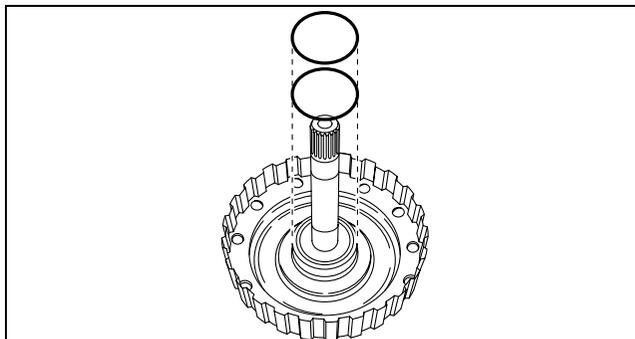

bawuuu0000087

05-17

O-ring size

mm {in}

	Inner diameter	Thickness
Upper	51.90 {2.043}	1.60 {0.0630}
Lower	50.40 {1.984}	2.62 {0.1031}

3. Apply ATF to the sliding surface of the C2 clutch piston.


Caution

- Do not damage the seal on the piston and O-ring.

4. Install the C2 clutch piston to the intermediate shaft.
5. Apply ATF to the seal on the clutch balancer and sliding surface.

Caution

- Do not damage the seal on the clutch balancer.
- Do not damage the O-ring.

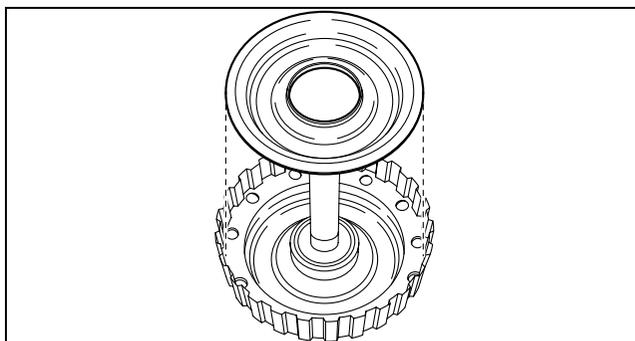


bawuuu0000088

6. Install the spring retainer, return spring and the clutch balancer to the intermediate shaft.

Caution

- Be careful not to shorten the spring too much. If it is too short, it will bite into the O-ring.

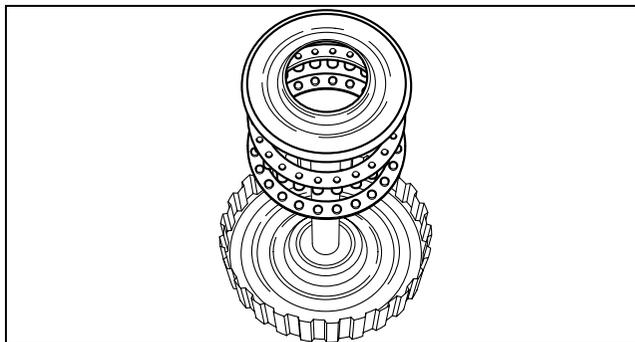

bawuuu0000089


AUTOMATIC TRANSAXLE

- Place the **SST** on the clutch balancer and compress the return spring with a press.

Caution

- Do not expand the snap ring too much.

- Install the snap ring into the groove using snap ring pliers.

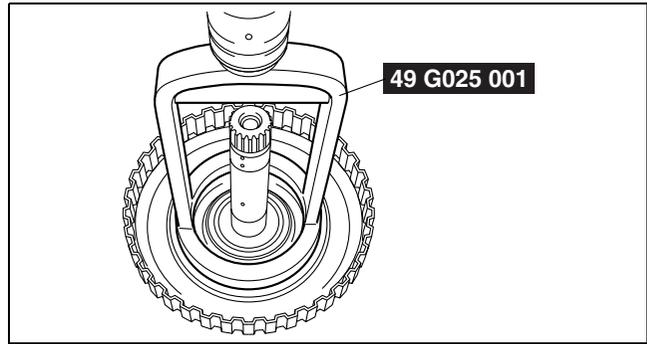

bawuua0000090


- Install the driven plates, drive plates and the retaining plate in the following order to the intermediate shaft as shown in the figure.

Three drive plates type

- Driven— Drive— Driven— Drive— Driven— Drive— Retaining

Four drive plates type


- Driven— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Retaining

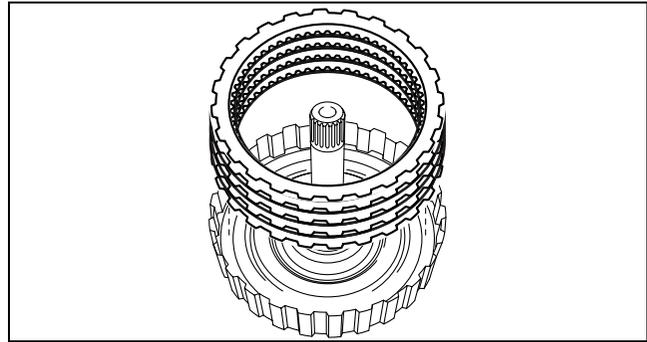

bawuua0000091

Caution

- Inspect the number and order of the retaining plate, drive and driven plates.

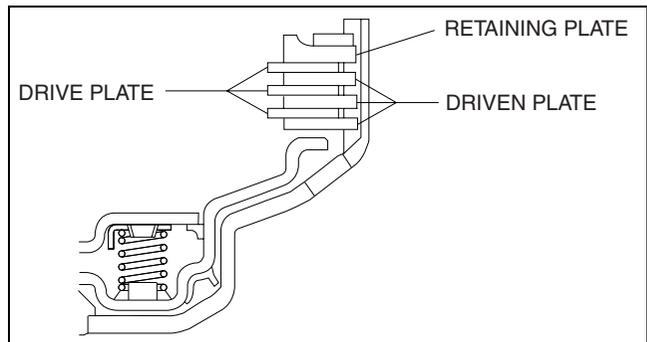


bawuua0000092

- Using a flathead screwdriver, install the snap ring into the groove.
- Apply ATF to the thrust bearing.


Note

- Install the bearing in the correct direction as shown in the figure.

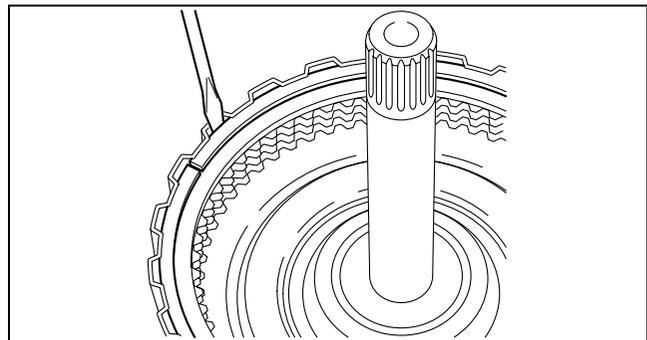

bawuua0000093

- Install the thrust bearing to the intermediate shaft.

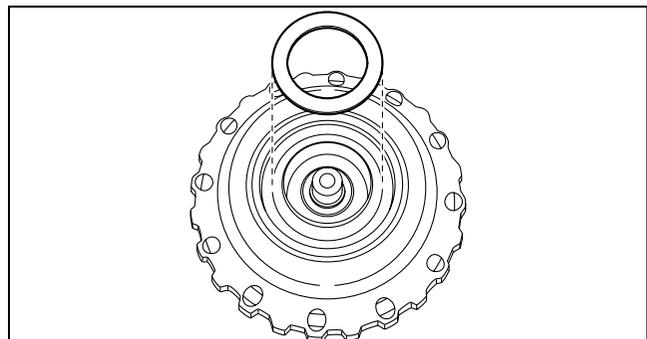

bawuua0000094

AUTOMATIC TRANSAXLE

13. Install the intermediate shaft on the transaxle case and set a dial indicator as shown in the figure.
14. Apply compressed air as shown in the figure and measure the C2 clutch piston stroke.


Air pressure

400 kPa {4.1 kgfcm², 58 psi}

C2 clutch piston stroke

0.45 — 0.65 mm {0.0178 — 0.0255 in}

- If not within the specification, select an appropriate retaining plate.

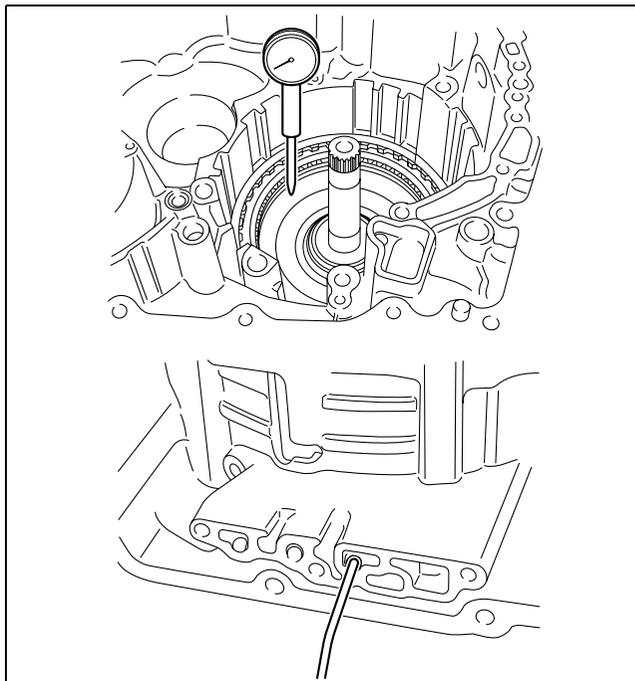

bawuuu00000095

05-17

Retaining plate size


Identification mark	Thickness (mm {in})
1	2.5 {0.0984}
2	2.6 {0.102}
3	2.7 {0.106}
4	2.8 {0.110}
A	2.85 {0.112}
5	2.9 {0.114}
B	2.95 {0.116}
6	3.0 {0.118}
C	3.05 {0.120}
7	3.1 {0.122}
8	3.2 {0.126}

AUTOMATIC TRANSAXLE

TRANSAXLE CASE AND B2 BRAKE DISASSEMBLY/ASSEMBLY

id051700501800

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

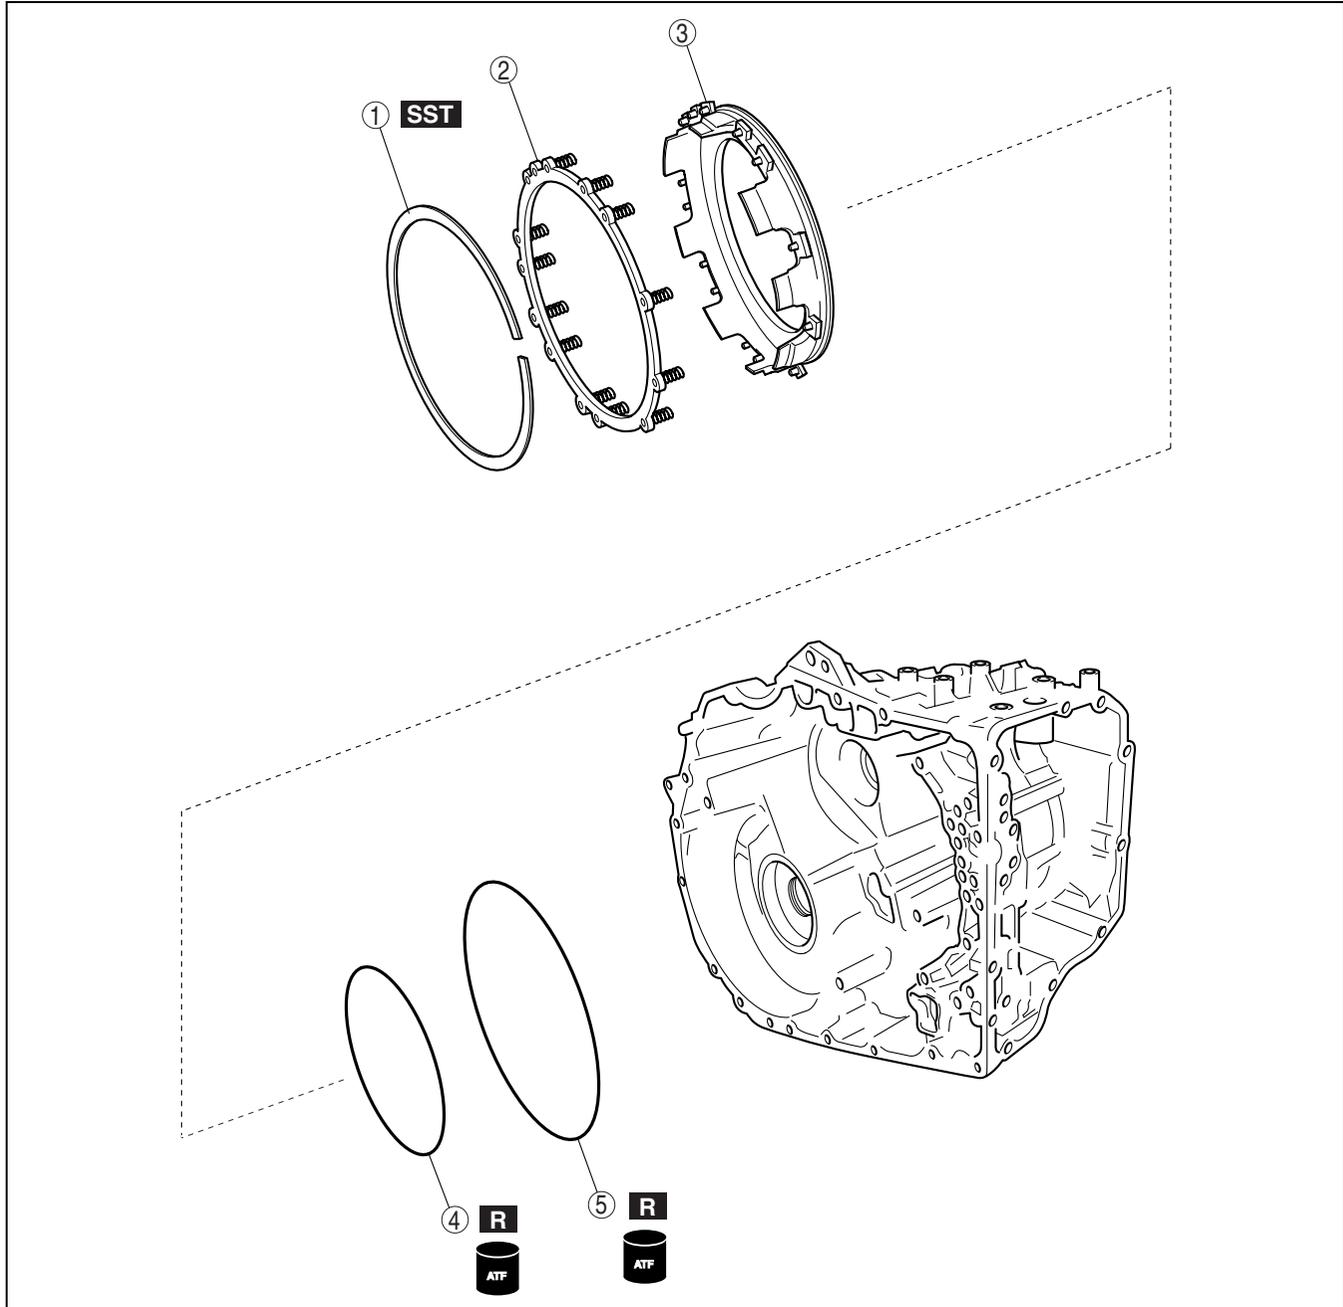

bawuua00000404


1	Snap ring
2	Low and reverse brake return spring (See 05-17-70 Low and Reverse Brake Return Spring Assembly Note.)

3	Low and reverse brake piston (See 05-17-69 Low and Reverse Brake Piston Disassembly Note.) (See 05-17-70 Low and Reverse Brake Piston Assembly Note.)
4	O-ring
5	O-ring

AUTOMATIC TRANSAXLE

Low and Reverse Brake Piston Disassembly Note

1. Using a flathead screwdriver, remove the snap ring from the transaxle case.

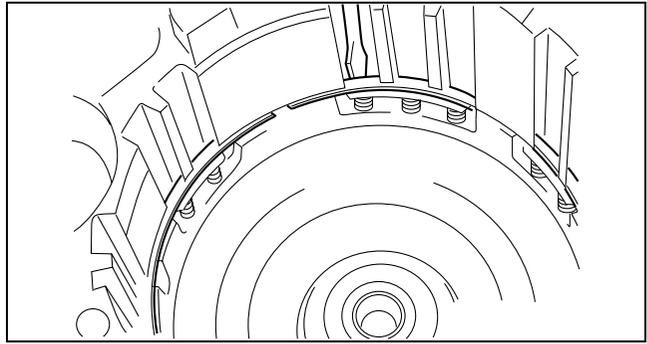


bawuuu00000405

05-17

2. Remove the low and reverse brake return spring from the transaxle case.

Caution

- Do not damage the seal on the piston.

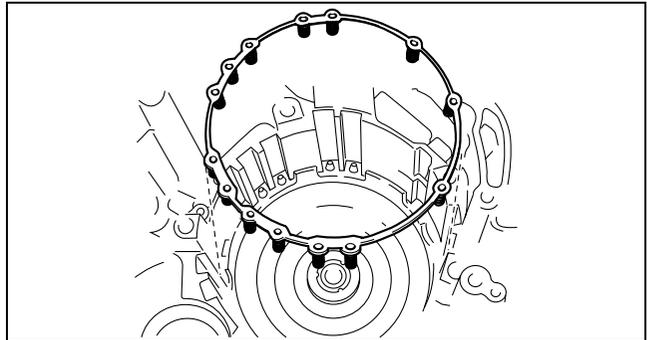


bawuuu00000406

3. While pushing the low and reverse brake piston by hand, apply compressed air into the oil passage of the transaxle case as shown in the figure and remove the low and reverse brake piston.


Air pressure

392 kPa {4.0 kgf/cm², 57 psi}

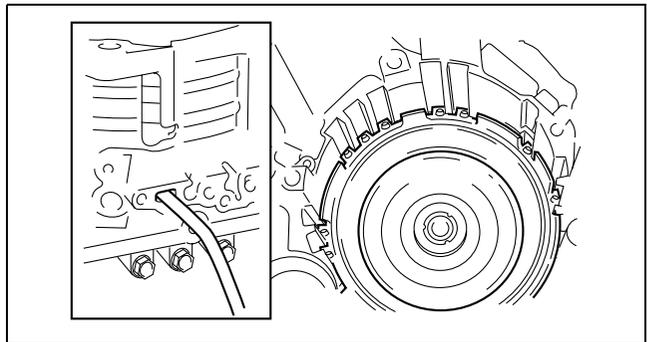

bawuuu00000407

4. Remove the O-rings from the low and reverse brake piston.

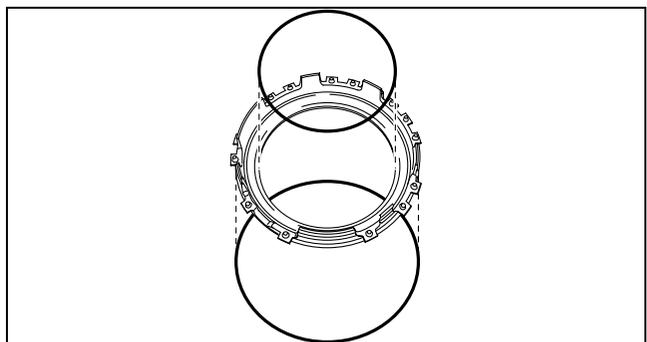

bawuuu00000408


AUTOMATIC TRANSAXLE

Low and Reverse Brake Piston Assembly Note

1. Apply ATF to the new O-rings.
2. Install the O-ring to the low and reverse brake piston.
3. Apply ATF to the sliding surface of the transaxle case.


Caution

- Do not damage the seal on the piston and O-ring.

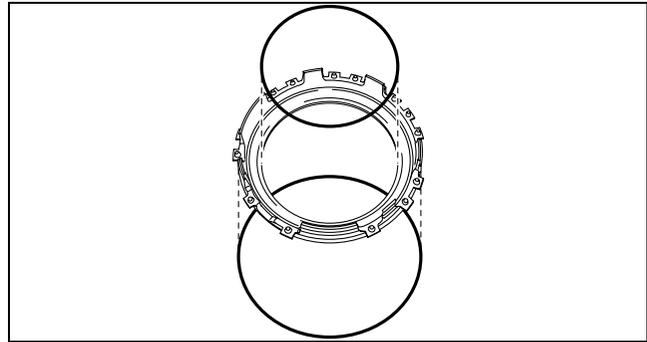

bawuua00000408


4. Install the low and reverse brake piston to the transaxle case.

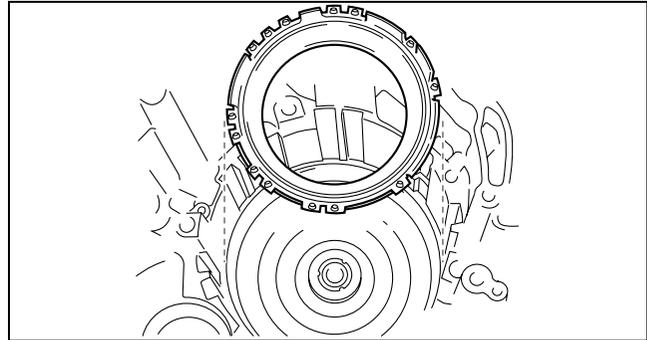

bawuua00000409


Low and Reverse Brake Return Spring Assembly Note

1. Install the low and reverse brake return spring to the transaxle case.

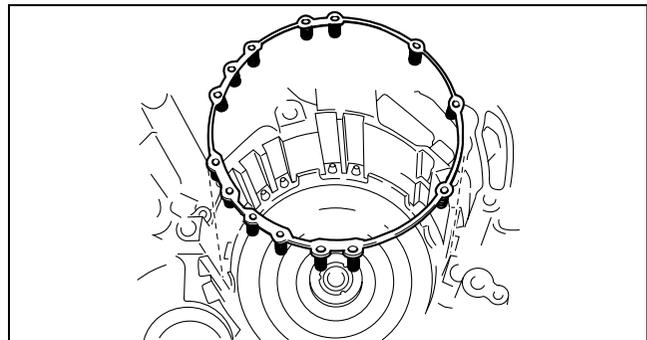

bawuua00000406

2. Using the **SST**, press the return spring into the position where the snap ring groove is visible.

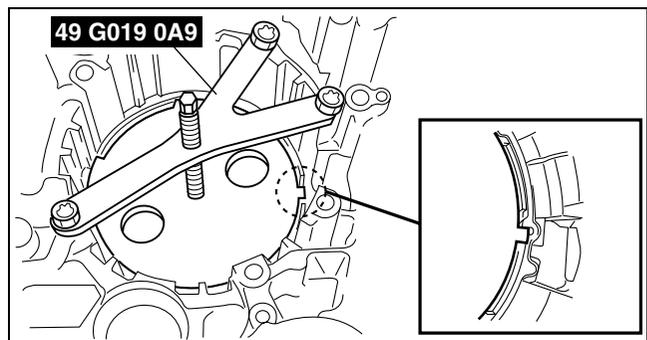


bawuua00000410

3. Using a flathead screwdriver, install the snap ring in the groove.

Caution

- When installing the snap ring, set the end gap of the snap ring as shown in the figure.

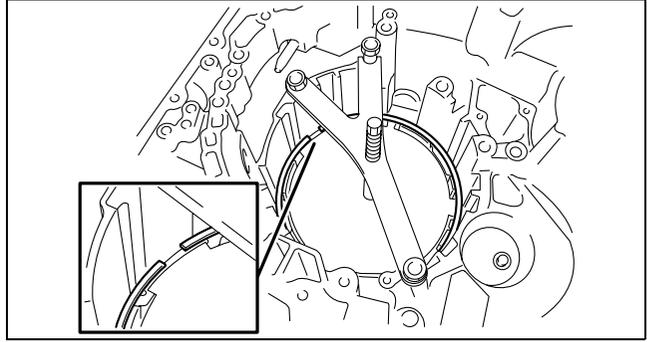

bawuuu00000411

05-17

TRANSAXLE CASE AND B2 BRAKE INSPECTION

id051700501900


Note

- Measure at different places and take an average.

1. Using a dial indicator, inspect the transaxle case bushing.

Transaxle case bushing inner diameter
Standard: 21.932 — 21.953 mm {0.86347 — 0.86429 in}

- If it exceeds the specification, replace the transaxle case with a new one.
- When the transaxle case is replaced, inspect the contact surface of the intermediate shaft bushing.
- If the surface is scratched or has changed color, replace the intermediate shaft with a new one.

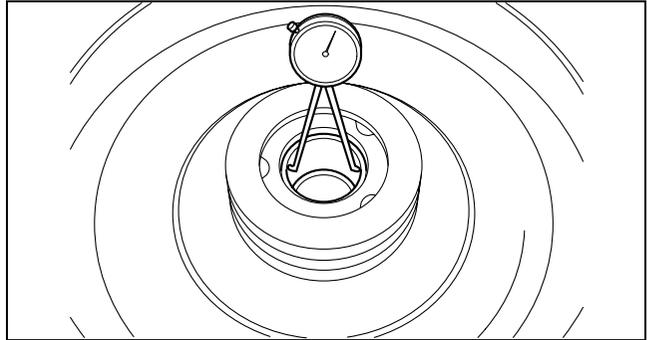


bawuuu00000527

2. Inspect the lining of all drive plates.
 - If the lining is flaking or has changed color, or if it is worn or the print mark is wearing away, replace with a new drive plate. When replacing, inspect the contact surfaces between the retaining plate, driven plate and drive plate. If they are scratched or have changed color, replace with new parts.

Note

- Before replacing with new drive plates, soak them at least **2 h** in ATF.

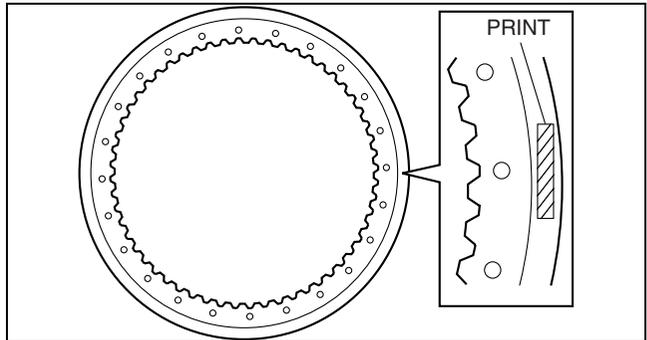


bawuuu00000528

3. Using vernier calipers, measure the free length of the piston return spring.

B2 brake return spring free length
Standard: 19.01 mm {0.7485 in}

- If it is less than the specification, replace the piston return spring with a new one.

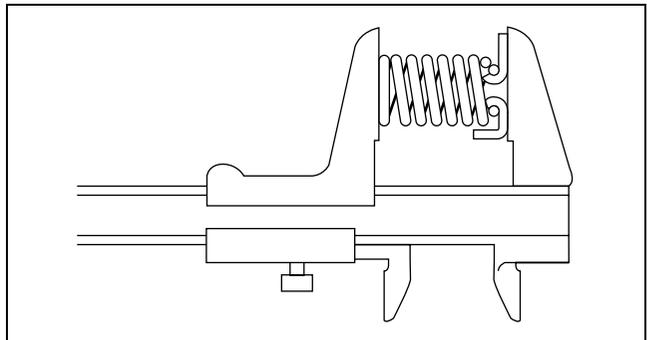


bawuuu00000529

AUTOMATIC TRANSAXLE

CONTROL VALVE BODY DISASSEMBLY/ASSEMBLY

id051700502000

Components

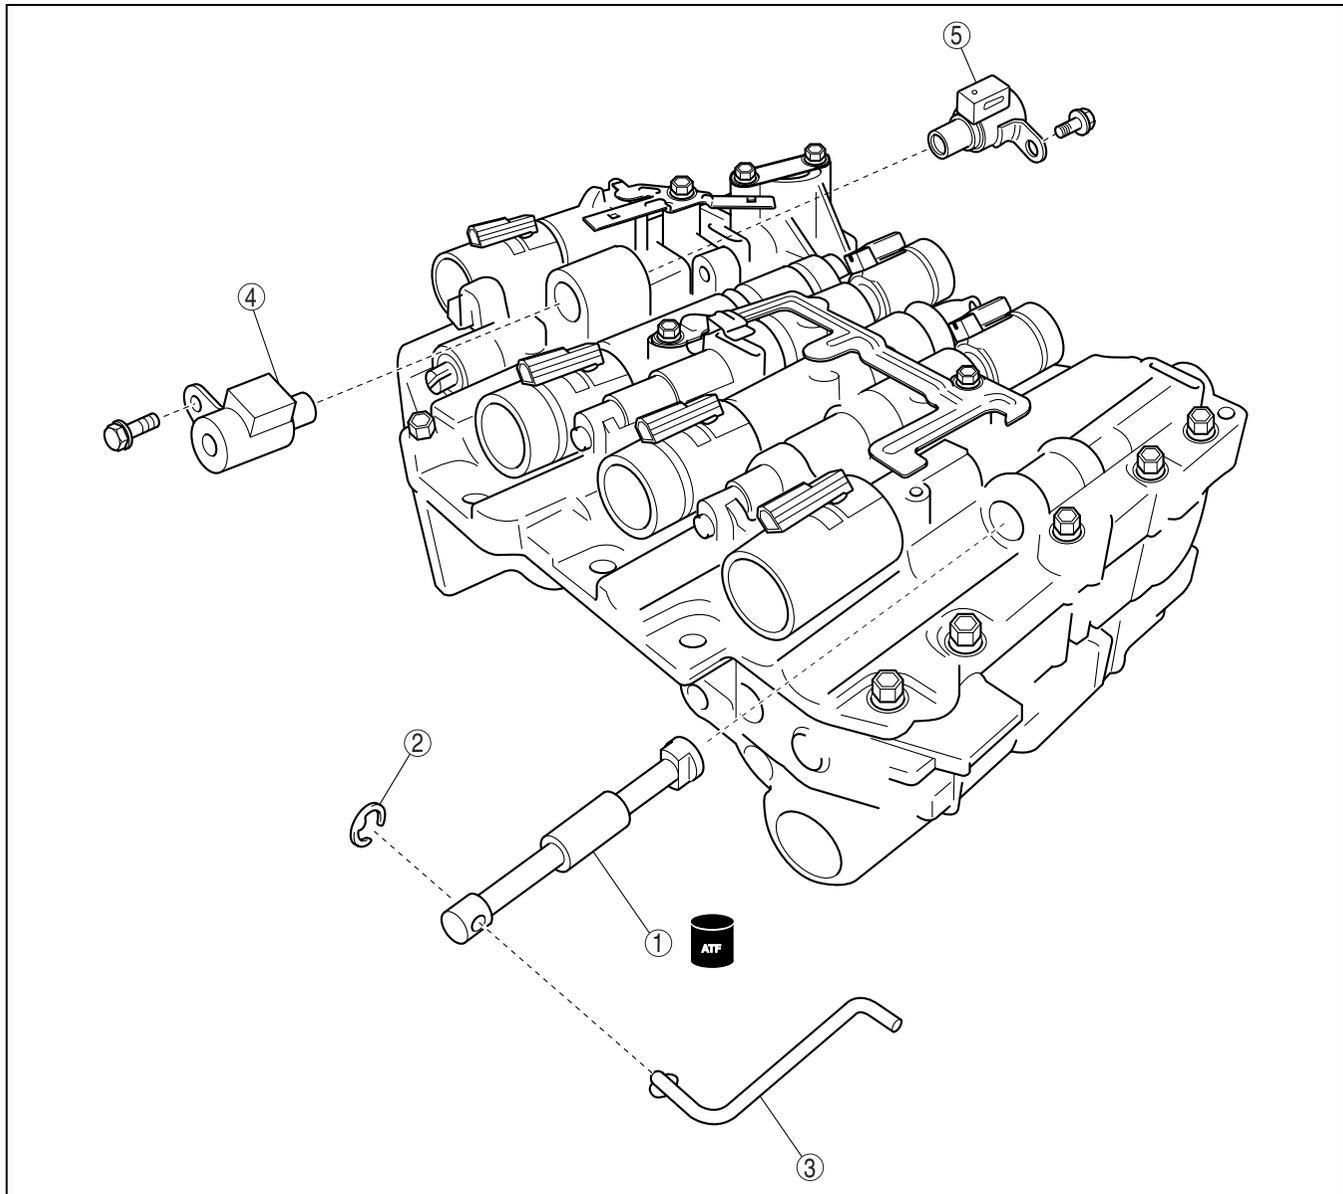

bawuua00000530

1	Manual valve
2	E-ring
3	Manual valve connecting rod

4	Shift solenoid A
5	Shift solenoid B


AUTOMATIC TRANSAXLE

Disassembly Procedure

Caution

- Do not pull the manual valve strongly.

1. Remove the manual valve from the control valve body.

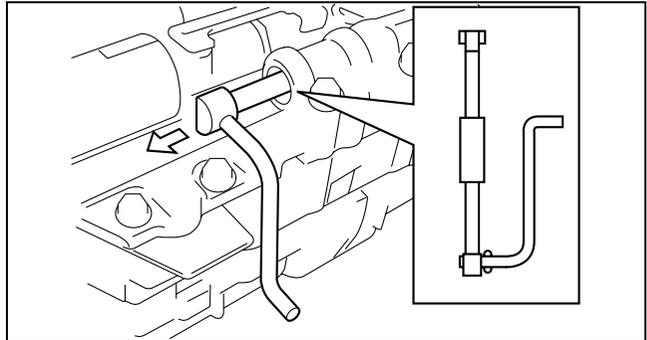


bawuuu00000531

05-17

2. Using a flathead screwdriver, remove the E-ring.
3. Remove the manual valve connecting rod from the manual valve.


Caution

- Do not damage the solenoid.

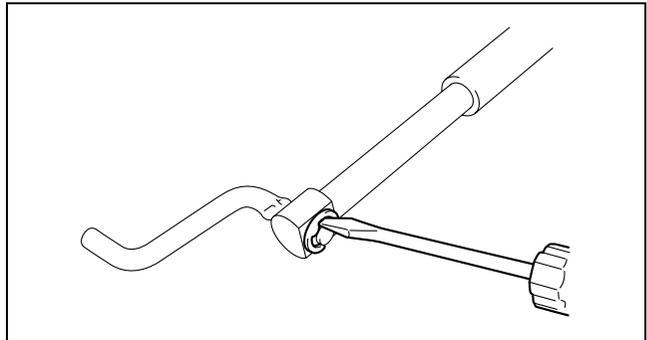

bawuuu00000532

4. Remove the solenoids from the control valve body.

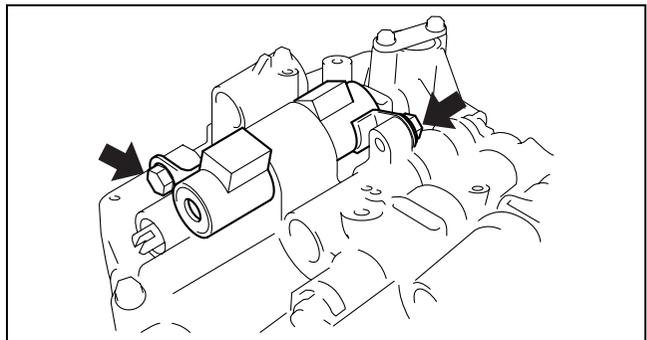

bawuuu00000533

AUTOMATIC TRANSAXLE

Assembly Procedure

Caution


- Do not damage the solenoid.

1. Install the solenoids to the front control valve body.

Tightening torque

8.0 — 12.0 N·m {81.6 — 122.3 kgf·cm, 70.9 — 106.1 in·lbf}

2. Install the manual valve connecting rod to the manual valve.

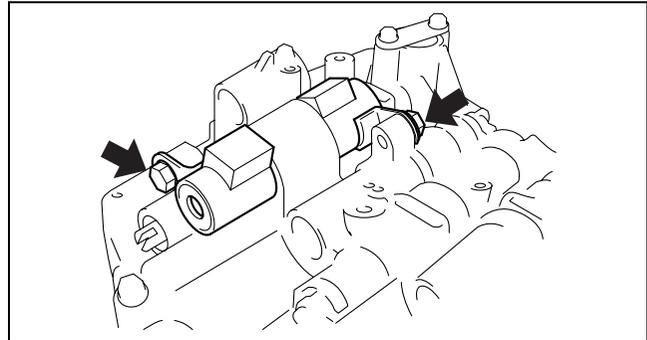


bawuua00000533

3. Install the E-ring.
4. Apply ATF to the manual valve.


Caution

- Do not damage the manual valve.

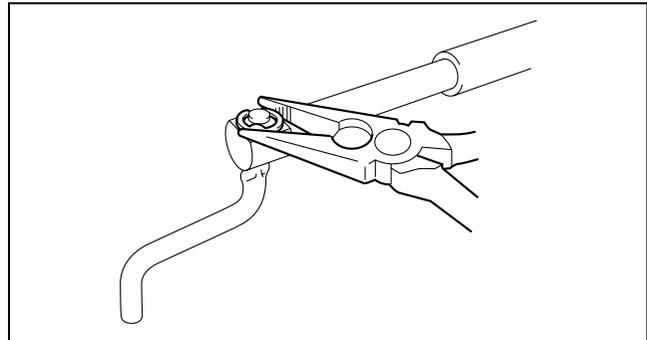

bawuua00000534

5. Install the manual valve to the control valve body.

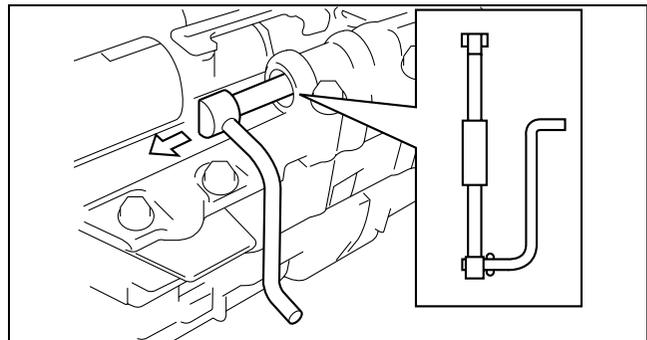

bawuua00000531


AUTOMATIC TRANSAXLE

AUTOMATIC TRANSAXLE ASSEMBLY

id051700502200

Assembly

Bearing and race locations

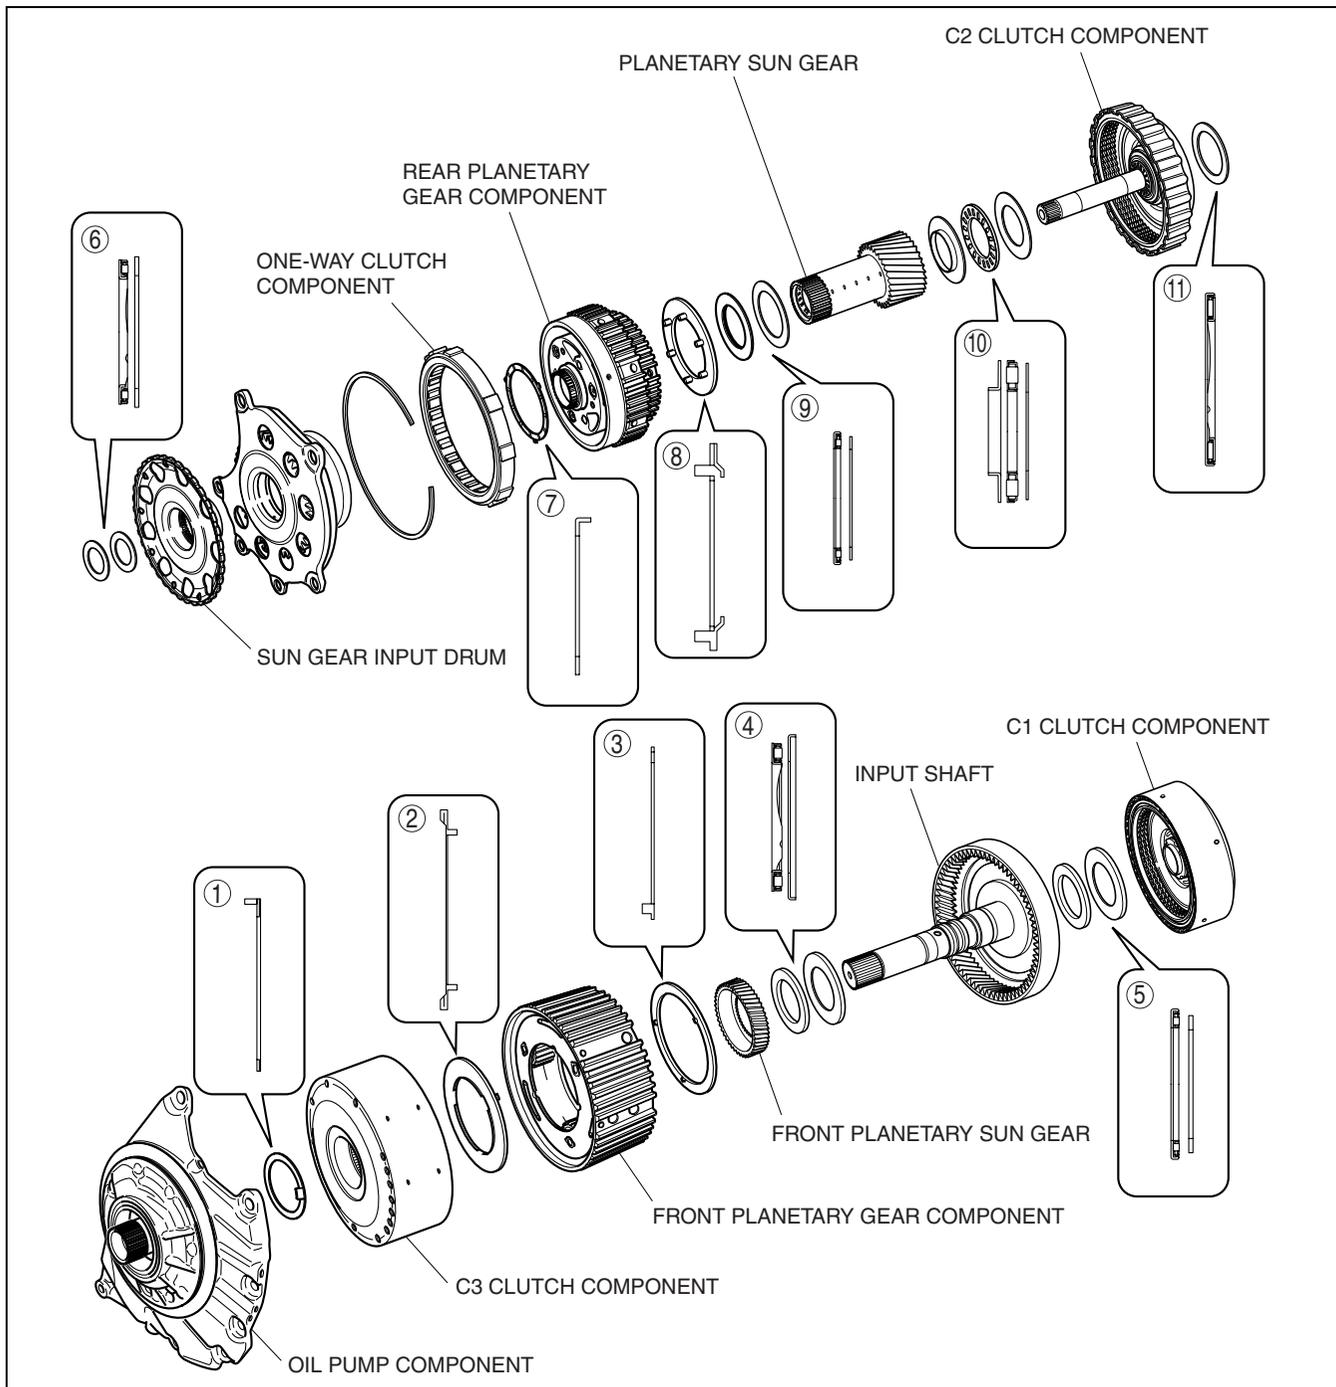

05-17

bawuuu00000412


AUTOMATIC TRANSAXLE

		1	2	3	4	5	6	7	8	9	10	11
Thrust washer (mm {in})	Outer	64.0 {2.52}	101.0 {3.98}	85.0 {3.35}	—	—	—	79.8 {3.14}	104.2 {4.10}	—	—	—
	Inner	51.0 {2.01}	75.3 {2.96}	72.7 {2.86}	—	—	—	68.3 {2.69}	69.0 {2.72}	—	—	—
Bearing race (front) (mm {in})	Outer	—	—	—	—	—	—	—	—	—	43.7 {1.72}	—
	Inner	—	—	—	—	—	—	—	—	—	25.6 {1.01}	—
Bearing (mm {in})	Outer	—	—	—	61.3 {2.41}	52.6 {2.07}	45.6 {1.80}	—	—	48.7 {1.92}	43.8 {1.72}	75.0 {2.95}
	Inner	—	—	—	43.7 {1.72}	39.2 {1.54}	33.2 {1.31}	—	—	35.0 {1.38}	24.25 {0.9547}	50.5 {1.99}
Bearing race (rear) (mm {in})	Outer	—	—	—	68.8 {2.71}	48.5 {1.91}	47.0 {1.85}	—	—	45.6 {1.80}	41.7 {1.64}	—
	Inner	—	—	—	46.9 {1.85}	38.1 {1.50}	35.2 {1.39}	—	—	33.2 {1.31}	24.2 {0.953}	—

AUTOMATIC TRANSAXLE

Components

05-17

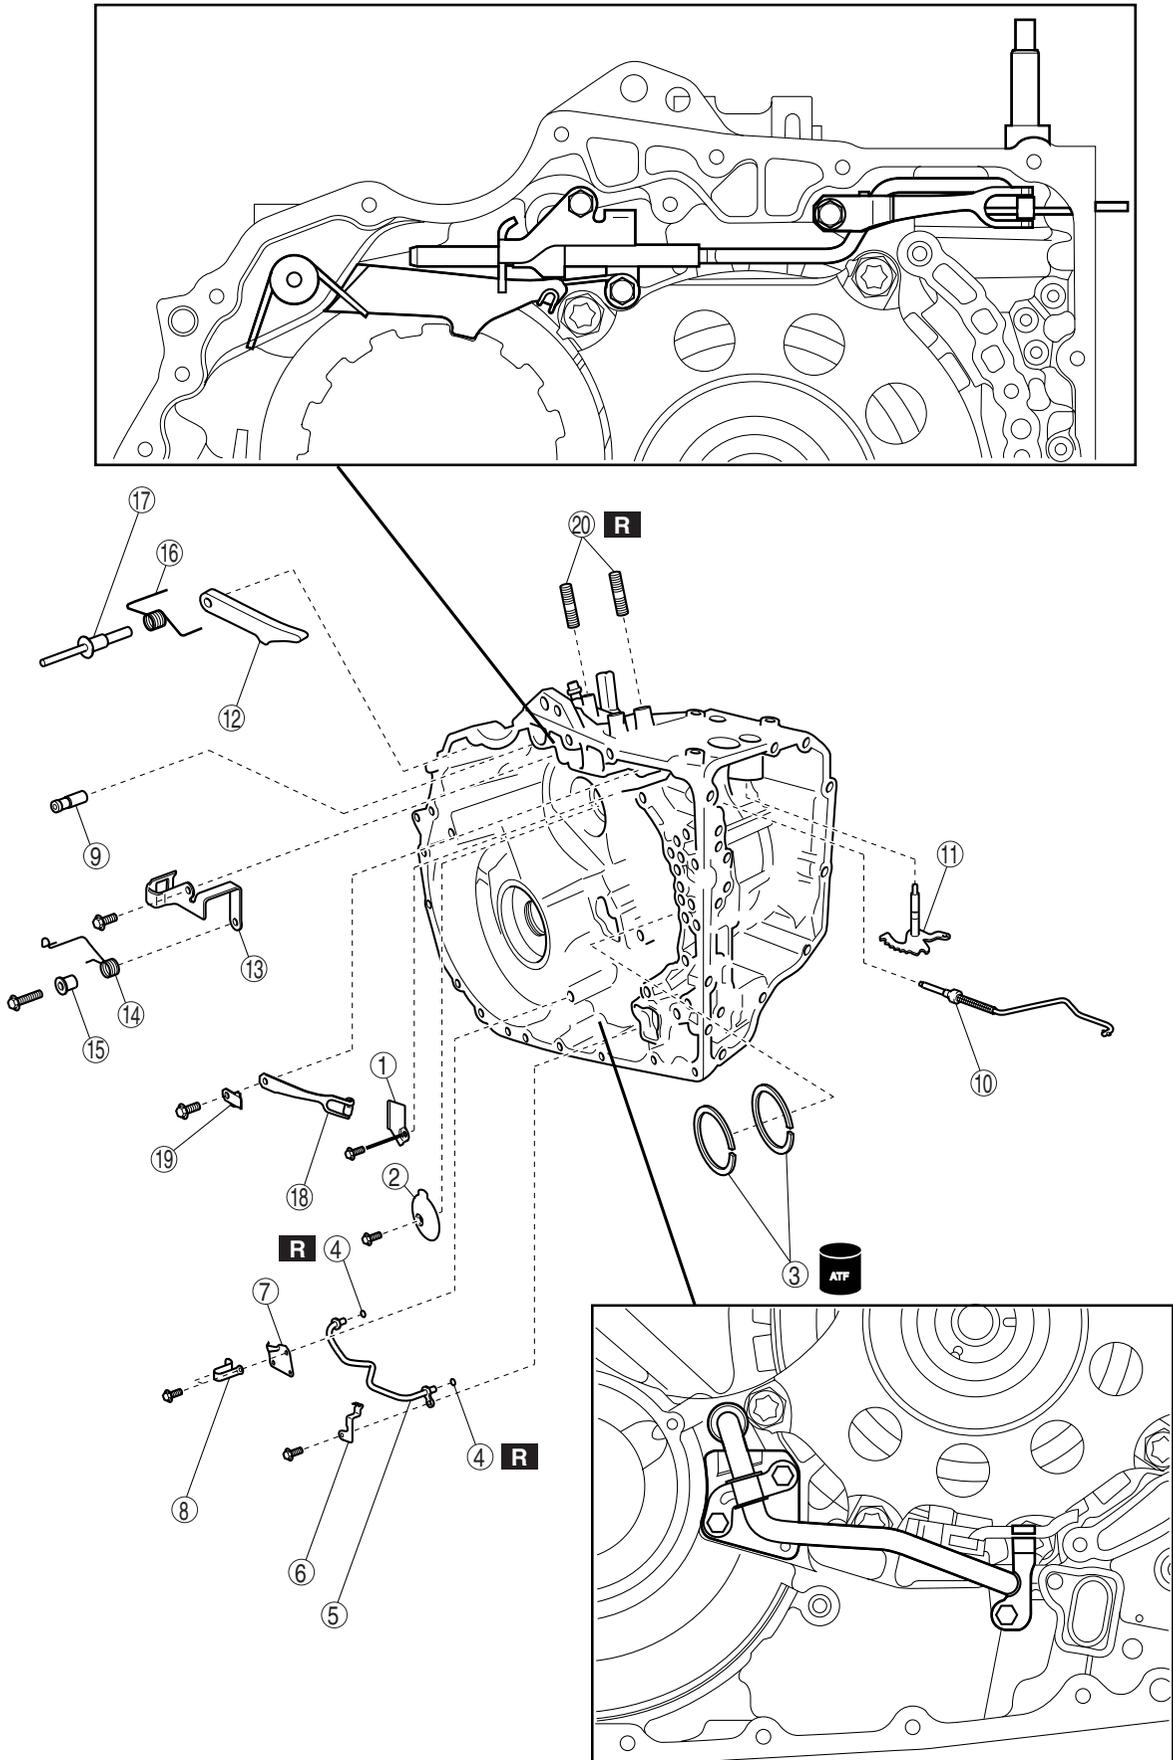


AUTOMATIC TRANSAXLE

1	Transaxle case plate No.3
2	Transaxle case plate No.2
3	Seal ring
4	O-ring
5	Oil cooler outlet tube
6	Wiring harness clip
7	Transaxle case No.1 plate
8	Pipe clamp
9	Parking pin
10	Parking rod

11	Manual valve lever
12	Parking pawl
13	Parking pawl bracket
14	Torsion spring
15	Spring guide sleeve
16	Pawl return spring
17	Parking pawl shaft
18	Detent spring
19	Detent spring cover
20	Stud bolt

AUTOMATIC TRANSAXLE

05-17

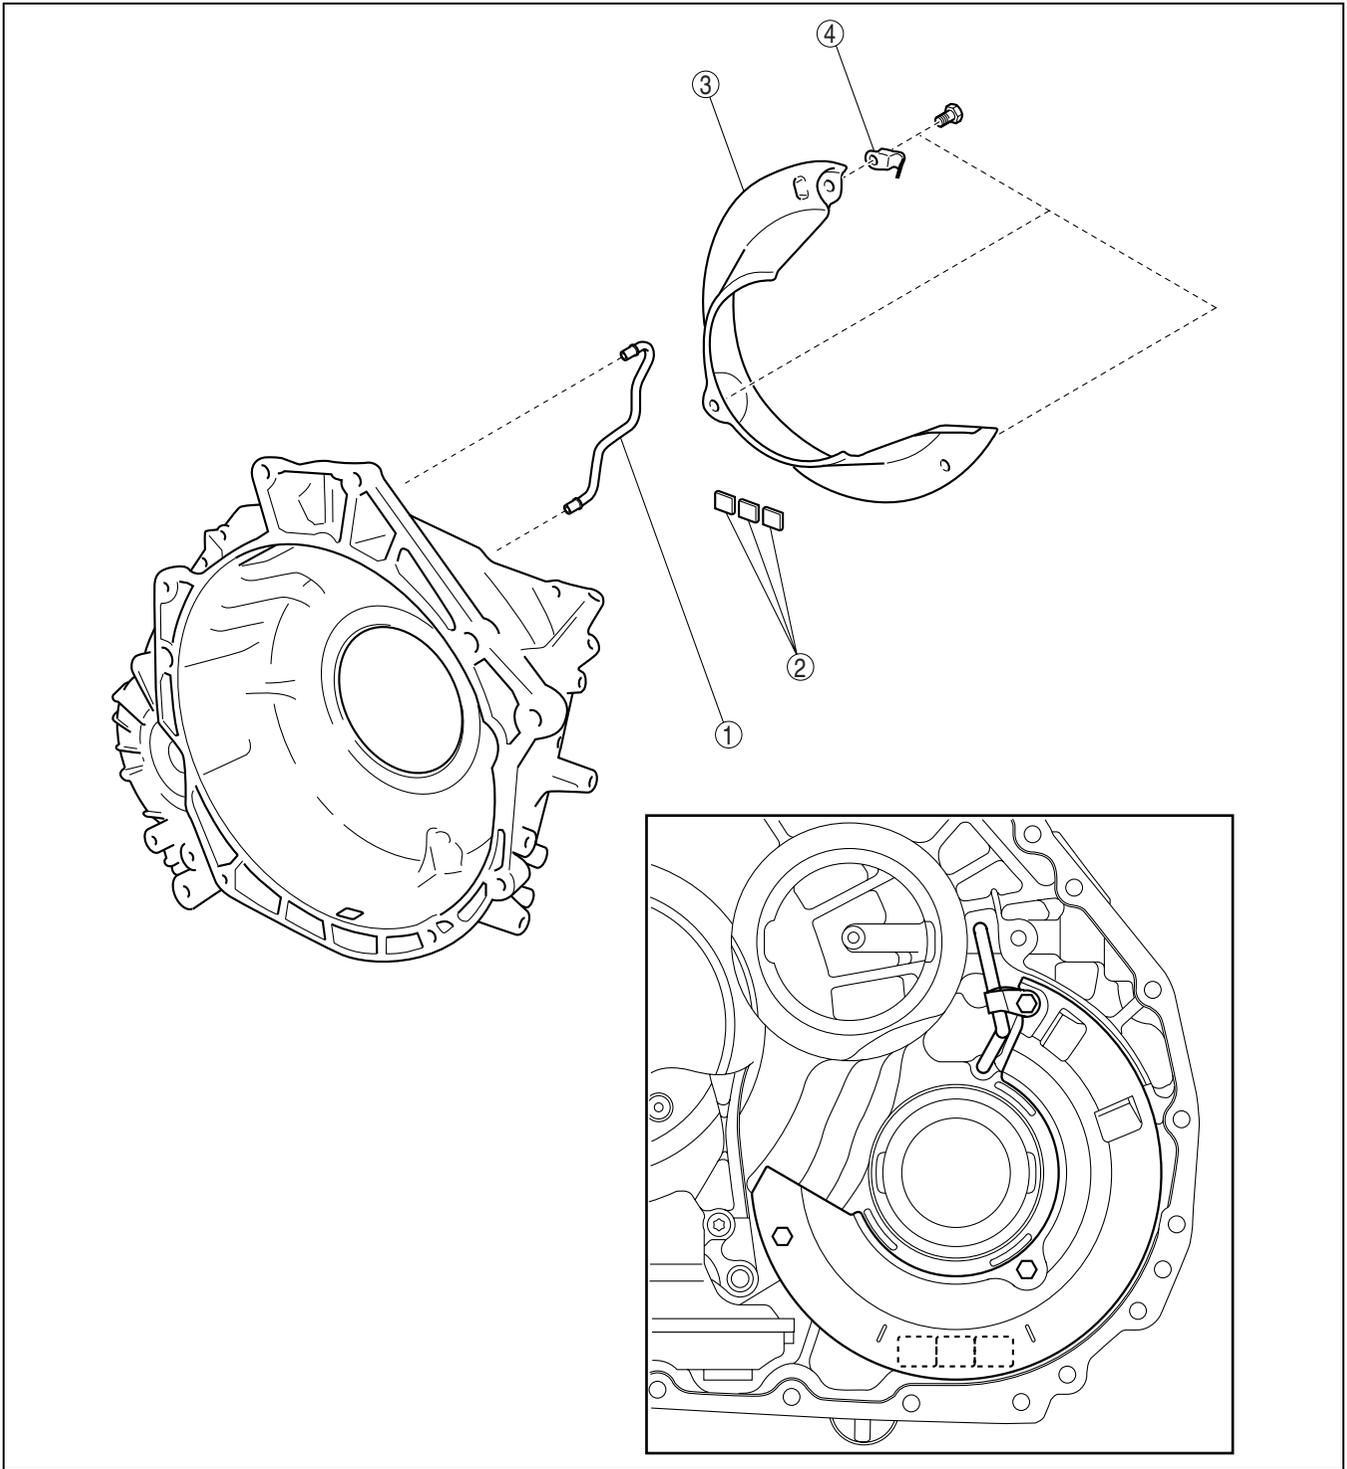


bawuuu00000414

1	Oil pipe
2	Magnet

3	Oil reservoir lock plate
4	Tube clamp

AUTOMATIC TRANSAXLE

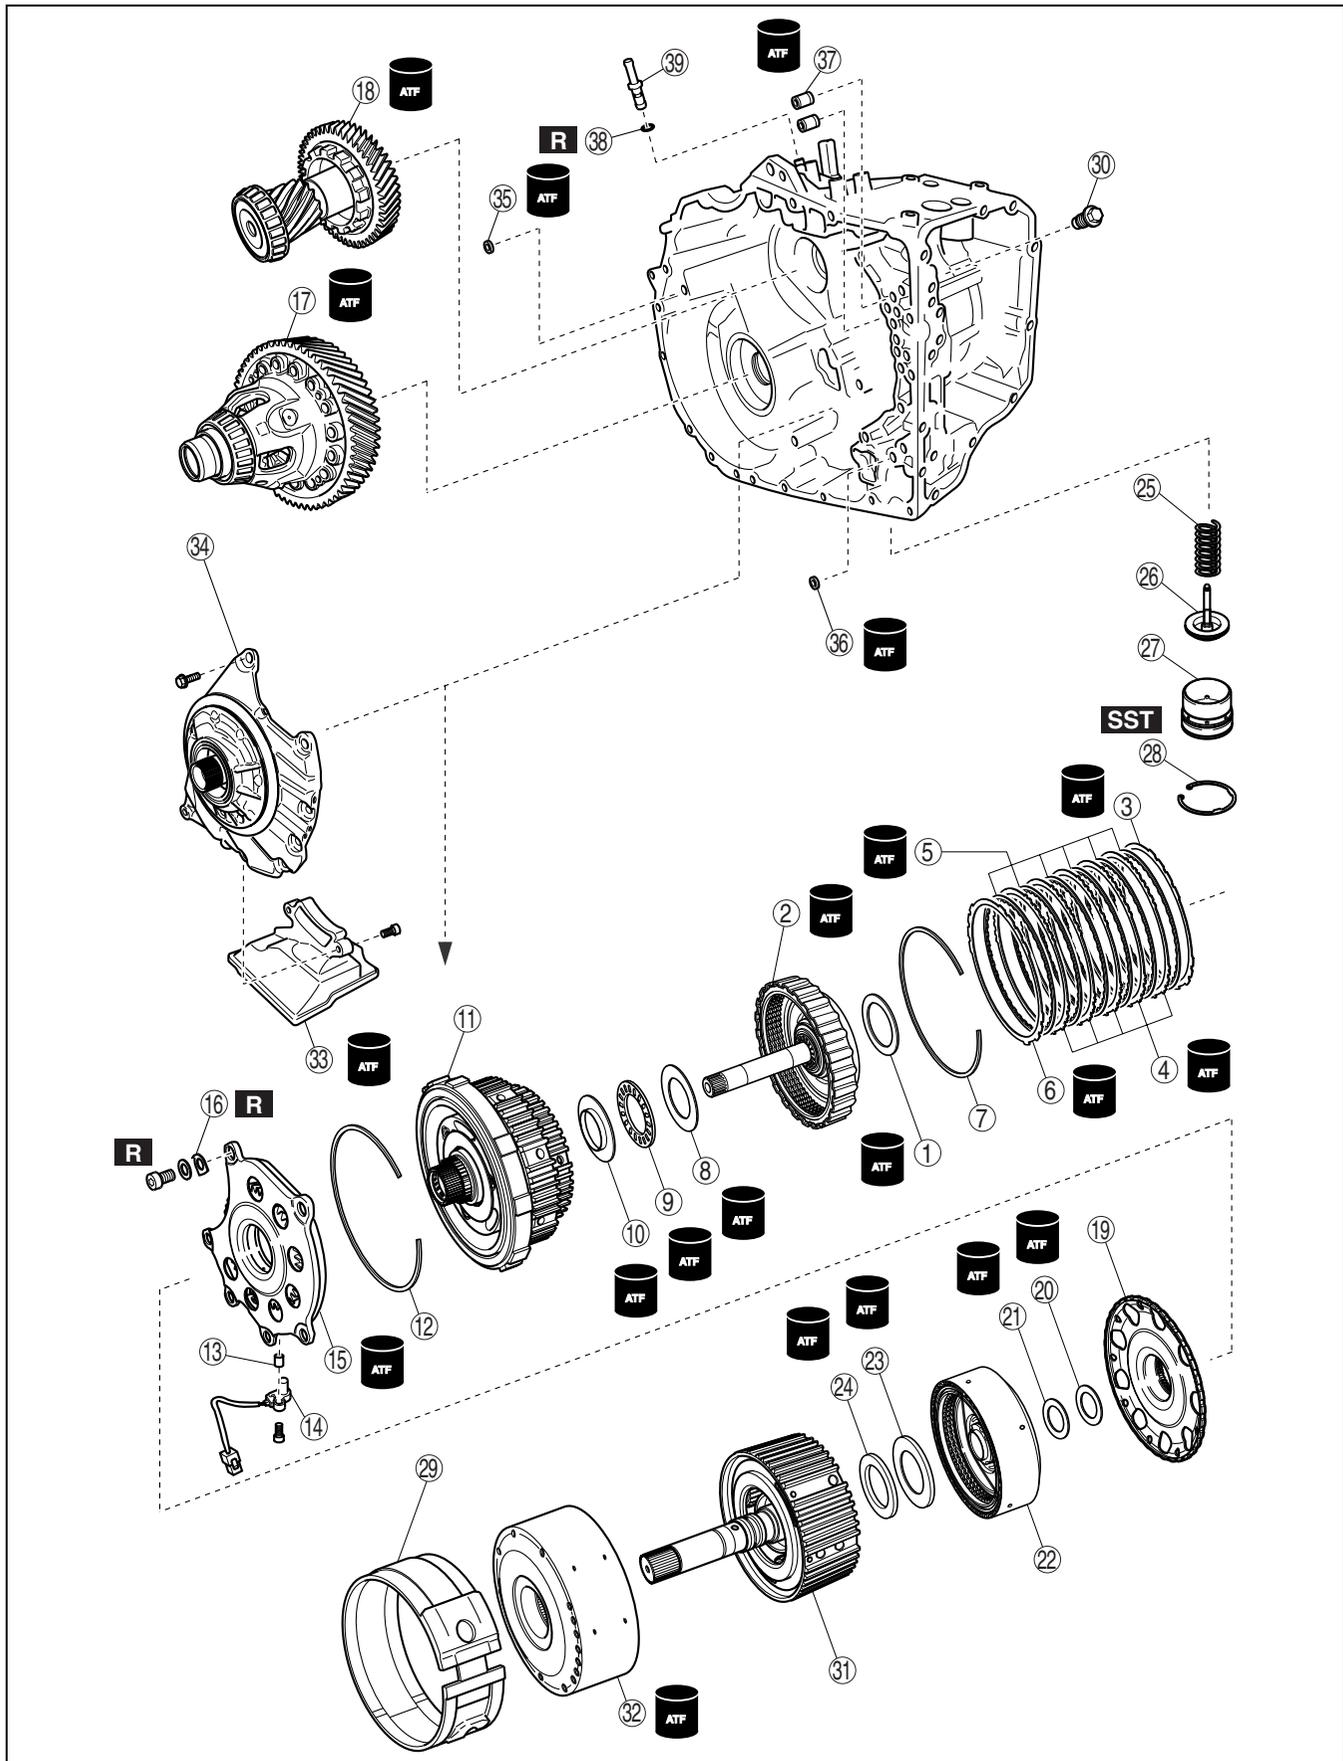

bawua0000415

1	Thrust bearing
2	C2 clutch component

3	Retaining plate
4	Driven plate


AUTOMATIC TRANSAXLE

5	Drive plate
6	Retaining plate
7	Snap ring
8	Bearing race
9	Thrust bearing
10	Bearing race
11	Rear planetary gear component and one-way clutch component
12	Snap Ring
13	Spacer
14	Vehicle speed sensor (VSS)
15	Counter drive gear
16	Lock washer
17	Differential component
18	Counter gear component
19	Sun gear input drum
20	Bearing race
21	Thrust bearing

22	C1 clutch component
23	Bearing race
24	Thrust bearing
25	Piston return spring
26	B1 brake piston
27	Brake piston cover
28	Snap ring
29	B1 brake band
30	Brake band anchor bolt
31	Front planetary gear component and input shaft
32	C3 clutch component
33	Oil strainer
34	Oil Pump component
35	Gasket
36	Gasket
37	Transaxle case gasket
38	O-ring
39	Breather pipe

05-17

AUTOMATIC TRANSAXLE

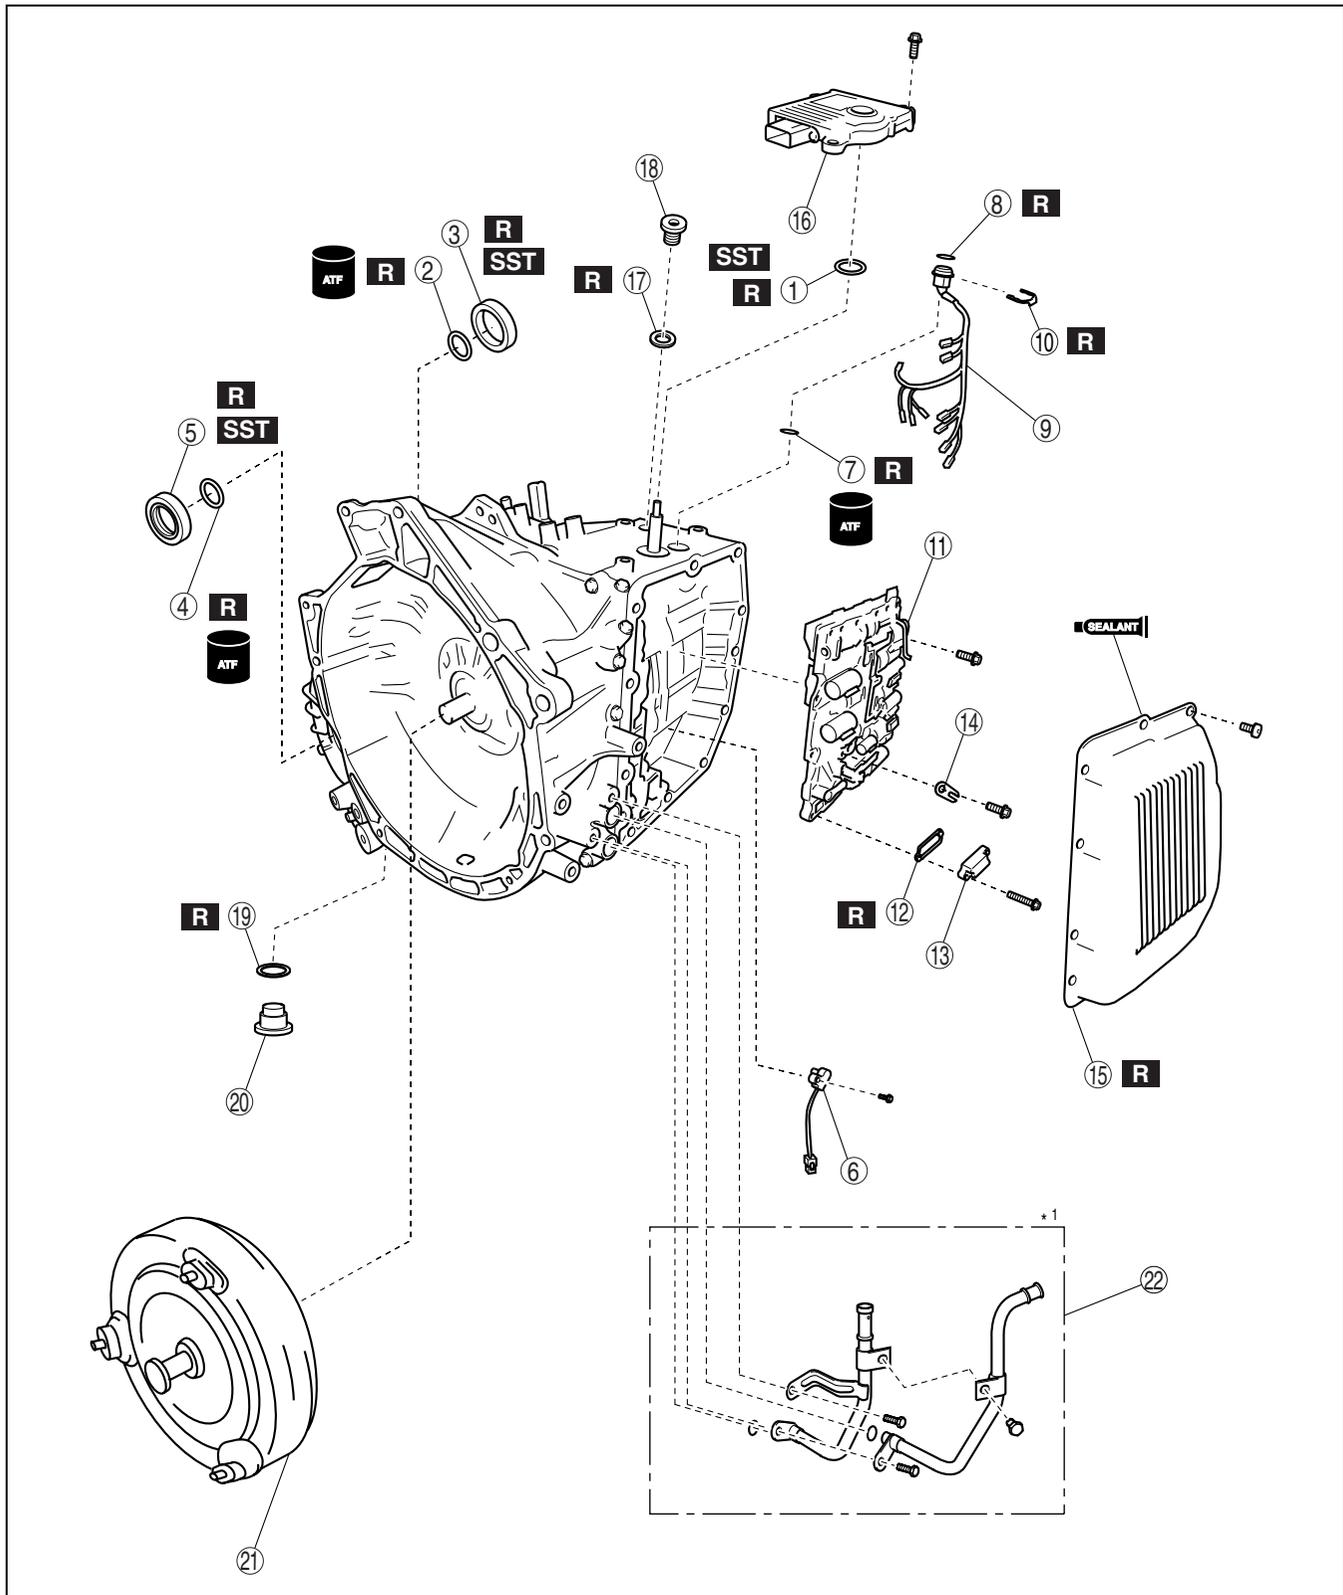

bawuuu00000416

1	Oil seal (manual shaft)
2	O-ring (transaxle case side)
3	Oil seal (transaxle case side)
4	O-ring (converter housing side) (2WD)
5	Oil seal (converter housing side)
6	Input/turbine speed sensor
7	Gasket

8	O-ring
9	Coupler component
10	Coupler component lock plate
11	Control valve body component
12	Gasket
13	Suction cover
14	Lock plate

AUTOMATIC TRANSAXLE

15	Control valve body cover
16	TCM
17	O-ring
18	Filler plug

19	Gasket
20	Drain plug
21	Torque converter
22	Oil pipe and O-ring

*1 : The figure shows Mazda6 specification.

Assembly Procedure

Caution

- Do not damage the oil seal.

1. Using the **SST** and a hammer, install a new oil seal to the transaxle case.


Substitution SST

- **49 F026 102**

Outer diameter: 27 mm {1.07 in} or more

Inner diameter: 15— 18 mm {0.60— 0.70 in}

2. Apply ATF to the new seal rings and sliding surface of the transaxle case.

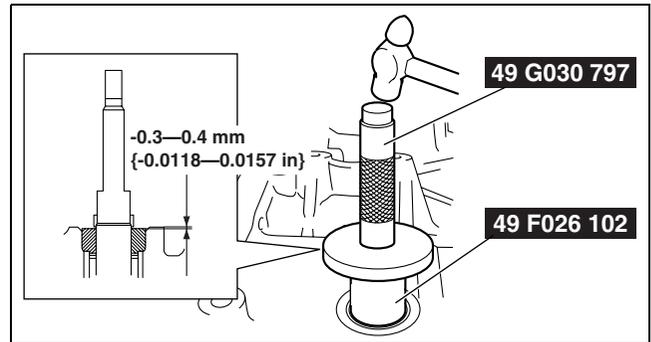

bawuuu00000417


3. Compress the seal rings as shown in the figure. Then install the seal rings in the transaxle case.

Caution

- Do not expand the seal rings too much.
- Be careful not to shorten the seal rings too much, when installing the seal rings.

Note

- Inspect that seal rings rotate smoothly after installing them.

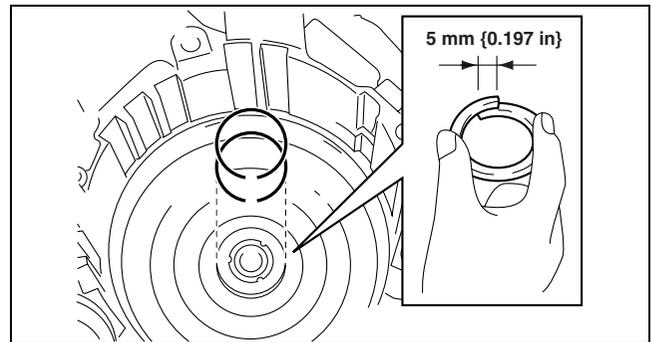


bawuuu00000418

4. Install the transaxle case plate No.3.

Tightening torque

3.9 — 6.9 N·m {40 — 70 kgf·cm, 26 — 60 in·lbf}

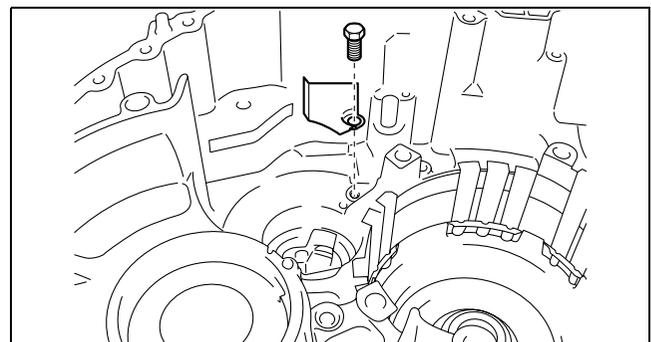

bawuuu00000419


05-17

AUTOMATIC TRANSAXLE

5. Install the transaxle case plate No.2.

Tightening torque

3.9 — 6.9 N·m {40 — 70 kgf·cm, 26 — 60 in·lbf}

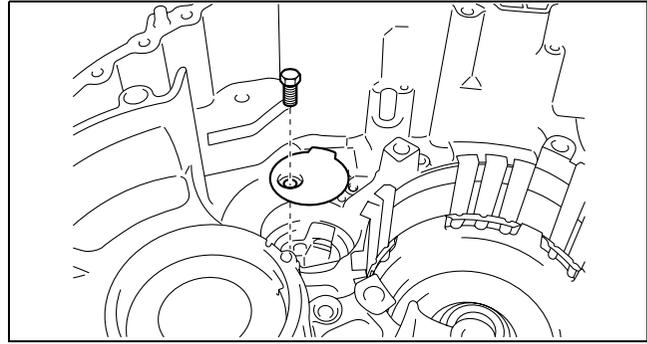


bawuua0000420

6. Apply ATF or grease to the thrust bearing and install it to the C2 clutch component.

7. Apply ATF to the seal ring and rubbing surface of the C2 clutch component where the bushing is fit.

Caution

- Do not damage the seal ring.

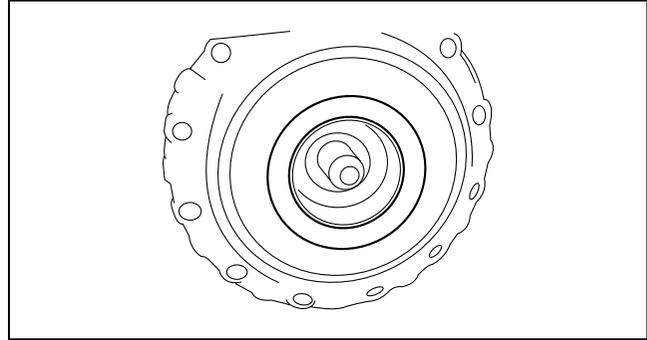


bawuua0000421

8. Install the C2 clutch component to the transaxle case.

9. Apply ATF to the driven plates, drive plates and retaining plates.

Note

- Replace with new drive plates after soaking them at least 2 h in ATF.

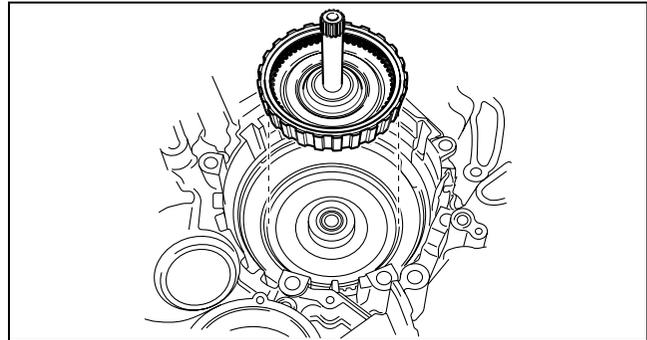

bawuua0000422


10. Install driven plates, drive plates and the retaining plate in the following order to the transaxle case as shown in the figure.

Six drive plates type

- Retaining— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Retaining

Seven drive plates type


- Retaining— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Driven— Drive— Retaining

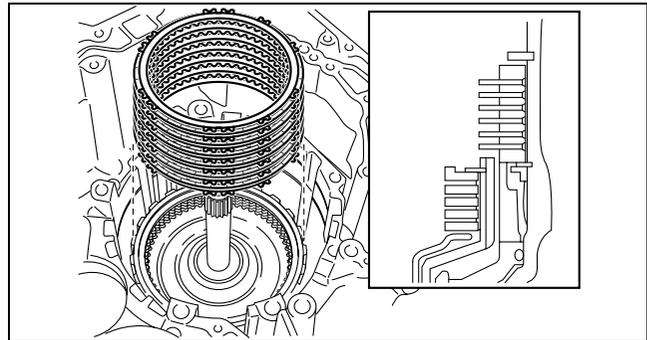

bawuua0000423

Caution

- Inspect the number and order of the retaining plates, drive and driven plates.

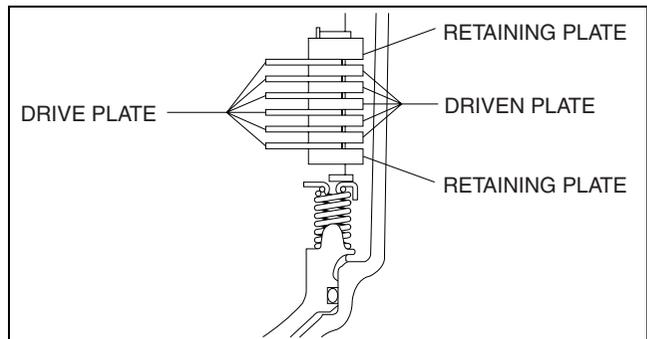


bawuua0000424

AUTOMATIC TRANSAXLE

11. Using a flathead screwdriver, install the snap ring in the groove.

Caution

- Align the opening of the snap ring with the position as shown in the figure.

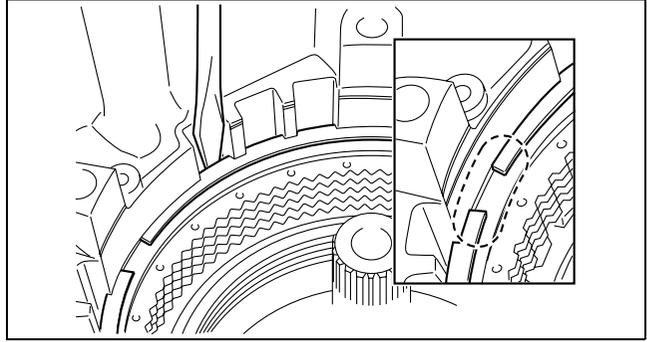


bawuuu00000425

05-17

12. Apply ATF to the thrust bearing and the bearing races and install them to the transaxle case.

Note

- Align the spline of the C2 clutch drive plates and B2 brake drive plates before installing the rear planetary gear component.

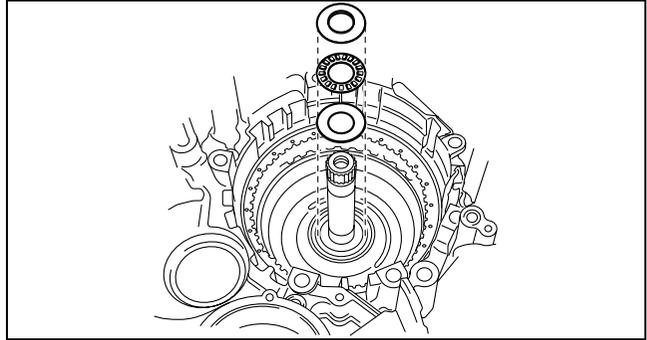


bawuuu00000426

13. Apply ATF to each gear and the bushing, and then install the rear planetary gear component to the transaxle case.

14. Apply ATF to the sliding surface of the one-way clutch.


Note

- For easy installation, while turning the rear planetary gear component, install it.

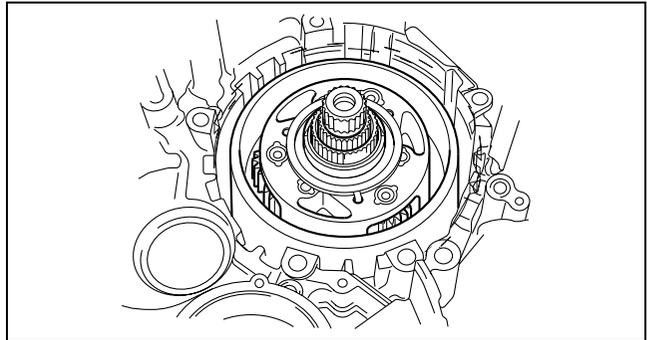

bawuuu00000427

15. Install the one-way clutch to the transaxle case.

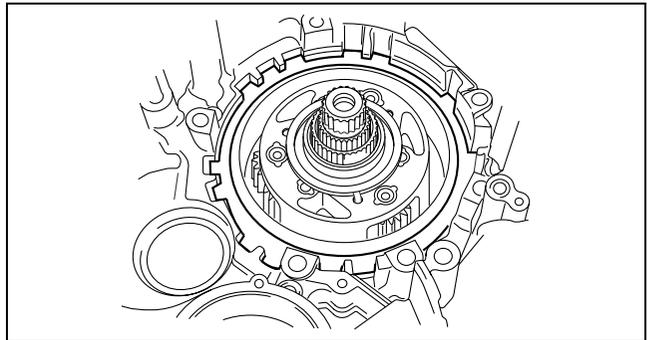


bawuuu00000428

16. Using a flathead screwdriver, install the snap ring in the groove.

Caution

- Align the opening of the snap ring with the position shown in the figure.

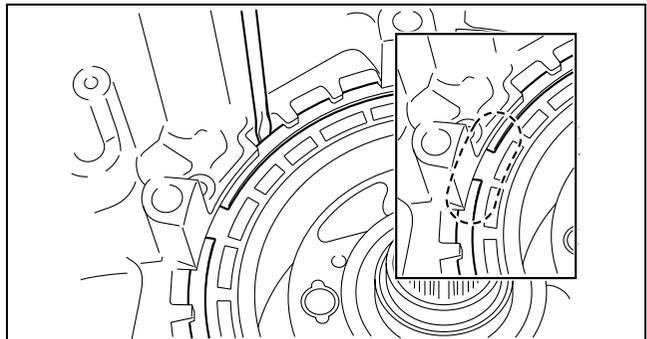


bawuuu00000429

AUTOMATIC TRANSAXLE

17. While holding the one-way clutch component, inspect that the planetary gear turns to right (clockwise) but does not turn to left (counterclockwise).

Caution

- Do not damage the VSS.

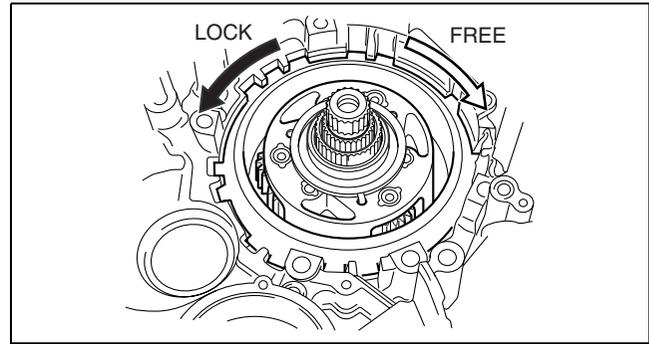

bawuua00000430

18. Install the VSS and spacer to the counter drive gear.


Tightening torque

3.9 — 6.9 N·m {40 — 70 kgf·cm, 26 — 60 in·lbf}

19. Apply ATF to the spline on the counter drive gear and spline on the ring gear.

Caution

- Do not damage the VSS wiring harness.
- Do not pull hard on the VSS wiring harness.

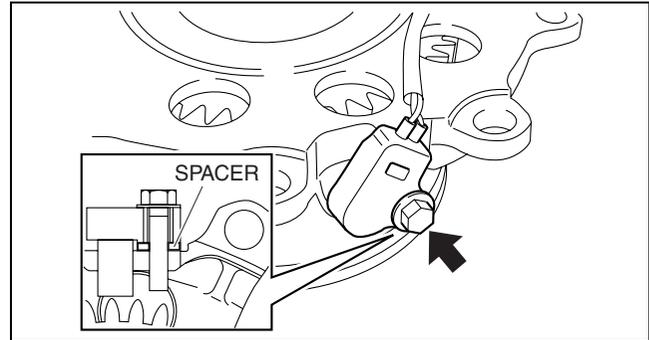

bawuua00000431

20. Install the counter drive gear to the transaxle case.

Note

- Verify that the claws of the lockwashers are facing upward.

21. Install the new lockwashers and washers with new bolts.


Tightening torque

82.7 — 93.6 N·m {8.5 — 9.5 kgf·cm, 61.0 — 69.0 ft·lbf}

Bolt length (measured from below the head)

A: 28 mm {1.102 in}


B: 35 mm {1.378 in}

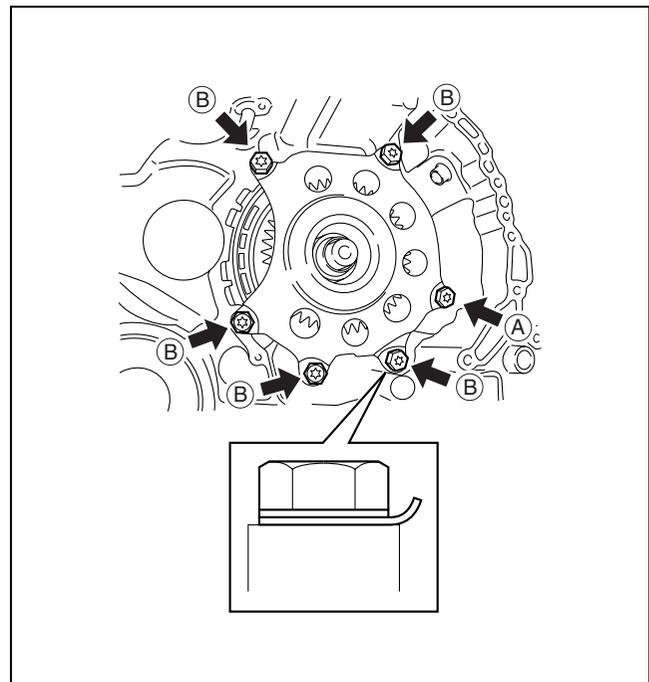

bawuua00000432

AUTOMATIC TRANSAXLE

22. Using a flathead screwdriver and a hammer, pry back the crimp locking the lockwashers.
23. Apply ATF to the new O-rings.
24. Install the O-rings to the oil cooler outlet tube.

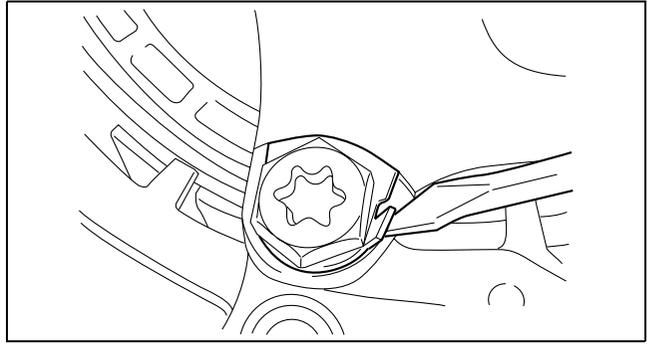

bawuuu00000433


25. Install the oil cooler outlet tube, pipe clamp, transaxle case No.1 plate and the wiring harness clip to the converter housing.

Caution

- Do not damage the VSS wiring harness.
- Do not pull hard on the VSS wiring harness.


Tightening torque

7.8 — 11.8 N·m {82 — 122 kgf·cm, 72 — 105 in·lbf}

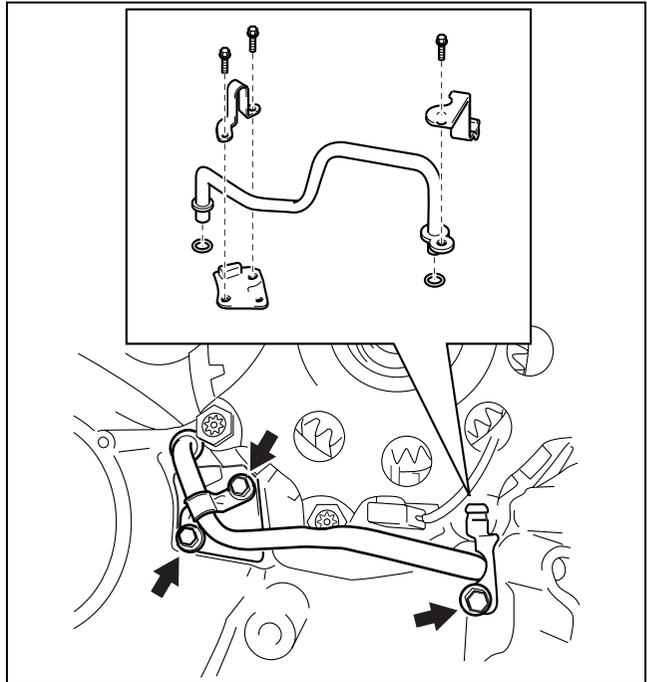


bawuuu00000434

26. Connect the VSS wiring harness to the wiring harness clip.
27. Apply ATF to the bearing and gear of the differential component.

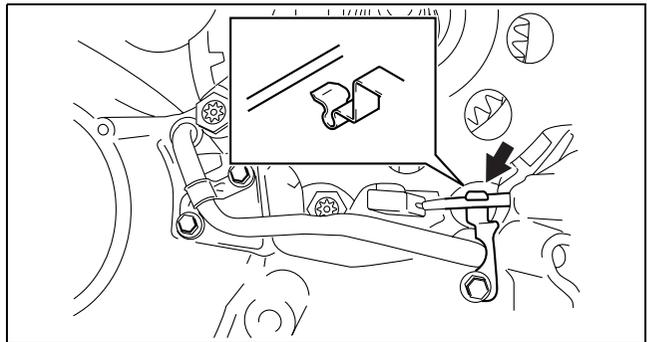

bawuuu00000435

28. Install the differential component to the transaxle case.
29. Apply ATF to the bearing and gear of the counter gear component.

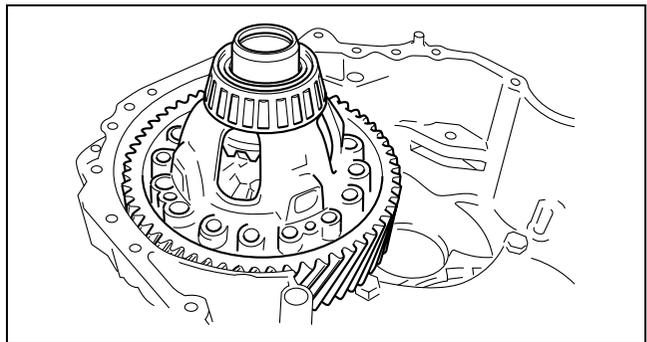

bawuuu00000436


05-17

AUTOMATIC TRANSAXLE

30. Install the counter gear component to the transaxle case.

Note

- If it is difficult to install the counter driven gear, remove the differential component and then install the counter driven gear. Install the differential component again.
- For easy installation, tilt the counter gear slightly.

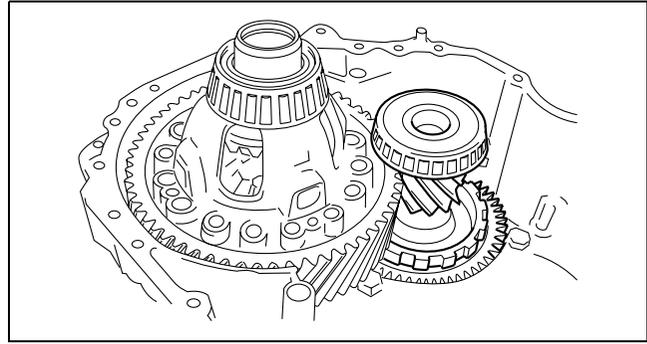


bawuua00000437

31. Install the parking pin to the transaxle case.


Caution

- Verify to install the parking pin as shown in the figure.

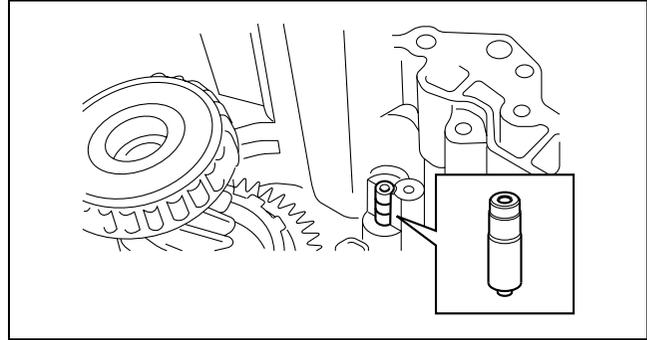


bawuua00000438

32. Insert the parking rod to the transaxle case.

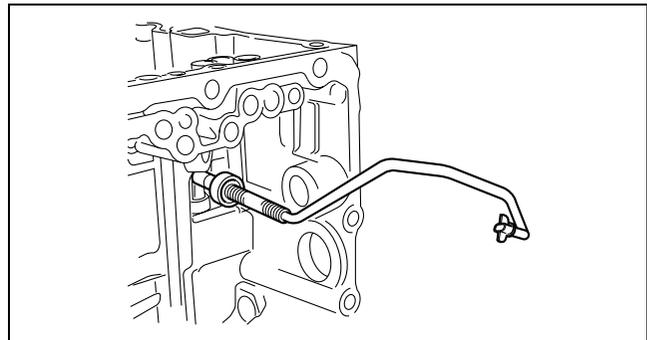


bawuua00000439

33. Install the manual valve lever to the transaxle case.

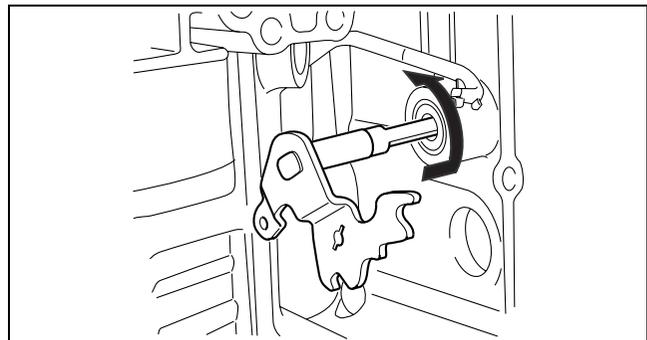

bawuua00000440

34. Connect the parking rod to the manual valve lever.

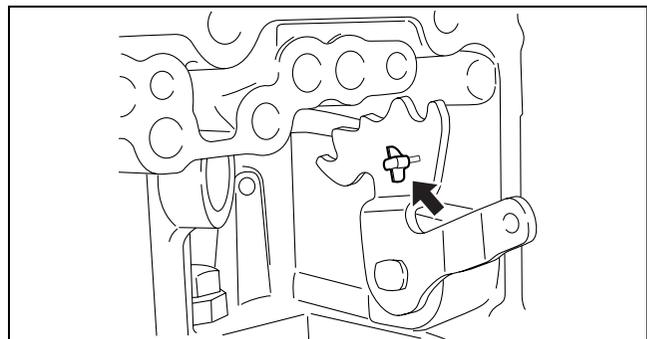

bawuua00000441

AUTOMATIC TRANSAXLE


35. Install the parking pawl, parking pawl bracket and the parking rod to the transaxle case.

Caution

- Do not apply too much force to the torsion spring.

Tightening torque

7.8 — 11.8 N·m {82 — 122 kgf·cm, 72 — 105 in·lbf}

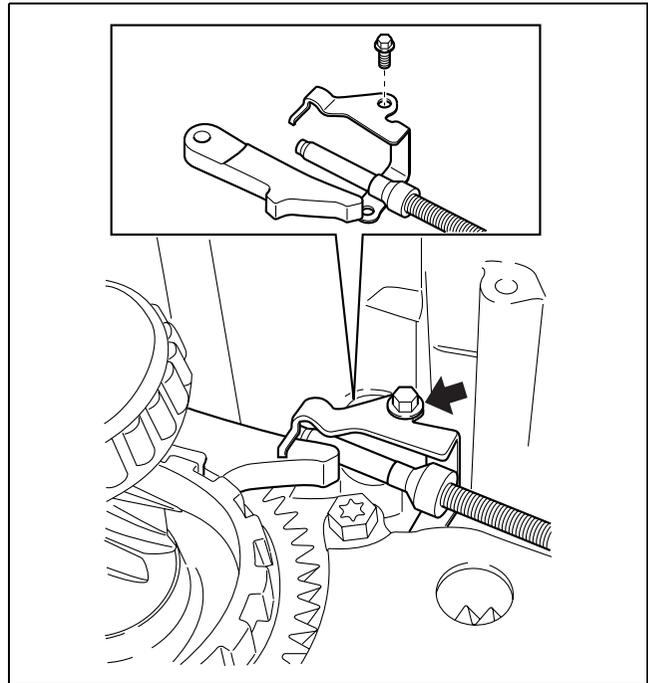

bawuuu00000442


36. Install the spring guide sleeve and the torsion spring.

Tightening torque

7.8 — 11.8 N·m {82 — 122 kgf·cm, 72 — 105 in·lbf}

Note

- Install the torsion spring to the position of the parking lock pawl and parking lock pawl bracket shown in the figure together with the spring guide sleeve and torsion spring installed.

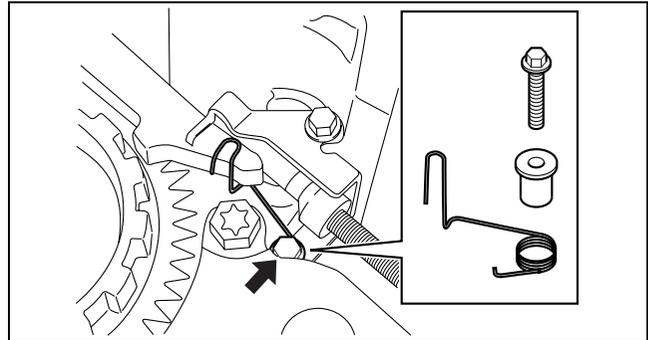

bawuuu00000443

Caution

- Do not apply too much force to the pawl return spring.


37. Install the pawl return spring to the parking pawl shaft.
38. Install the pawl return spring and the parking pawl shaft to the transaxle case.

Caution

- Do not apply too much force to the detent spring.

Note

- When installing the pawl return spring to transaxle case, install the parking pawl side of the spring, then install the parking pawl shaft.

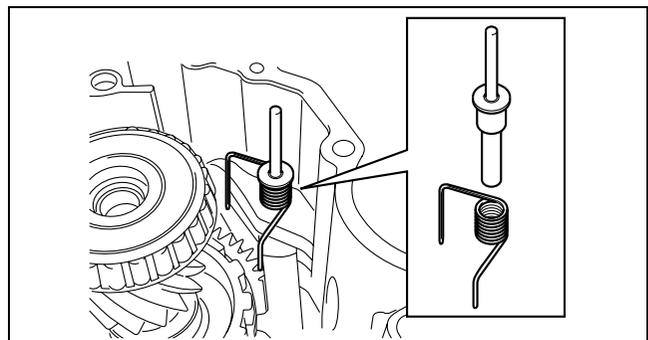

bawuuu00000444


05-17

AUTOMATIC TRANSAXLE

39. Install the detent spring cover and detent spring to the transaxle case.

Tightening torque


7.8 — 11.8 N·m {82 — 122 kgf·cm, 72 — 105 in·lbf}

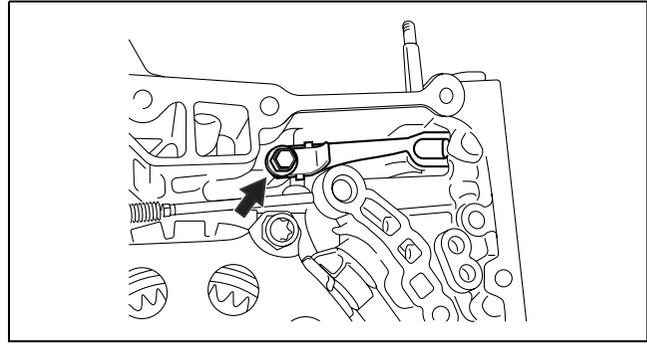

bawuua00000445

Note


- When installing, ensure that the center of the detent spring's roller fits the center of the manual valve lever.

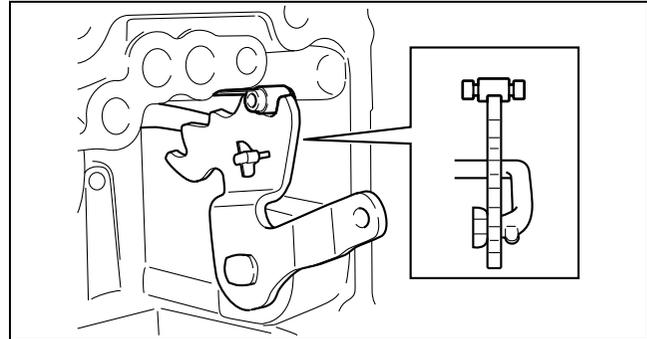

bawuua00000446

40. Install the sun gear input drum to the transaxle case.

41. Apply ATF to the bearing race and the thrust bearing, and then install them to the transaxle case.

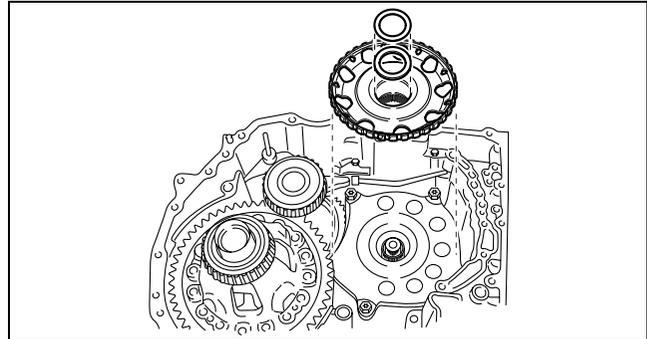

bawuua00000447

42. Install the C1 clutch component to the transaxle case.


43. Apply ATF to the bearing race and the thrust bearing, and then install them to the transaxle case.

Caution

- If the input shaft is not hold during installation, the thrust washer might be come off.

Note

- Align the spline of the C1 clutch drive plates before installing the input shaft and front planetary gear.
- Hold the C1 clutch component and install the front planetary gear while holding the input shaft.

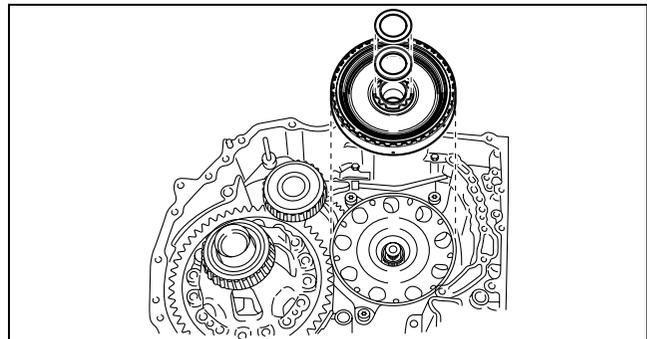


bawuua00000448

AUTOMATIC TRANSAXLE

44. Install the input shaft and the front planetary gear to the transaxle case.
45. Apply ATF to the bushing of the C3 clutch component.


Note

- Before installing the C3 clutch component, align the spline of the C3 clutch drive plates and the spline of the B1 brake drive plates.

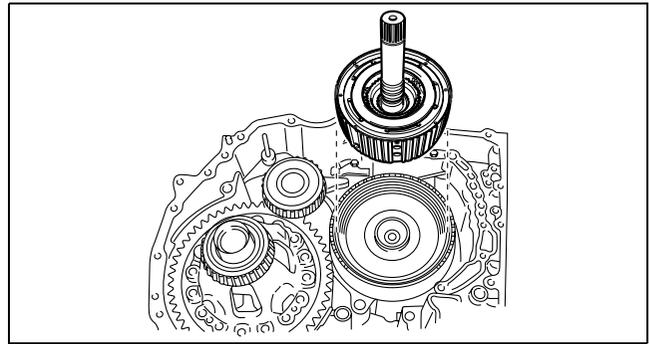

bawuuu00000449


46. Install the C3 clutch component to the transaxle case.

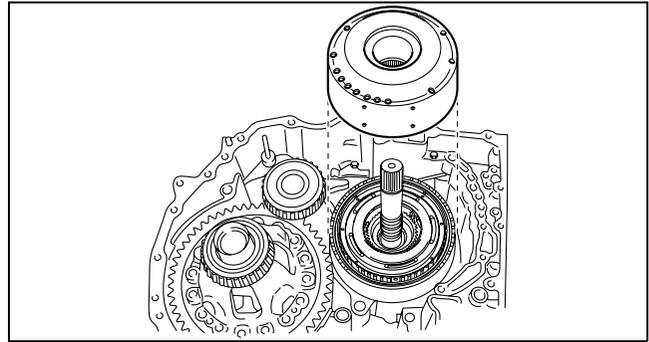

bawuuu00000450


Note

- Install the C3 clutch component so that it engages with the sun gear drum as shown in the figure.

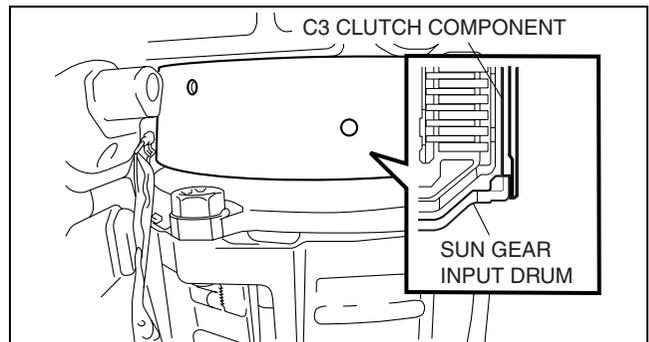

bawuuu00000451

47. Install the B1 brake band to the transaxle case.

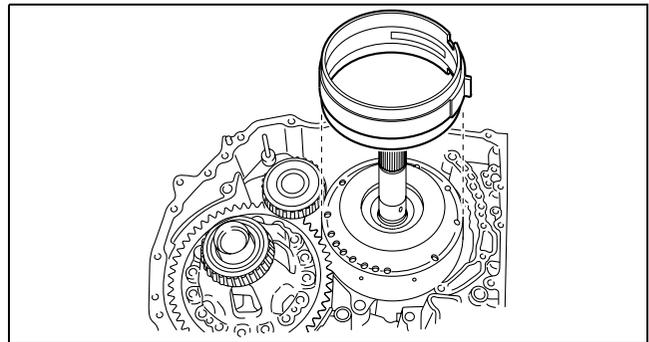


bawuuu00000452

48. Install the brake band anchor bolt to the transaxle case.

Tightening torque


133.3 — 199.9 N·m {13.6 — 20.3 kgf·m, 98.3 — 147.4 ft·lbf}

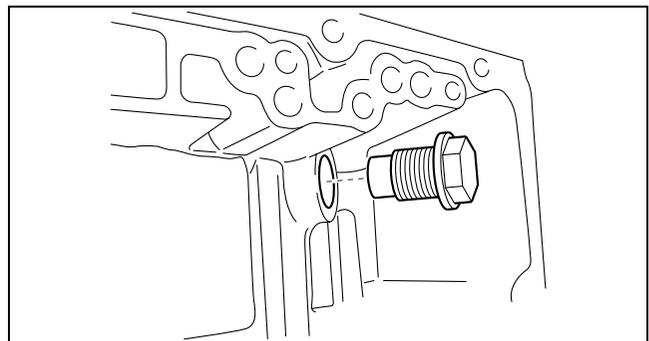

bawuuu00000453


AUTOMATIC TRANSAXLE

49. Install the piston return spring, B1 brake piston and the brake piston cover to the transaxle case.

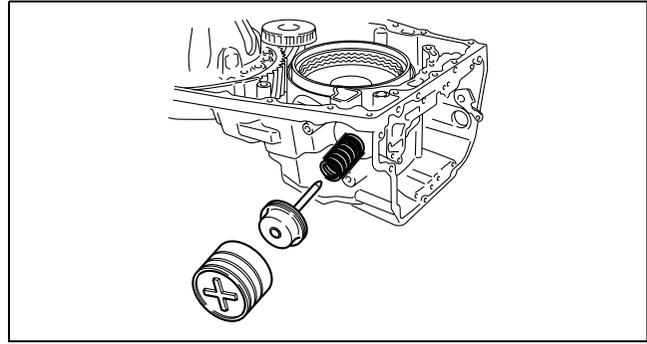

bawuua00000454

50. Using the **SST**, press the brake piston cover into the position where the snap ring groove is visible.
51. Apply ATF to the oil seal.

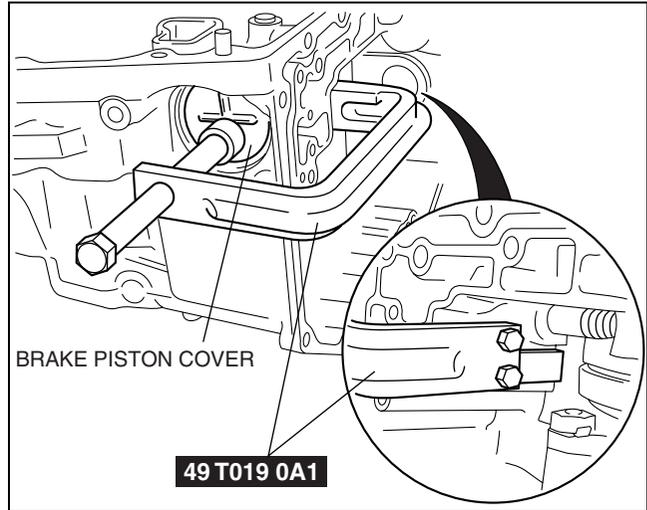


bawuua00000455

52. Install the oil strainer and the oil seal to the oil pump component.
53. Apply ATF to each rubbing surface of the oil pump component.

Caution

- Do not drop the thrust washer.
- Do not damage the oil seal.

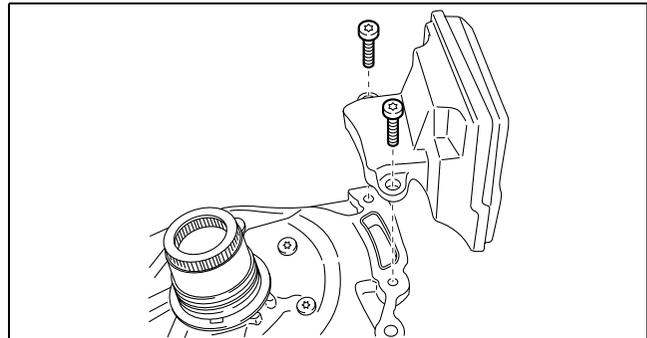

bawuua00000456

54. Install the oil pump component to the transaxle case.


Tightening torque

19.6 — 29.4 N·m {2.0 — 2.9 kgf·m, 14.5 — 21.6 ft·lbf}

Bolt length (measured from below the head)


A: 22 mm {0.866 in}

B: 35 mm {1.378 in}

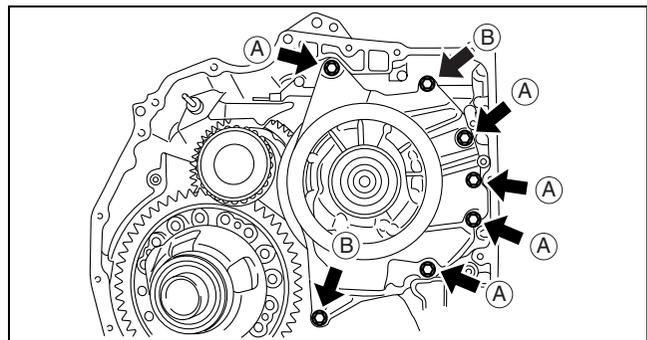

bawuua00000457

55. Verify that the input shaft turns smoothly.

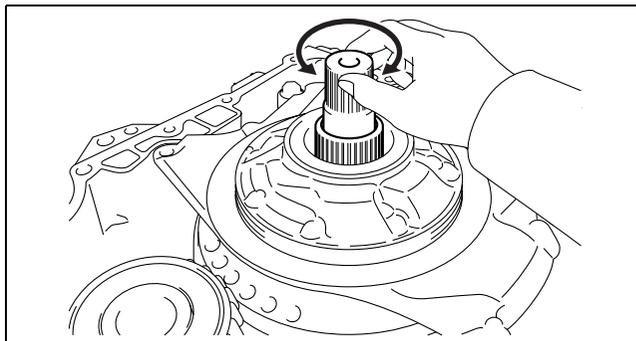


bawuuu00000458

05-17


56. Using a dial indicator, measure the input shaft end play.

Input shaft end play
 0.349 — 1.081 mm {0.01374 — 0.04255 in}

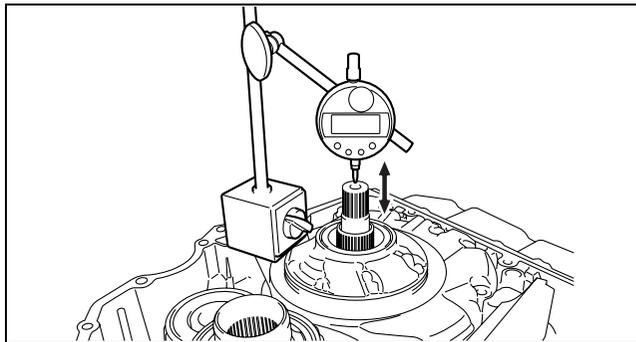

bawuuu00000459

57. Put a mark on the piston rod at the point where it intersects with the case.

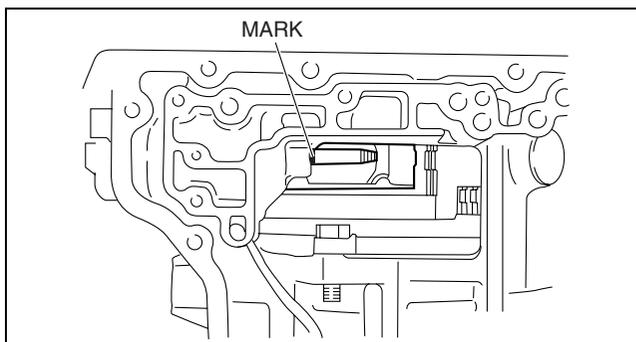


bawuuu00000460

58. Measure the stroke between the transaxle case and the mark on the piston rod when applying compressed air into the oil hole as shown in the figure.

Air pressure
 400 kPa {4.1 kgf/cm², 58 psi}

B1 brake piston stroke
 5.50 — 6.00 mm {0.217 — 0.236 in}

- If not within the specification, select an appropriate piston rod.

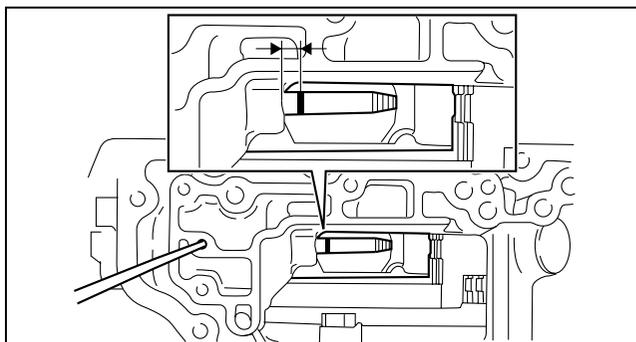

bawuuu00000461


AUTOMATIC TRANSAXLE

Piston rod size

Identification mark	Length (mm {in})
—	102.80 {4.0473}
1	103.05 {4.0571}
2	103.30 {4.0669}
3	103.55 {4.0768}
4	103.80 {4.0866}
5	104.05 {4.0965}
6	104.30 {4.1063}
7	104.55 {4.1161}
8	104.80 {4.1260}
9	105.05 {4.1358}
10	105.30 {4.1457}


Caution

- Do not damage the differential gear lube apply tube.

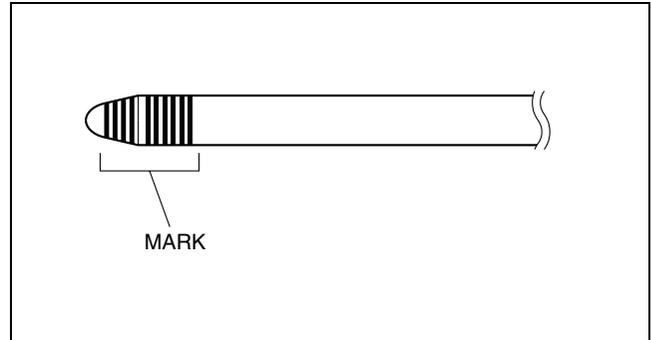

bawuua00000462

59. Install the differential gear lube apply tube to the converter housing.

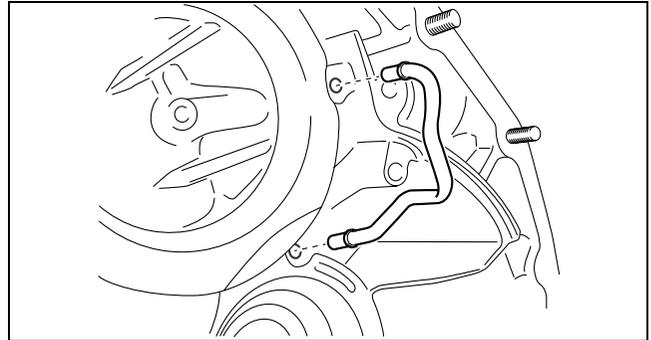


bawuua00000463

60. Install the magnets to the oil reservoir lock plate.

Caution

- Do not damage the oil reservoir lock plate.

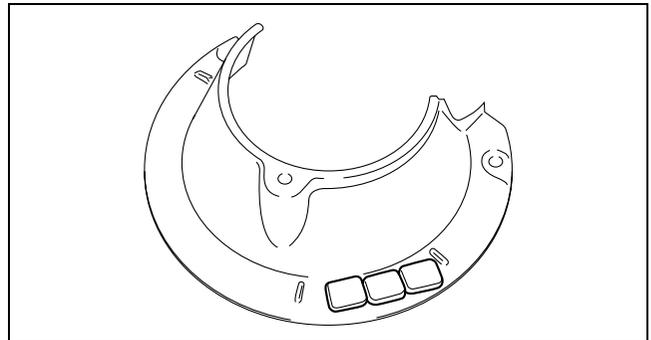

bawuua00000464


AUTOMATIC TRANSAXLE

61. Install the oil reservoir lock plate and the tube clamp to the converter housing.

Tightening torque

3.9 — 6.9 N·m {40 — 70 kgf·cm, 26 — 60 in·lbf}


62. Apply ATF to the new gaskets.

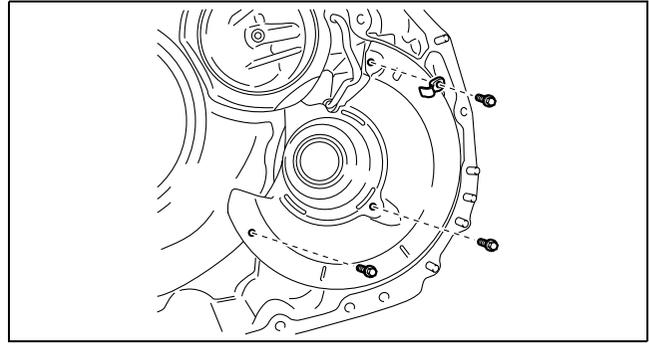

bawuuu00000465

63. Install the gaskets to the transaxle case as shown in the figure.

64. Apply ATF to the new transaxle case gaskets.

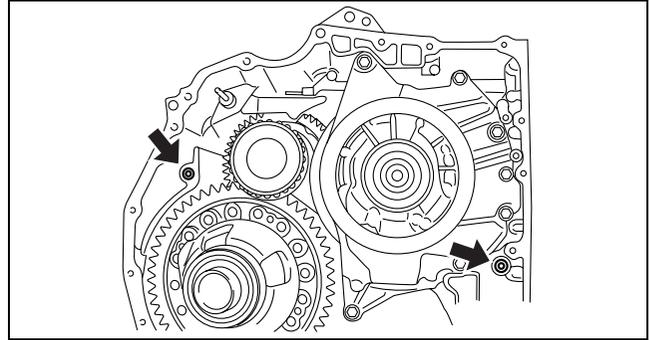

bawuuu00000466


65. Install the transaxle case gaskets to the transaxle case as shown in the figure.

Caution

- Verify to install the transaxle case gasket as shown in the figure.

66. Remove any packing material and be careful not to get oil on the contact surface of the transaxle case and the converter housing.

67. Clean the contact surface of the transaxle case and the converter housing and the bolt holes.

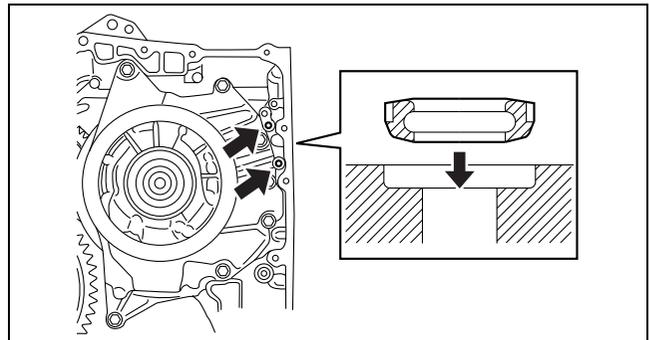

bawuuu00000467

Note

- Completely remove sealant and oil with white gasoline or equivalent.

68. Apply ATF to a O-ring of the oil pump.


69. Apply sealant to the converter housing as shown in the figure.

Note

- Spread sealant over the contact surface.
- Do not apply sealant to the transaxle case.

Caution

- Do not damage the O-ring on the oil pump component.
- Do not damage the housing oil seal.

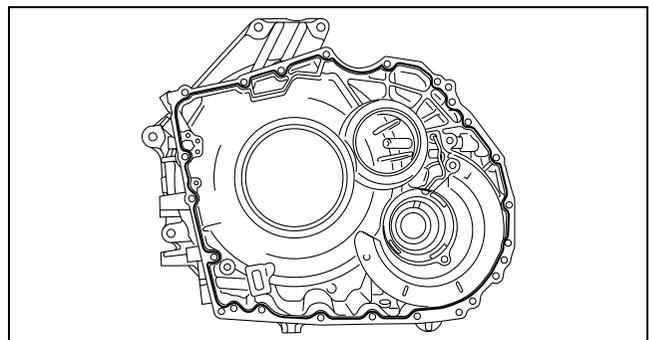

bawuuu00000468

05-17


AUTOMATIC TRANSAXLE

70. Install the converter housing to the transaxle case.


Note

- Tap all around the contact surface with a plastic hammer during installation.

71. Temporarily tighten the bolts by hand as shown in the figure.

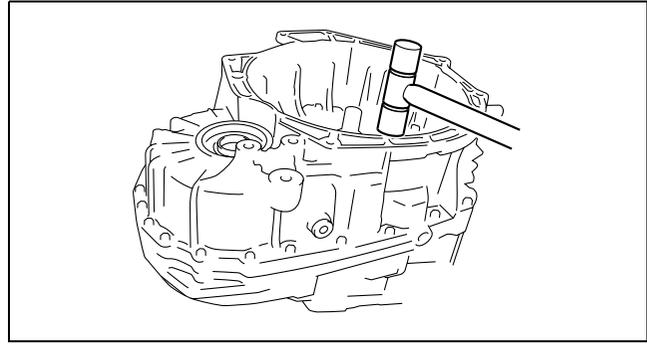

bawuuu00000469

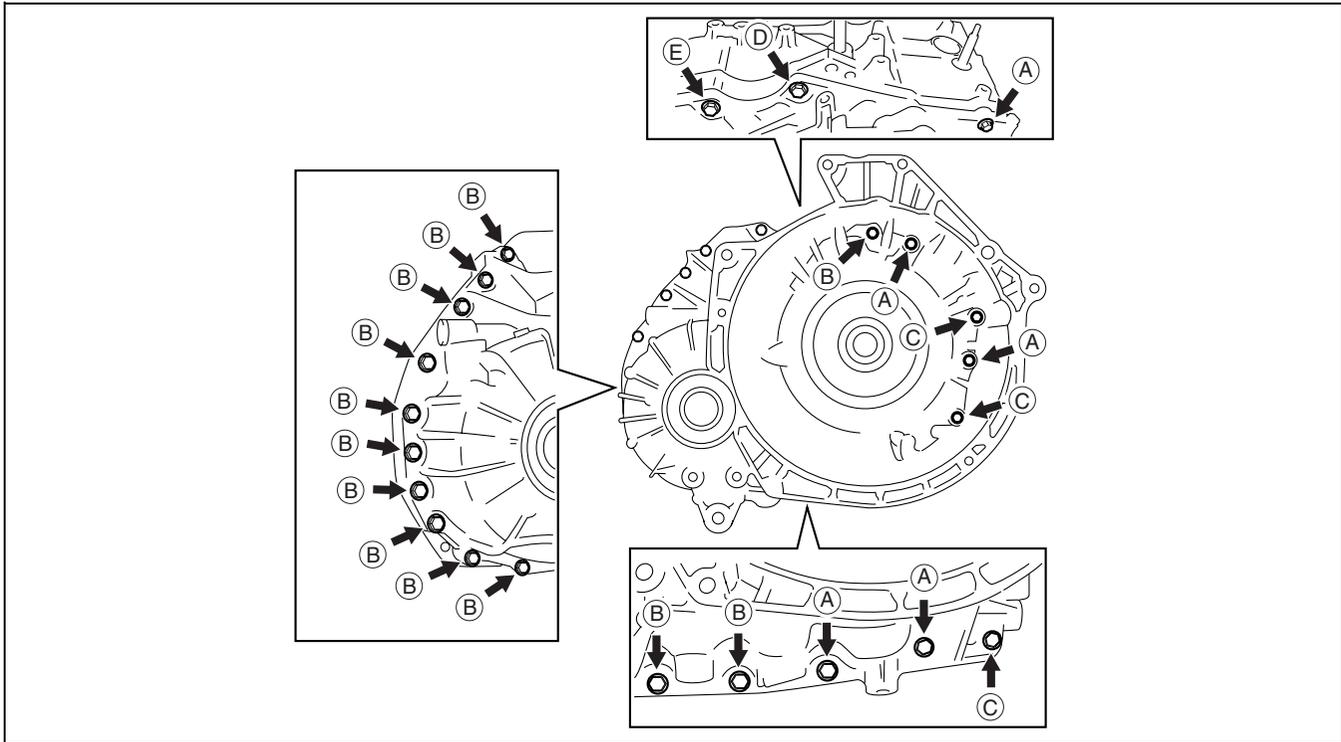

bawuuu00000470

Bolt number	Bolt size	Length (measured from below the head) (mm {in})
A	M8 × 1.25	30 {1.18}
B	M8 × 1.25	35 {1.38}
C	M8 × 1.25	39 {1.54}
D	M10 × 1.25	25 {0.984}
E	M10 × 1.25	40 {1.57}

72. Tighten the bolts.

Tightening torque

- A, B, C: 23.5 — 35.3 N·m {2.4 — 3.5 kgf·m, 17.4 — 26.0 ft·lbf}
 D, E: 29.4 — 41.2 N·m {3.0 — 4.2 kgf·m, 21.7 — 30.3 ft·lbf}


Caution

- Do not damage the input/turbine speed sensor.

73. Install the input/turbine speed sensor to the transaxle case.

Tightening torque

3.9 — 6.9 N·m {40 — 70 kgf·cm, 26 — 60 in·lbf}

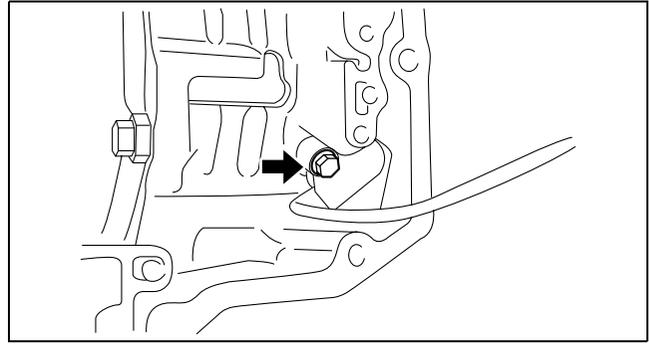

bawuuu00000471

74. Apply ATF to a new gasket as shown in the figure.
75. Install the gasket to the coupler component.


Caution

- Do not apply ATF to the O-ring.

76. Install a new O-ring to the coupler component.

Caution

- Do not apply too much force to the coupler component.
- Do not damage the coupler component.

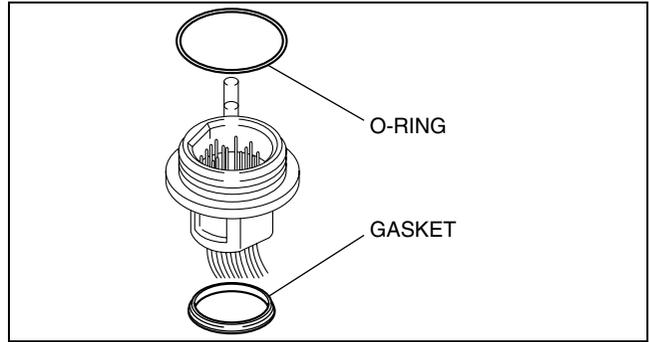

bawuuu00000472

77. Install the coupler component to the transaxle case.


Note

- Install the coupler component to the transaxle case by engaging its claw.

78. Install a new coupler component lock plate.


Caution

- When installing the control valve body component, do not put the coupler component in the open space of the separate plate in the control valve body component.
- Do not pinch the coupler component between the separate plate and the control valve body component.

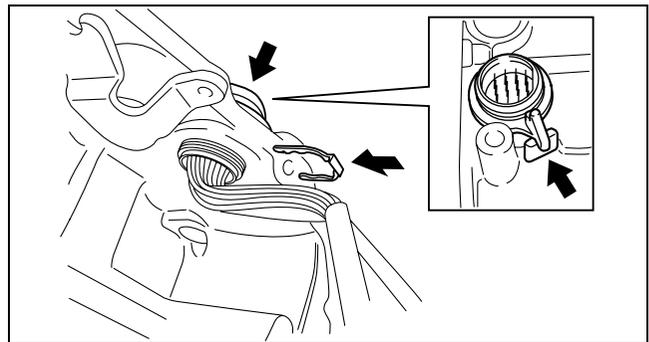

bawuuu00000473

79. Connect the manual valve link and install the control valve body component.

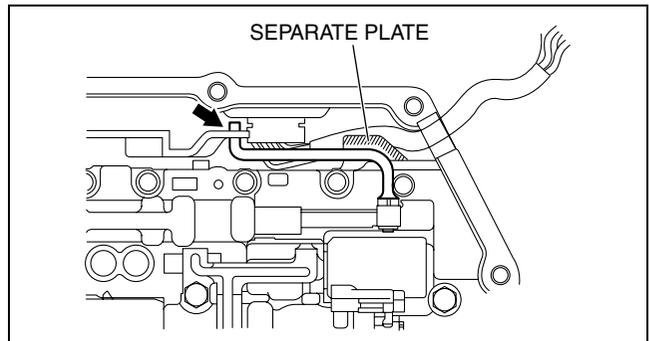

bawuuu00000474

AUTOMATIC TRANSAXLE


80. Temporarily install the control valve body component with the bolts.

Bolt length (measured from below the head)

- A: 31 mm {1.220 in}
- B: 17 mm {0.669 in}
- C: 21 mm {0.827 in}


Note

- Aligning the bolt holes, temporarily tighten the bolts by hand.

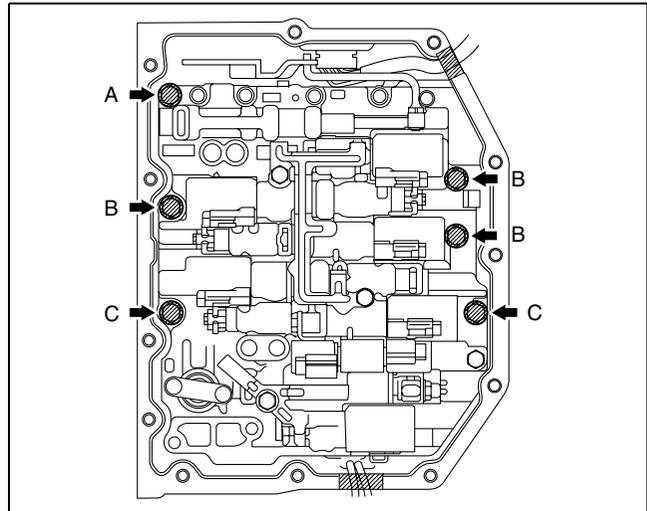

bawuua00000475

81. Temporarily install the suction cover and a new gasket with the bolts.

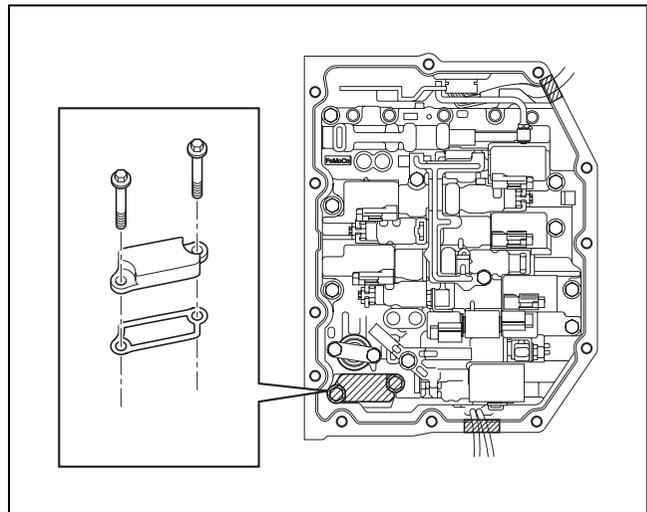


bawuua00000476

82. Tighten the bolts in the order shown in the figure.

Tightening torque


- 8 — 12 N·m {82 — 122 kgf·cm, 72 — 105 in·lbf}

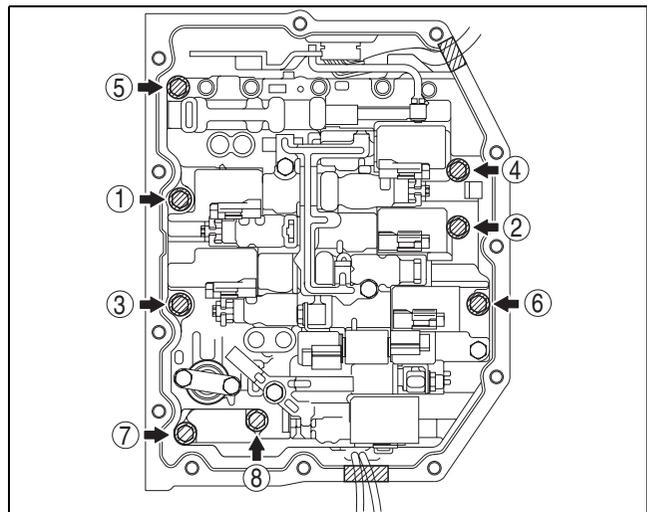

bawuua00000477

AUTOMATIC TRANSAXLE

83. Install the connector of the VSS and input/turbine speed sensor to the solenoid clamp.

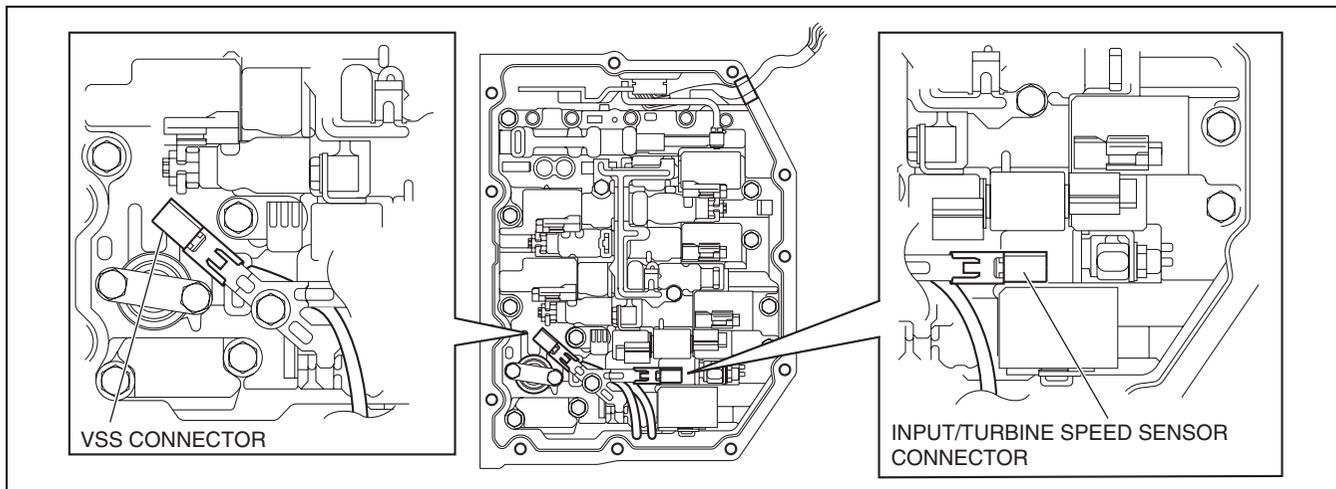


05-17

bawuuu00000478

Caution

- If the control valve body cover is installed with the wiring harnesses overlapped, the wiring harnesses may be pinched between the cover and valve body causing the wiring harnesses to be damaged. Therefore, verify that the wiring harnesses are not overlapped when installing the control valve body cover.

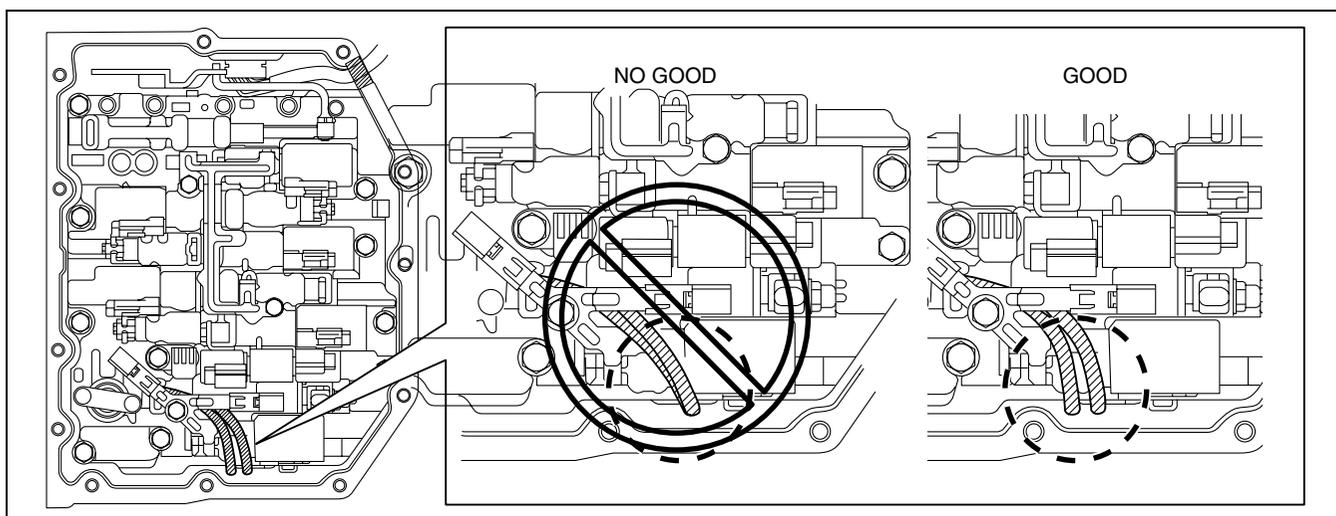

bawuuu00000479


84. Apply ATF to a new O-ring and install it on the TFT sensor.

85. Install the TFT sensor with the lock plate and a bolt to the control valve body component as shown in the figure.

Tightening torque

8 — 12 N·m {82 — 122 kgf·cm, 72 — 105 in·lbf}

86. Connect the solenoid connectors, VSS connector and the input/turbine speed sensor connector.

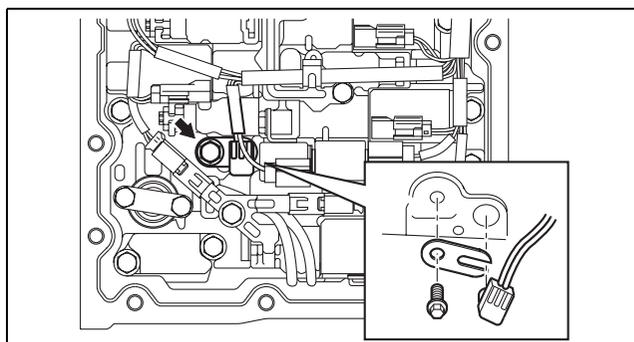


bawuuu00000480

AUTOMATIC TRANSAXLE

87. Connect the coupler component to the clamps.

Note

- Completely remove sealant and oil with white gasoline or similar.

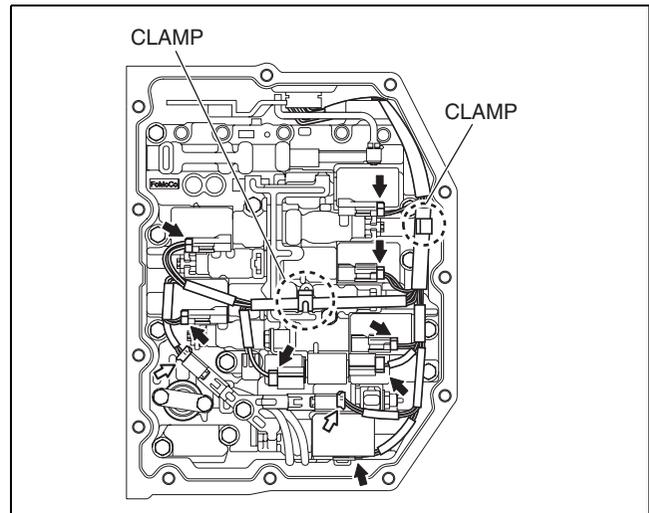


bawuua00000481

88. Clean sealant and oil off the contact surface of the transaxle case with the control valve body cover and the bolt holes.

Note

- Completely remove oil with white gasoline or similar.

89. Clean oil off the contact surface of the new control valve body cover with the transaxle case.

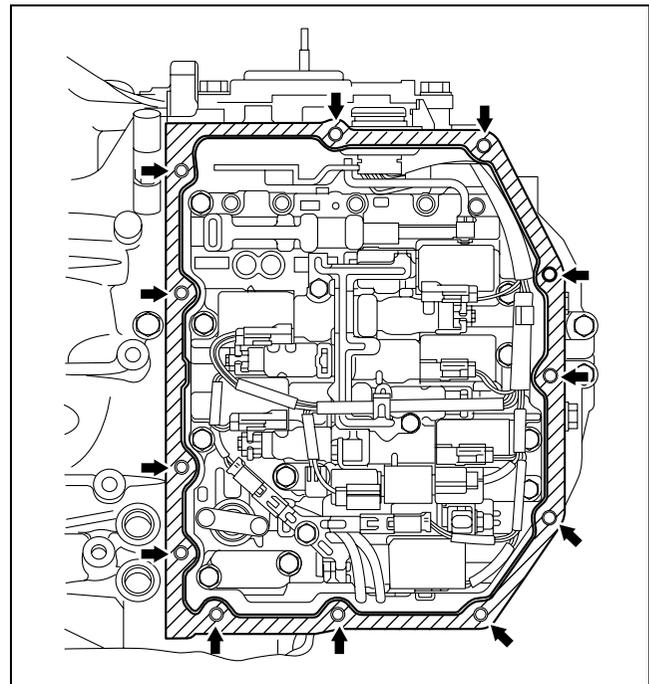


bawuua00000482

90. Apply sealant to the new control valve body cover as shown in the figure.

Caution

- Be careful that the coupler component will not become caught between the control valve body cover and transaxle case.

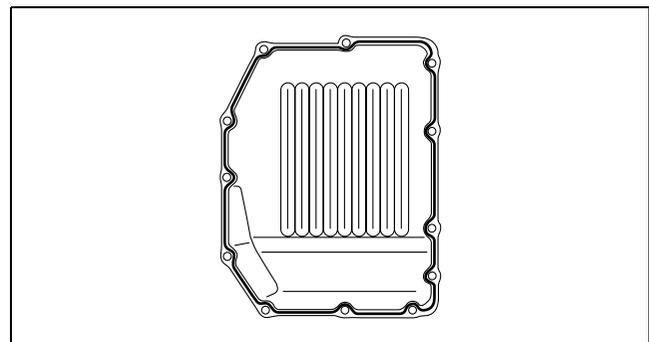


bawuua00000483

AUTOMATIC TRANSAXLE

91. Install the new control valve body cover with new seal bolts.


Tightening torque

9.8 — 15.7 N·m {100 — 160 kgf·cm, 87 — 138 in·lbf}

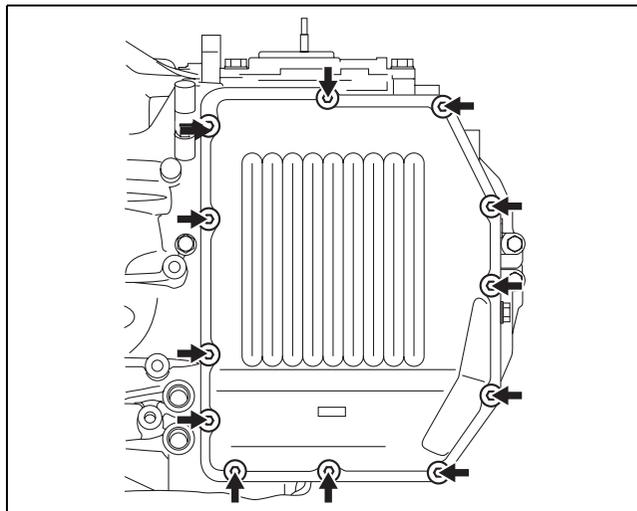


bawuua00000484

92. Inspect the condition of connector pin of the coupler component (foreign material, bent/broken pins) and O-ring.

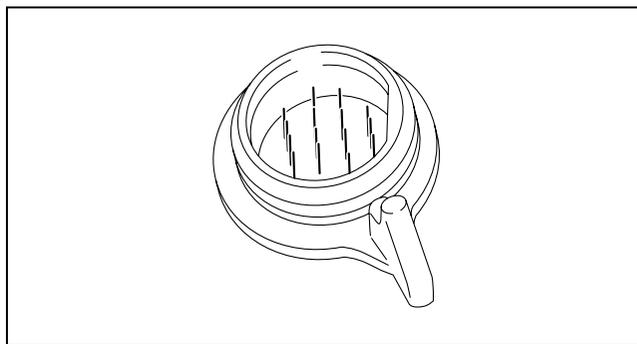

bawuua00000485

93. Align the transaxle case and the coupler component connector.

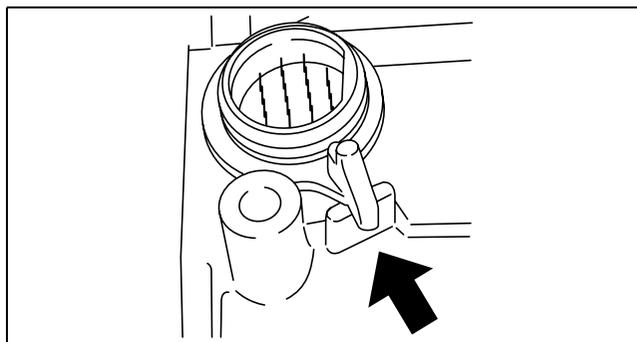


bawuua00000486

94. Be sure to match the position of the TCM marking.

Caution

- Do not turn more than 60° from the marking.

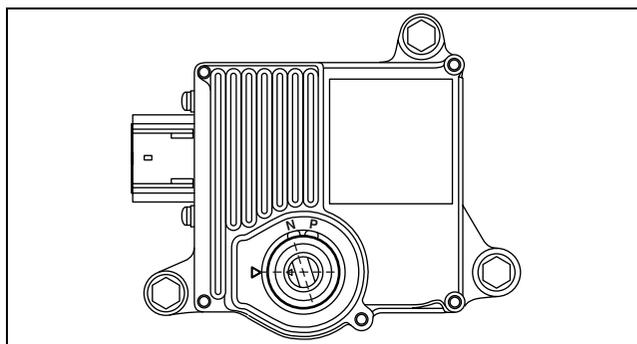

bawuua00000487

05-17

AUTOMATIC TRANSAXLE


95. Verify the correct positioning of the TCM and coupler component.
96. Install the TCM to the transaxle case.

Tightening torque

19.6 — 29.4 N·m {2.0 — 2.9 kgf·m, 14.5 — 21.6 ft·lbf}

Caution

- Do not repair the threads using a tap or other tools.
- Do not damage the transaxle case.
- Do not overtighten the stud bolts. (The stud bolts should remain protruded from the end of the transaxle case more than 47 mm {1.85 in}.)
- If any of the stud bolts is overtightened, the transaxle case may be damaged (holes in the case may result).
- If the transaxle case is damaged, the transaxle must be replaced.

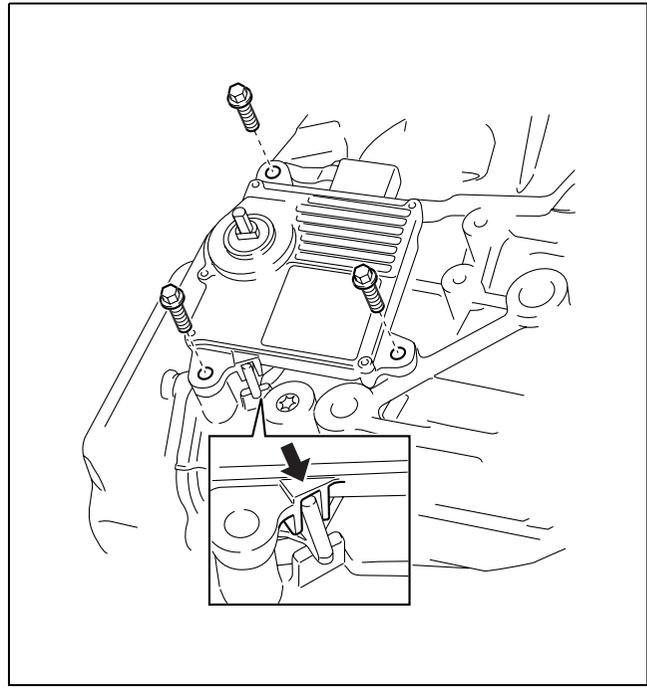


bawuua00000488

97. Install the double nutted stud bolts to the transaxle case.
98. Remove the double nutted from the stud bolt.

Caution

- Do not damage the oil seal.

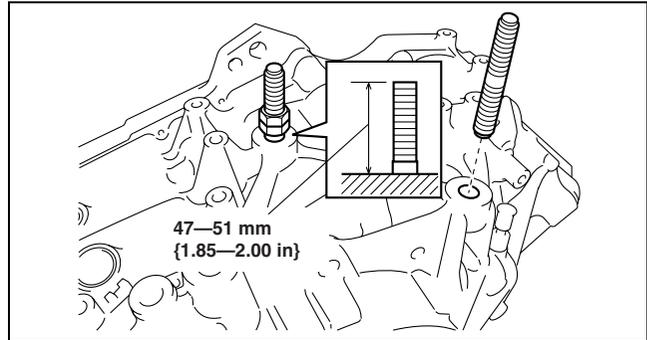


bawuua00000489

99. Using the SST and a hammer, tap a new oil seal so that the specified oil seal position is obtained.

Transaxle Case Side

Substitution SST

- 49 H028 202
Outer diameter: 54.5— 61 mm {2.15— 2.40 in}
Inner diameter: 52 mm {2.05 in} or more
Plate thickness: 2 mm {0.08 in} or more

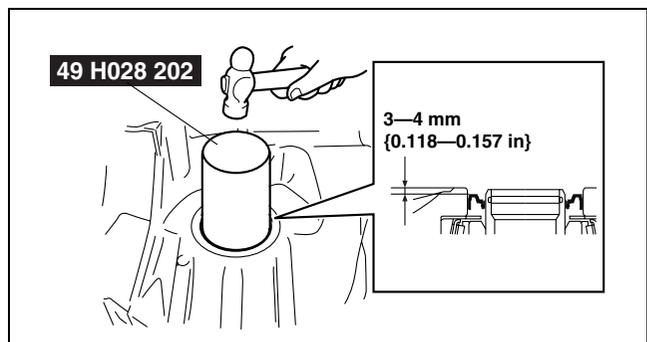


bawuua00000490

Converter Housing Side

Substitution SST

- **49 F027 009**
Outer diameter: 76.8 mm {3.02 in}
Plate thickness: 2 mm {0.08 in} or more
- **49 L033 101**
Outer diameter: 73—76.3 mm {2.88—3.00 in}
Inner diameter: 69 mm {2.72 in} or more
Length: 20 mm {0.79 in} or more
Plate thickness: 2 mm {0.08 in} or more

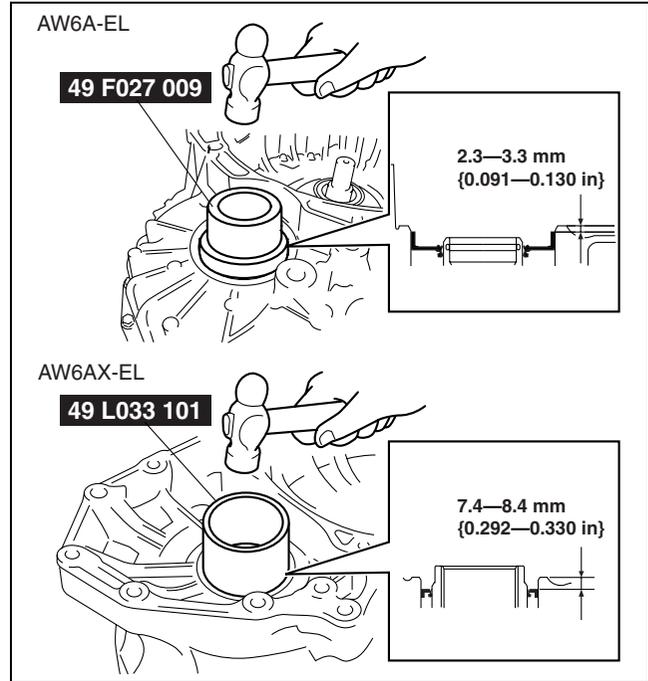

bawuuu00000491

05-17


100. Install a new gasket and the drain plug.

Tightening torque

23.5 — 54.9 N·m {2.4 — 5.5 kgf·m, 17.4 — 40.4 ft·lbf}


Caution

- Do not damage the oil seal.
- Do not drop the torque converter.
- Be careful that fingers do not get caught.

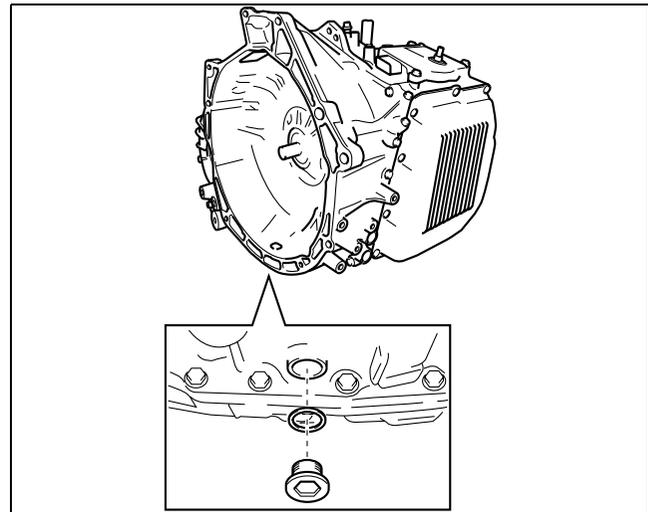

bawuuu00000492

101. Using a flathead screwdriver, position the drive gear on the oil pump component in the center. Then install the torque converter component to the transaxle.

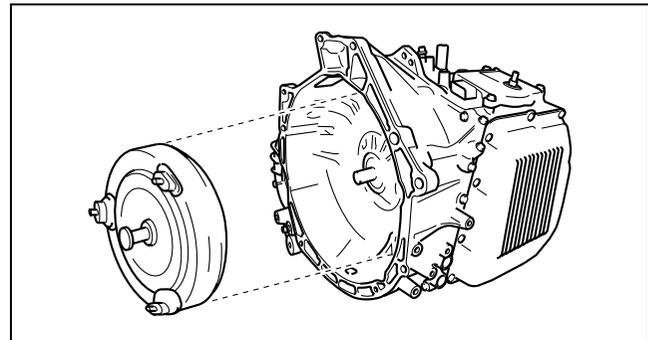

bawuuu00000493

AUTOMATIC TRANSAXLE


102. To ensure that the torque converter is installed accurately, measure distance A between the end of the torque converter and the end of the converter housing.

Distance A (between the end of the torque converter and the end of the converter housing)

Mazda6: 18 mm {0.709 in}
CX-7: 31.4 mm {1.24 in}

103. Install the O-rings and oil pipes. (Refer to the Workshop Manual.)

104. Add the ATF.

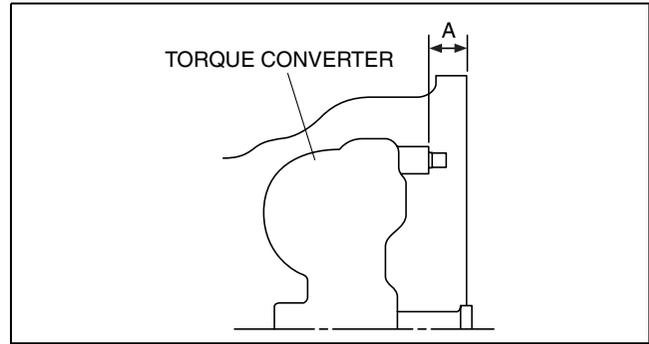

bawuua00000494

AUTOMATIC TRANSAXLE INSPECTION

id051700502300

B2 Brake Inspection

1. Apply ATF to the driven plates, drive plates and retaining plates.

Note

- Replace with new drive plates after soaking them at least **2 h** in ATF.


2. Install driven plates, drive plates and the retaining plate in the following order to the transaxle case as shown in the figure.

Six drive plates type

- Retaining— Drive— Driven— Drive—
Driven— Drive— Driven— Drive— Driven—
Drive— Driven— Drive— Retaining


Seven drive plates type

- Retaining— Drive— Driven— Drive—
Driven— Drive— Driven— Drive— Driven—
Drive— Driven— Drive— Driven— Drive—
Retaining

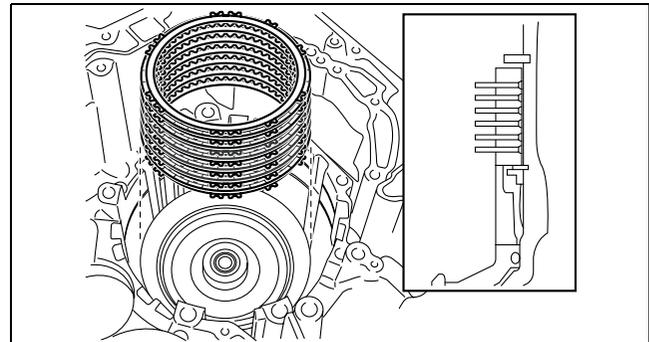

Caution

- **Inspect the number and order of the retaining plates, drive and driven plates.**

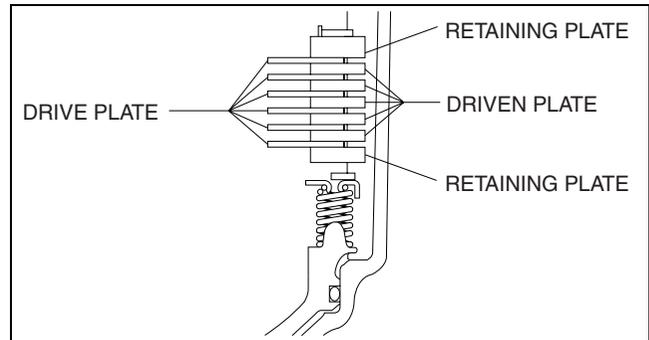


bawuua00000013

3. Using a flathead screwdriver, install the snap ring into the groove.

Caution

- **Align the opening of the snap ring with the position shown in the figure.**

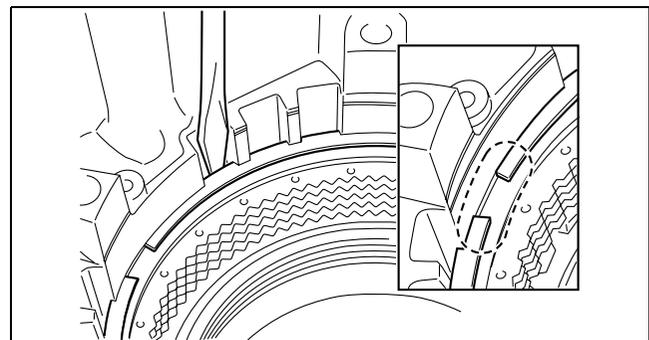

AUTOMATIC TRANSAXLE

4. Set a dial indicator as shown in the figure.
5. While applying compressed air into the oil passage as shown in the figure, measure the B2 brake clearance and inspect the piston moves smoothly.


Air pressure

200 kPa {2.0 kgf/cm², 29 psi}

B2 brake clearance

1.20 — 1.40 mm {0.047 — 0.055 in}

- If not within the specification, select another retaining plate.

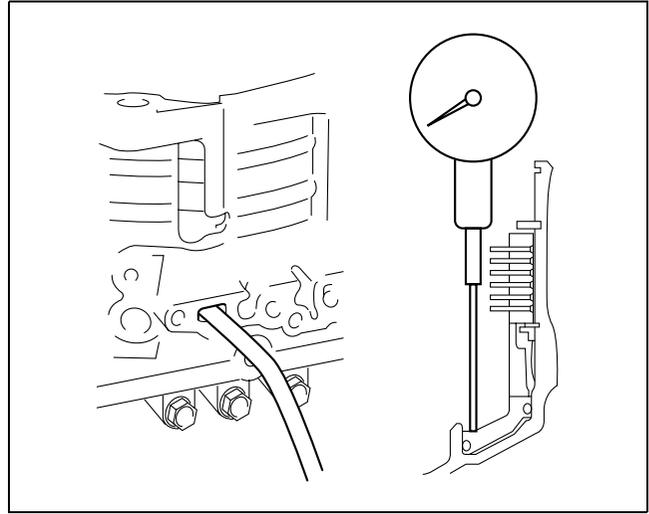


bawuuu00000015

05-17

Retaining plate size

Identification mark	Thickness (mm {in})
47	4.7 {0.185}
48	4.8 {0.189}
49	4.9 {0.193}
50	5.0 {0.197}
51	5.1 {0.201}
52	5.2 {0.205}
53	5.3 {0.209}

6. Using a flathead screwdriver, remove the snap ring.

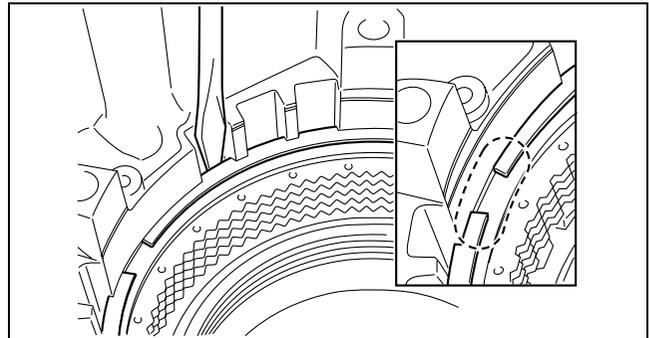


bawuuu00000014

7. Remove the retaining plates, drive and driven plates.

Note

- Inspect the number of drive and driven plates.

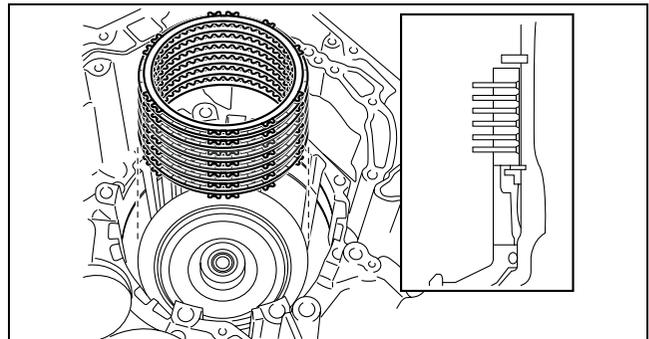

bawuuu00000012

05-50 TECHNICAL DATA

TRANSMISSION/TRANSAXLE
 TECHNICAL DATA 05-50-1

TRANSMISSION/TRANSAXLE TECHNICAL DATA

id055000800100

Item	Specification
C3 clutch return spring free length	Standard: 12.91 mm {0.5083 in}
C3 clutch piston stroke	0.6 — 0.8 mm {0.024 — 0.031 in}
C1 clutch return spring free length	Standard: 17.01 mm {0.6697 in}
C1 clutch piston stroke	1.2 — 1.4 mm {0.047 — 0.055 in}
Rear planetary gear bushing inner diameter	Front side: 33.26 — 33.286 mm {1.3095 — 1.3104 in} Rear side: 33.26 — 33.286 mm {1.3095 — 1.3104 in}
Rear planetary sun gear bushing inner diameter	Front side: 24.2 — 24.226 mm {0.9528 — 0.9537 in} Rear side: 24.2 — 24.226 mm {0.9528 — 0.9537 in}
C2 clutch return spring free length	Standard: 14.02 mm {0.5520 in}
C2 clutch piston stroke	0.45 — 0.65 mm {0.0178 — 0.0255 in}
Transaxle case bushing inner diameter	Standard: 21.932 — 21.953 mm {0.86347 — 0.86429 in}
B2 brake return spring free length	Standard: 19.01 mm {0.7485 in}
Input shaft end play	0.349 — 1.081 mm {0.01374 — 0.04255 in}
B1 brake piston stroke	5.50 — 6.00 mm {0.217 — 0.236 in}
Distance A (between the end of the torque converter and the end of the converter housing)	Mazda6: 18 mm {0.709 in} CX-7: 31.4 mm {1.24 in}
B2 brake clearance	1.20 — 1.40 mm {0.047 — 0.055 in}

05-50

Counter drive gear starting and rotating torque

N·m {kgf·cm, in·lbf}













Bearing	Starting torque	Rotating torque
New	0.40 — 0.50 {4.08 — 5.09, 3.55 — 4.41}	0.40 — 0.48 {4.08 — 4.89, 3.55 — 4.24}
Reused	0.20 — 0.25 {2.04 — 2.54, 1.77 — 2.20}	0.20 — 0.24 {2.04 — 2.44, 1.77 — 2.11}

05-60 SERVICE TOOLS

TRANSMISSION/TRANSAXLE SST. . . . 05-60-1

TRANSMISSION/TRANSAXLE SST

id056000500100
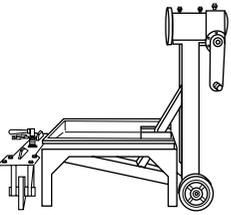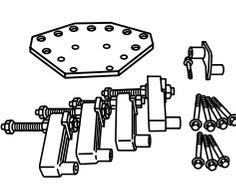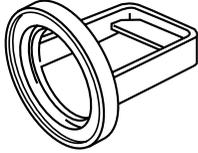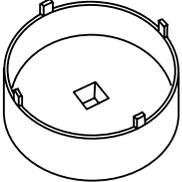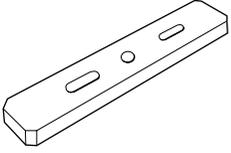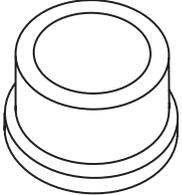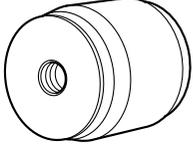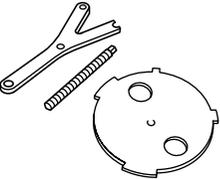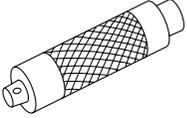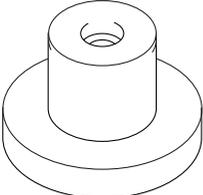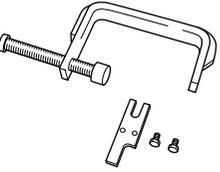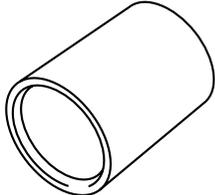
<p>49 0107 680A</p> <p>Engine stand</p> 	<p>49 L010 1A0</p> <p>Engine hanger set</p> 	<p>49 U027 003</p> <p>Oil seal installer</p> 
<p>49 G025 001</p> <p>Sensor rotor installer</p> 	<p>49 G019 040</p> <p>Wrench</p> 	<p>49 G019 026</p> <p>Plate</p> 
<p>49 B032 317</p> <p>Bearing & oil seal remover</p> 	<p>49 F027 009</p> <p>Attachment for 68 & 77</p> 	<p>49 L033 101</p> <p>Oil seal installer</p> 
<p>49 W027 001</p> <p>Body</p> 	<p>49 G019 0A9</p> <p>Compressor</p> 	<p>49 G030 797</p> <p>Handle</p> 
<p>49 F026 102</p> <p>Bearing installer</p> 	<p>49 T019 0A1</p> <p>Servo piston lifter set</p> 	<p>49 H028 202</p> <p>Block L</p> 

05-60

