

Specifications

| Item | | Specification | |
|-------------------------------|---------|----------------------------------|--------------|
| Transmission type | | A6MF1 | |
| Engine model | | Gasoline 2.0 | Gasoline 2.4 |
| Torque converter type | | 3-element, 1-stage, 2-phase type | |
| Torque converter size | | Ø236 mm (9.2913 in.) | |
| Oil pump system | | Parachoid | |
| Friction elements | | Clutch: 2EA | |
| | | Brake: 3EA | |
| | | OWC : 1EA | |
| Planetary gear | | 3EA | |
| Gear ratio | 1st | 4.162 | 4.212 |
| | 2nd | 2.575 | 2.637 |
| | 3rd | 1.772 | 1.800 |
| | 4th | 1.369 | 1.386 |
| | 5th | 1.000 | 1.000 |
| | 6th | 0.778 | 0.772 |
| | Reverse | 3.500 | 3.385 |
| Final gear ratio | | 3.648 | 3.195 |
| Fluid pressure balance piston | | 3EA | |
| Accumulator | | 4EA | |
| Solenoid valve | | 8EA (VFS:6EA, ON/OFF:2EA) | |
| Shift lever position | | 4 Range (P,R,N,D) | |
| Oil filter | | 1EA | |

VFS: Variable Force Solenoid

Tightening Torques

| Item | N.m | Kgf.m | lb-ft |
|---|-------------|-----------|-------------|
| TCM installation mounting bolt | 7.8 ~ 11.8 | 0.8 ~ 1.2 | 5.8 ~ 8.7 |
| Shift cable bracket mounting bolt | 14.7 ~ 21.6 | 1.5 ~ 2.2 | 10.9 ~ 15.9 |
| Input shaft speed sensor mounting bolt | 9.8 ~ 11.8 | 1.0 ~ 1.2 | 7.2 ~ 8.7 |
| Output shaft speed sensor mounting bolt | 9.8 ~ 11.8 | 1.0 ~ 1.2 | 7.2 ~ 8.7 |
| Shift lever assembly bolt | 8.8 ~ 13.7 | 0.9 ~ 1.4 | 6.5 ~ 10.1 |
| Inhibitor switch mounting bolt | 9.8 ~ 11.8 | 1.0 ~ 1.2 | 7.2 ~ 8.7 |
| Valve body cover mounting bolt | 9.8 ~ 11.8 | 1.0 ~ 1.2 | 7.2 ~ 8.7 |
| Eyebolt | 34.3 ~ 44.1 | 3.5 ~ 4.5 | 25.3 ~ 32.6 |
| Oil drain plug | 34.3 ~ 44.1 | 3.5 ~ 4.5 | 25.3 ~ 32.6 |
| Oil level plug | 34.3 ~ 44.1 | 3.5 ~ 4.5 | 25.3 ~ 32.6 |
| Torque converter mounting bolt | 45.1 ~ 52.0 | 4.6 ~ 5.3 | 33.3 ~ 38.3 |
| Automatic transaxle upper mounting bolt | 42.2 ~ 53.9 | 4.3 ~ 5.5 | 31.3 ~ 39.8 |

| | | | |
|--|-------------|----------|-------------|
| Automatic transaxle support bracket bolt | 88.3 ~107.9 | 9.0~11.0 | 65.1 ~ 79.8 |
|--|-------------|----------|-------------|

Lubricants




| Item | Specified lubricant | Quantity |
|-----------------|---|--|
| Transaxle fluid | SK ATF SP-IV, MICHANG ATF SP-IV, NOCA ATF SP-IV, Hyundai Genuine ATF SP-IV or other brands meeting the above specification approved by Hyundai Motors Corp. | 7.1L (1.88 U.S gal., 7.50 U.S.qt., 6.24 Imp.qt.) |

Sealant

| Item | Specified sealant |
|--|---------------------------------------|
| Rear cover Torque converter housing Valve body cover | LOCTITE FMD-546 or THREE-BOND TB1281B |

Automatic Transaxle System > General Information > Special Service Tools

Special Service Tools
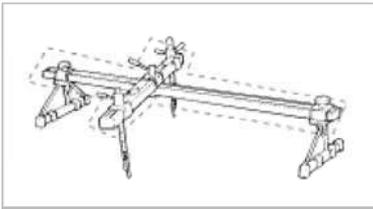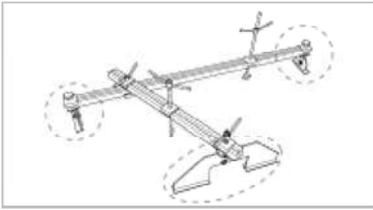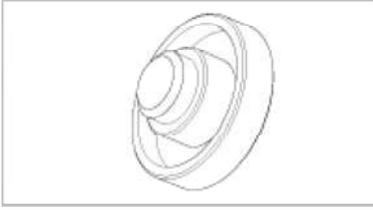
| Tools (Number and name) | Illustration | Use |
|--|---|--|
| 09200-38001 Engine support fixture (Beam) |  | Removal and installation of the transaxle. Except lower supporter, use beam only with new engine support fixture supporter(SST No.:09200-2S000) |
| 09200-2S000 Engine support fixture (Supporter) |  | Removal and installation of the transaxle. Use this supporter with the upper beam of the engine support fixture(SST No.:09200-38001) |
| 09453-3L241 Oil seal installer |  | Installation of transaxle case oil seal. [Using with handle (SST No.:09231-H1100)] |
| 09231-H1100 Bar |  | Installation of transaxle case oil seal. [Using with oil seal installer (SST No.:09453-3L241)] |

Automatic Transaxle System > Automatic Transaxle System > Repair procedures

Oil level Check

NOTE

A check of ATF level is not normally required during scheduled services. If an oil leak is found, perform the oil level check procedure after repairs are completed.

CAUTION

When checking the oil level, be careful not to enter dust, foreign matters, etc. from fill hole.

1. Remove the eyebolt (A).


Eyebolt tightening torque:

34.3~44.1 N.m (3.5~4.5 kgf.m, 25.3~32.6 lb-ft)

CAUTION

The gasket of the eyebolt use new one.

2. Add ATF SP-IV 700cc to the ATF injection hole.

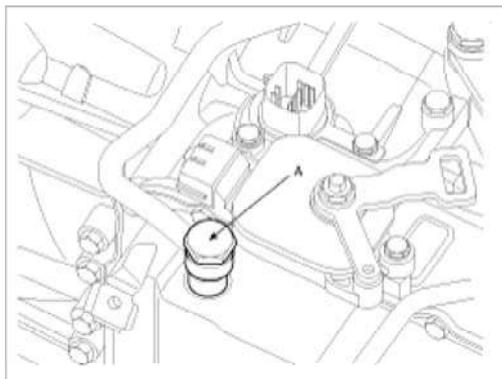


3. Start the engine. (Don't step on brake and accelerator simultaneously).
4. Confirm that the temperature of the A/T oil temperature sensor is 50~60°C(122~140°F) with the GDS.
5. Shift the select lever slowly from "P" to "D", then "D" to "P" and repeat one more at idle.

CAUTION

Keep on each speed position more than 2 sec.

6. Lift the vehicle, then remove the oil level plug (A) from the valve body cover.

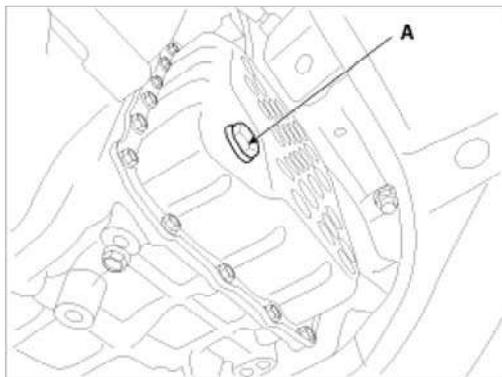

CAUTION

At this time, the vehicle must be a horizontal state.

7. If the oil flows out of the overflow plug in thin steady stream, the oil level is correct.

NOTE

Oil level check (excess or shortage) method

- Excess: Oil flows out in thick stream.
- Shortage: No oil flows out of the overflow plug.

CAUTION

If there is no damage at the automatic transaxle and the oil cooler, the oil cooler hose, transaxle case, valve body tightening state are normal, ATF must drop out after performing above 1 to 7 procedures. After performing above 1 to 7 procedures, if the oil doesn't drop out, inspect the automatic transaxle assembly.

CAUTION

The gasket of the oil level plug use new one.

Oil level plug tightening torque:

34.3 ~ 44.1 N.m (3.5 ~ 4.5 kgf.m, 25.3 ~32.6 lb-ft)

8. Put down the vehicle with the lift and then tighten the eyebolt.


Replacement**NOTE**

ATF of 6 speed automatic transaxle doesn't be replaced. But, if the vehicle is severe use or business use, replace ATF every 60,000 miles for severe usage.

Severe usage is defined as

- Driving in rough road (Bumpy, Gravel, Snowy, Unpaved road, etc)
- Driving in mountain road, ascent/descent
- Repetition of short distance driving
- More than 50% operation in heavy city traffic during hot weather above 32°C(89.6°F) .
- Police, Taxi, Commercial type operation or trailer towing, etc

1. Remove the drain plug (A) and reinstall the drain plug after draining ATF totally.

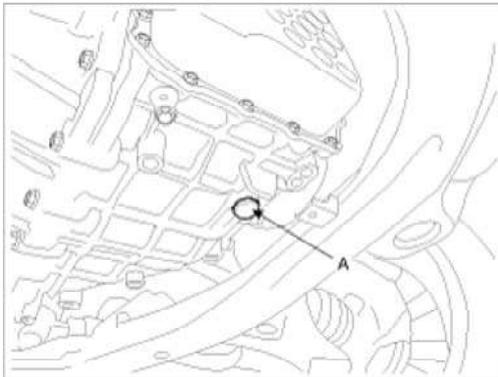**Drain plug tightening torque:**

34.3 ~ 44.1 N.m (3.5 ~ 4.5 kgf.m, 25.3 ~32.6 lb-ft)


CAUTION

The gasket of the drain plug use new one.


2. Fill the oil about 5 liters.
3. Check the oil level. (Refer to Oil level check procedure.)

Components and Components Location

Components (1)

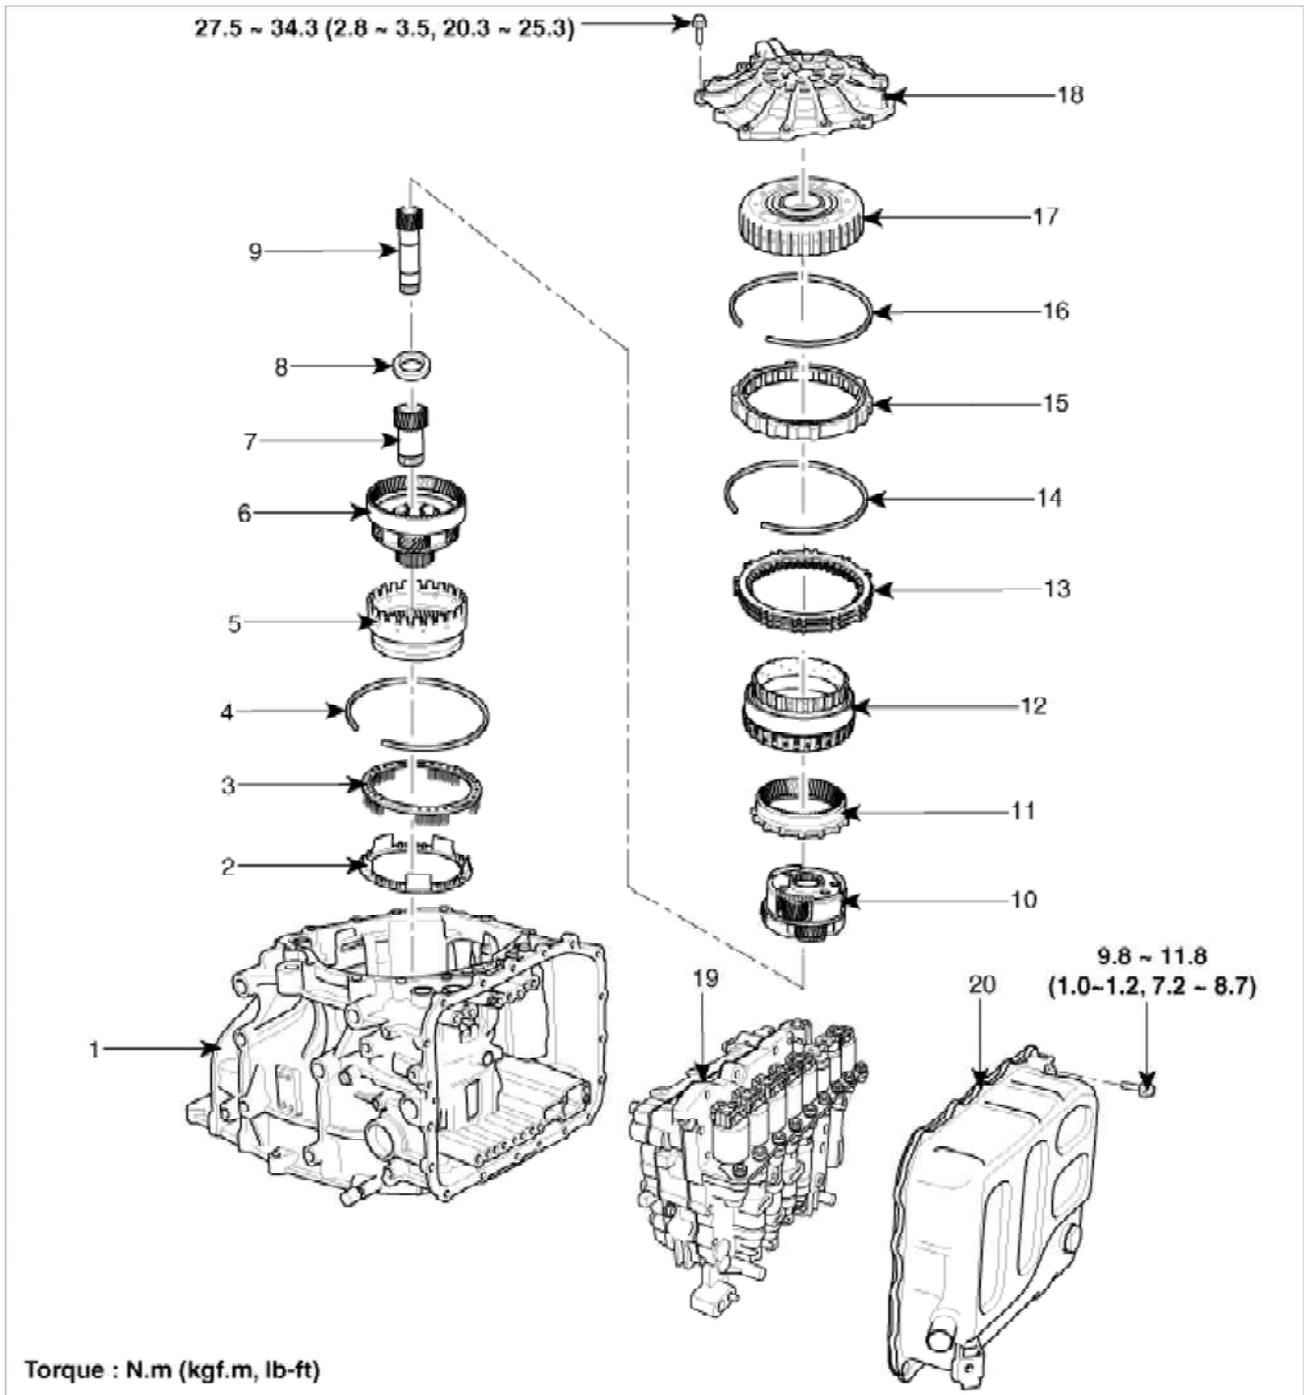

Components (2)

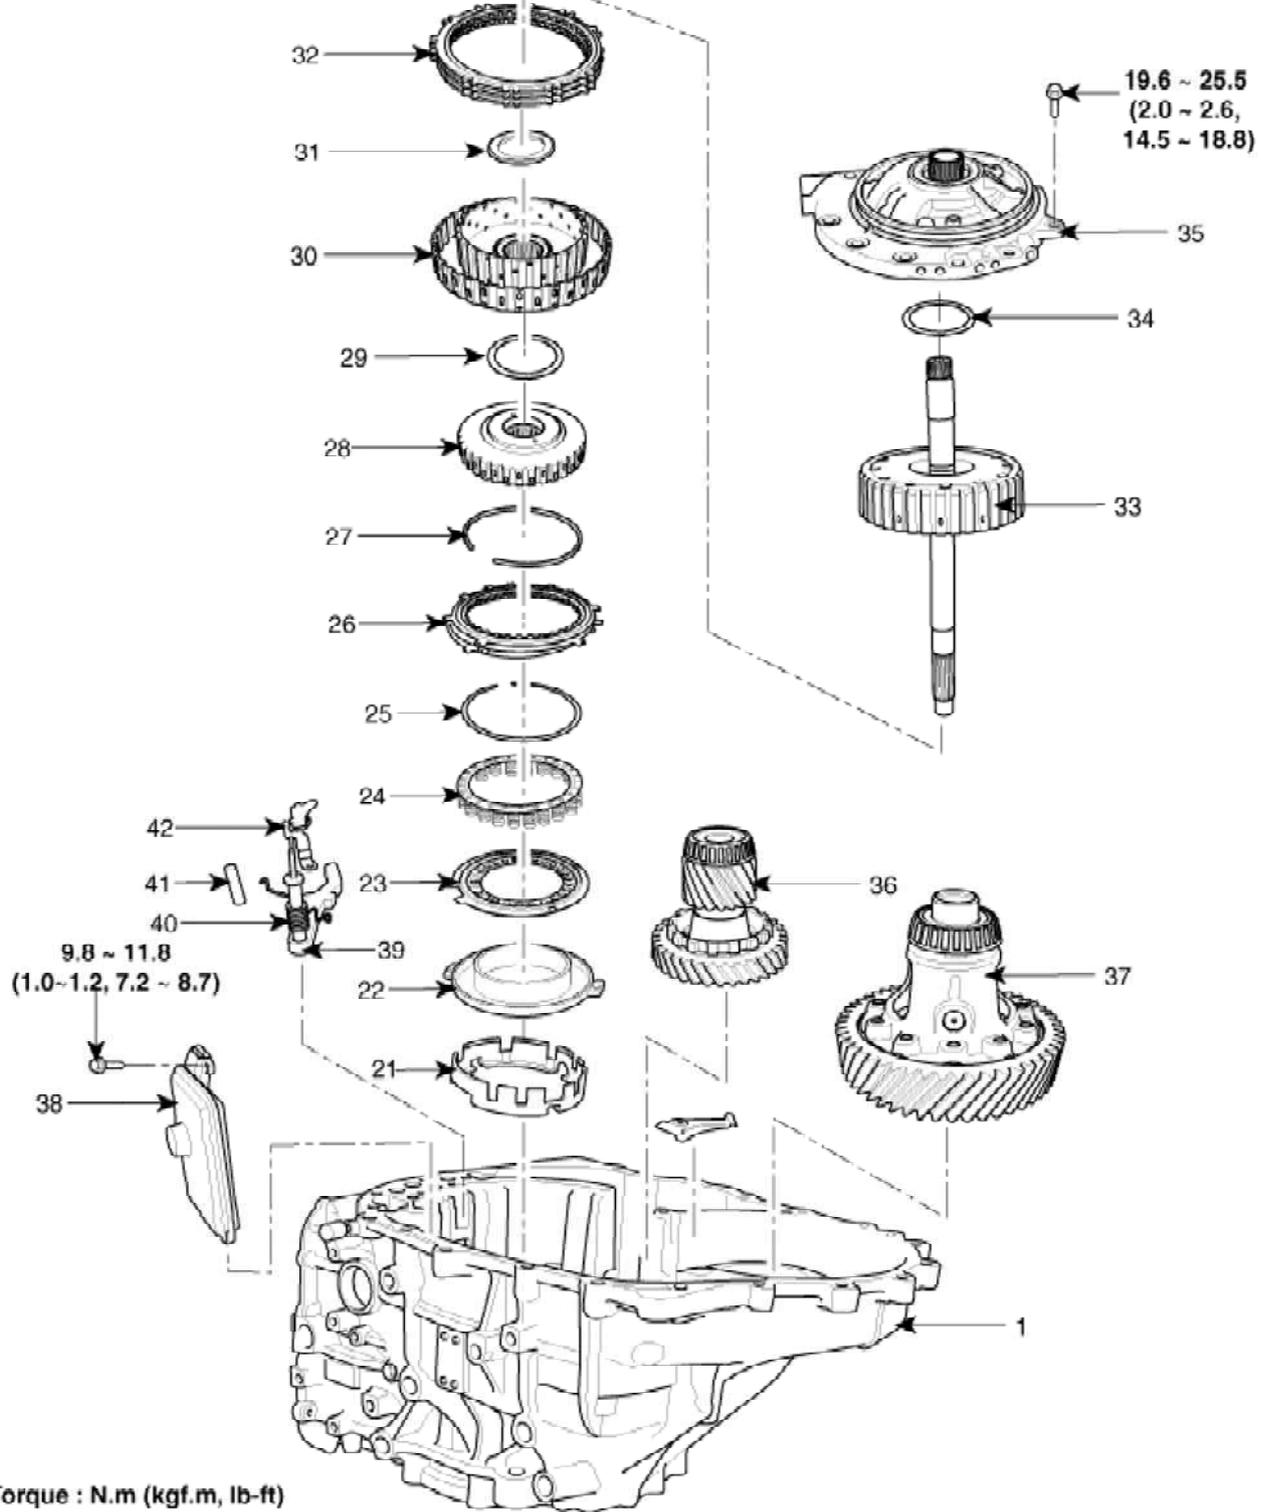


- | | |
|--|--|
| <ul style="list-style-type: none"> 1. Automatic transaxle case 2. Low & reverse brake piston 3. Low & reverse brake return spring 4. Snap ring 5. Front annulus gear assembly 6. Front planetary gear assembly 7. Front sun gear assembly 8. Bearing 9. Middle sun gear assembly 10. Middle & rear planetary gear assembly 11. Rear annulus gear assembly | <ul style="list-style-type: none"> 22. Under drive brake chamber 23. Under drive brake piston 24. Under drive brake spring 25. Snap ring 26. Under drive brake disc set 27. Snap ring 28. Under drive brake hub assembly 29. Thrust washer 30. 35R & 2/6 hub assembly 31. Thrust bearing 32. 2/6 brake disc set |
|--|--|

- 13. Low & reverse brake disc set
- 14. Snap ring
- 15. One way clutch assembly
- 16. Snap ring
- 17. Overdrive clutch assembly
- 18. Rear cover assembly
- 19. Valve body assembly
- 20. Valve body cover
- 21. Under drive brake retainer

- 34. Thrust washer
- 35. Oil pump assembly
- 36. Transfer driven gear assembly
- 37. Differential assembly
- 38. Oil filter assembly
- 39. Parking sprag
- 40. Parking sprag shaft & spring
- 41. Support shaft
- 42. Parking load guide


Components Location

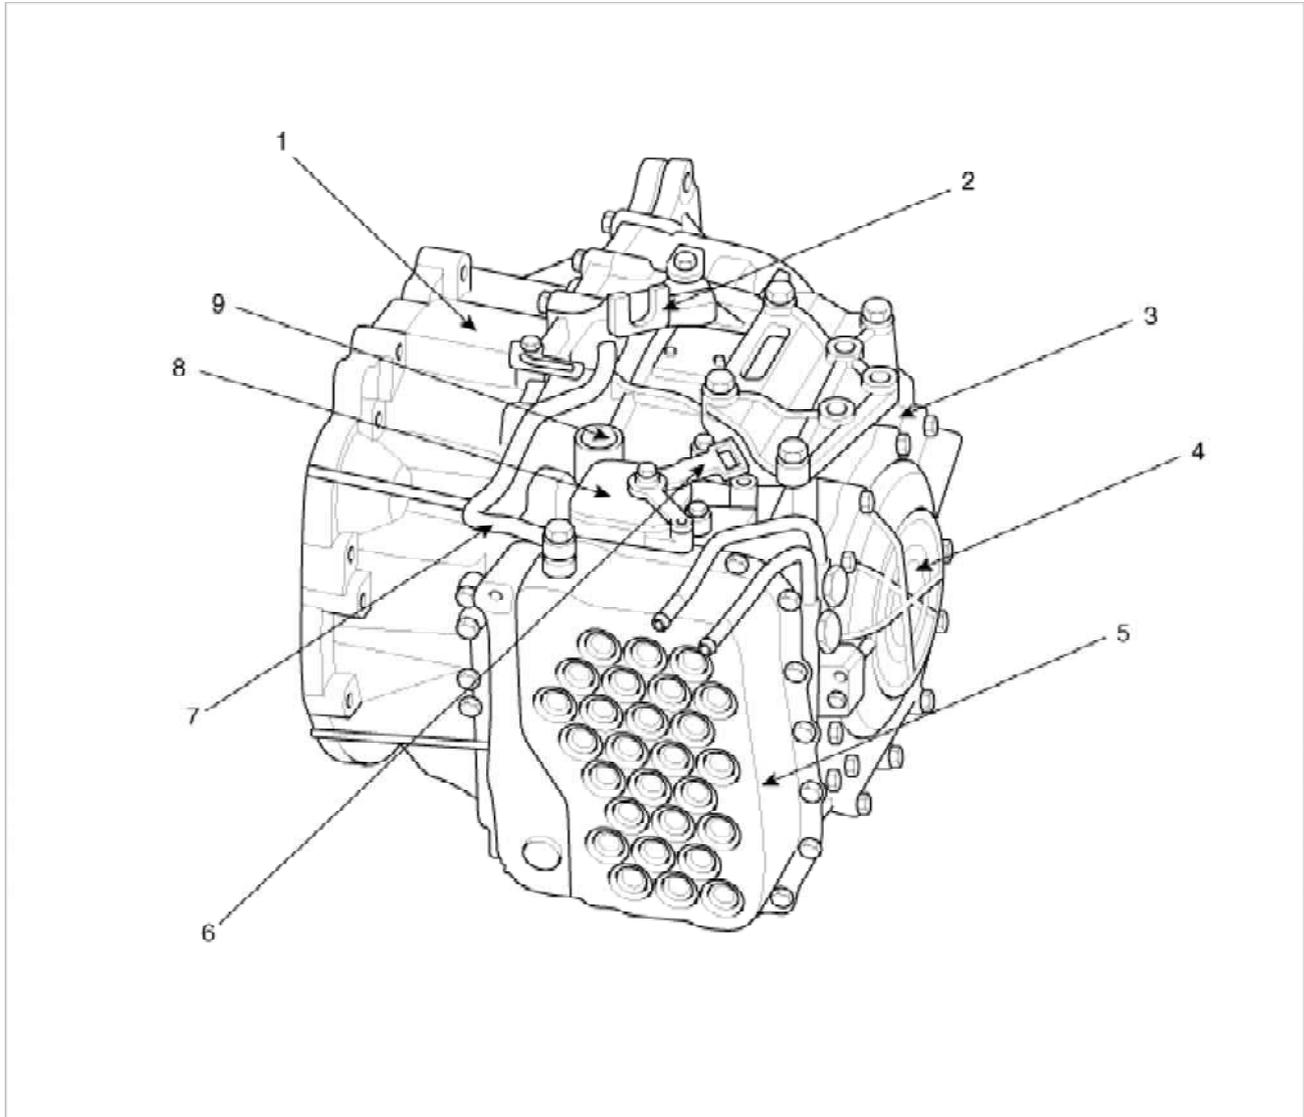


- 1. Converter housing
- 2. Shift cable bracket
- 3. Automatic transaxle case
- 4. Rear cover
- 5. Valve body cover

- 6. Manual control lever
- 7. Air breather hose
- 8. Inhibitor switch
- 9. Solenoid valve connector

1. Remove the following items;
 - A. Air duct (A) and engine cover (B). (Refer to "Intake and Exhaust system" in EM group.)
 - B. Air cleaner assembly (C). (Refer to "Intake and Exhaust system" in EM group.)
 - C. Battery and battery tray (D). (Refer to "Charging system" in EE group.)

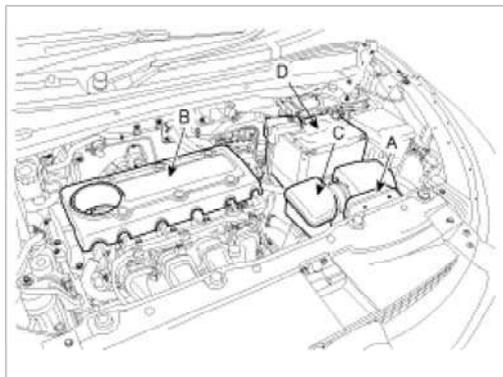


2. Disconnect the solenoid valve connector (A) and inhibitor switch connector (B).

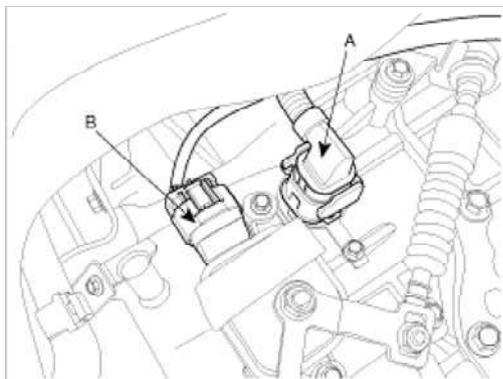


3. Remove the shift cable (C) after removing the nut (A) and the bolt (B).

Tightening torque:


- (A) 7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)
(B) 14.7 ~ 21.6 N.m (1.5 ~ 2.2 kgf.m, 10.9 ~ 15.9 lb-ft)
-

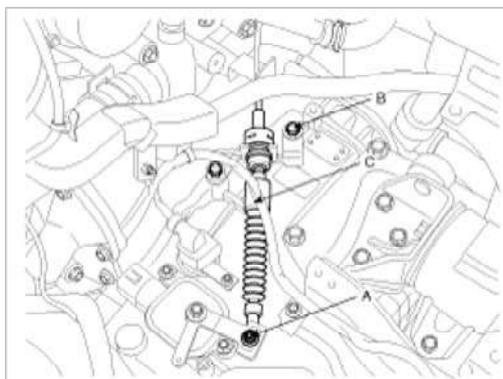


4. Remove the ground line after removing the bolt (A).

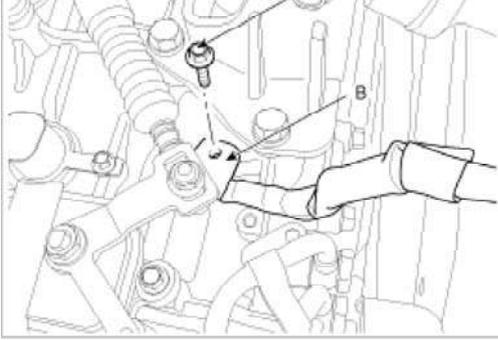

5. Disconnect the hose (B) after removing the automatic transaxle fluid cooler hose clamp (A).

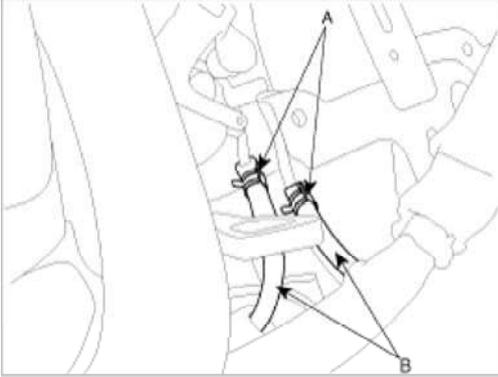

6. Remove the wiring bracket installation bolt (A).

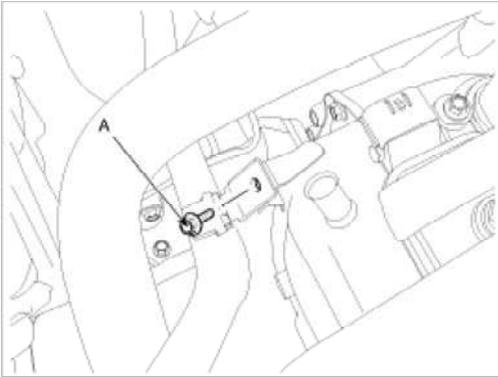


7. Remove the automatic transaxle upper mounting bolt (A-2ea) and the starter motor mounting bolt (B-2ea).

Tightening torque:


(A) 42.2 ~ 54.0 N.m (4.3 ~5.5 kgf.m, 31.1 ~ 39.8 lb-ft)

(B) 49.0 ~ 63.7 N.m (5.0 ~6.5 kgf.m, 36.2 ~ 47.0 lb-ft)

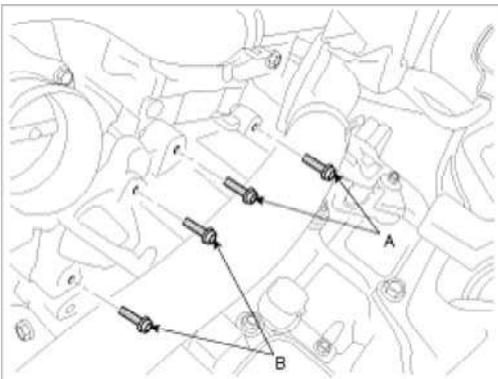


8. Remove the cowl top cover or wiper motor. (Refer to "Windshield Wiper/Washer" in BE group.)

9. Remove the cowl complete assembly panel(A).

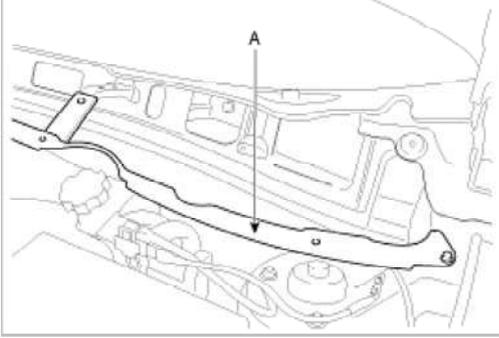


10. Using the engine support fixture (Support SST No.: 09200-2S000, Beam SST No.: 09200-38001), hold the engine and transaxle assembly safely.

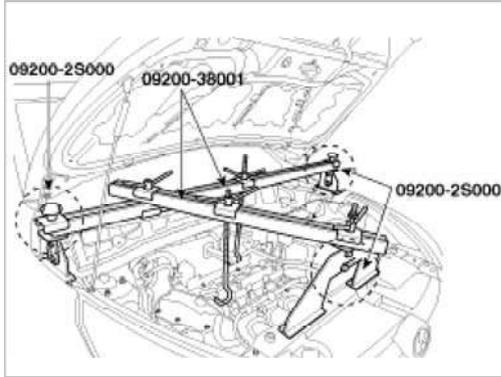


11. Remove the automatic transaxle mounting support bracket bolt (A).

Tightening torque:

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.8 lb-ft)

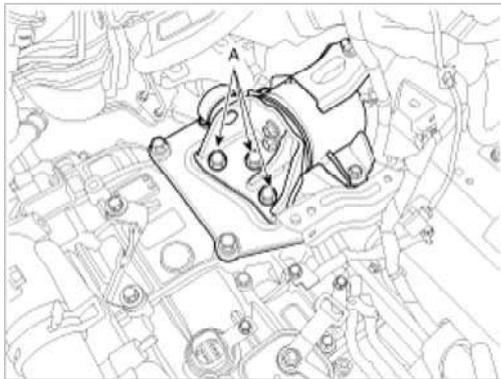

12. Lift the vehicle with a jack.
13. Remove the under cover (A).

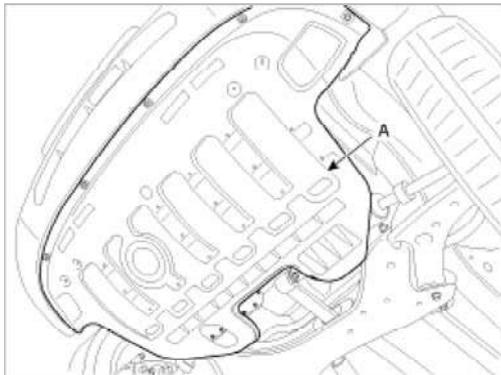


14. Remove the Sub frame assembly. (Refer to "Front suspension system" in SS group.)
15. Remove the drive shaft assembly. (Refer to "Drive shaft assembly" in DS group.)

NOTE

In the case of 2WD vehicle, not remove the transfer assembly.


17. Remove the dust cover(A).

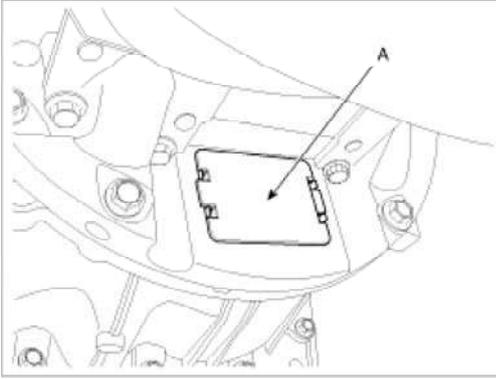

18. Remove the torque converter mounting bolt (A-4ea) with rotating the crankshaft.

Tightening torque:

45.1 ~ 52.0 N.m (4.6 ~ 5.3 kgf.m, 33.3 ~ 38.3 lb-ft)

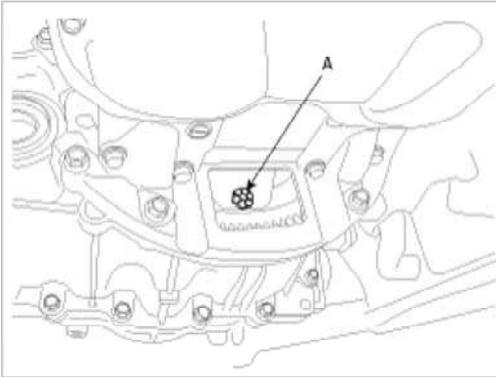


19. Remove the automatic transaxle with a jack after removing the mounting bolt (A-4ea, B-2ea).

Tightening torque:

(A) 29.4 ~ 41.2 N.m (3.0 ~ 4.2 kgf.m, 21.7 ~ 30.4 lb-ft)

(B) 42.2 ~ 54.0 N.m (4.3 ~ 5.5 kgf.m, 31.1 ~ 39.8 lb-ft)

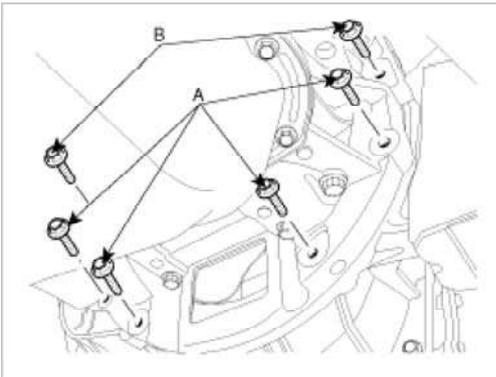**Installation**

1. Installation is the reverse of removal.

CAUTION


- Power steering fluid replacement and air bleeding (Refer to "General information" in ST group.)
- Adding automatic transaxle fluid. (Refer to "automatic transaxle system" in this group.)

NOTE

- When replacing the automatic transaxle, reset the automatic transaxle's values by using the GDS.

Automatic Transaxle System > Valve Body System > Components and Components Location

Component Location

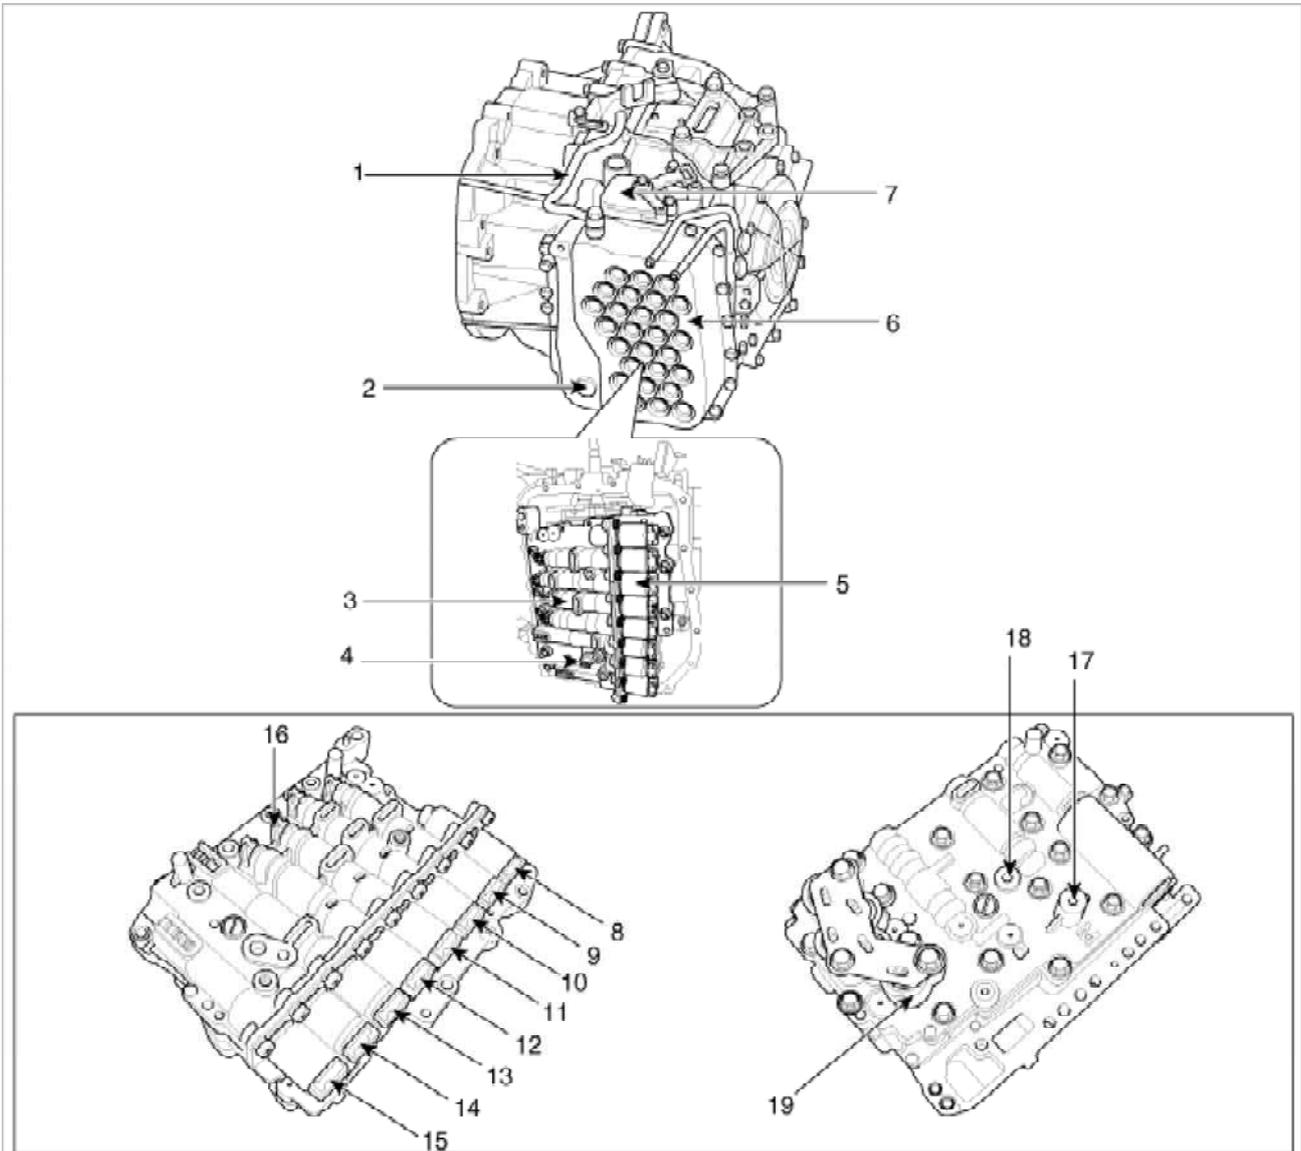

1. Air breather hose
2. Oil level plug
3. Valve body assembly
4. Oil temperature sensor
5. Solenoid valve
6. Valve body cover
7. Inhibitor switch
8. T/Con (VFS N/L)
9. 35R(VFS,N/H)
10. 2/6B (VFS,N/L)

11. UD(VFS,N/H)
12. OD(VFS,N/H)
13. SS-B(ON/OFF)
14. SS-A(ON/OFF)
15. LINE pressure(VFS,N/H)
16. PCV adjust screw
17. UD/B pressure
18. LR/B pressure(Low & Reverse Brake)
19. Accumulator

Automatic Transaxle System > Valve Body System > Valve Body > Specifications


Specification

| | |
|--------------------|---|
| Piece | 3pcs |
| Spool | 20ea |
| Control | Full line pressure variable control Torque converter release control |
| Solenoid valve | VFS : 6ea ON/OFF: 2ea |
| Pressure adjusting | 7ea Line pressure (1), Reducing pressure (2), PCV (4) |
| Terminal type | Module |

Automatic Transaxle System > Valve Body System > Valve Body > Repair procedures

Removal

1. Remove the battery and the battery tray. (Refer to "Charging system" in EE group.)
2. Remove the under cover (A).

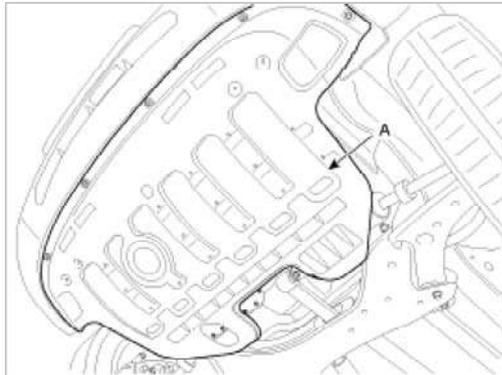

3. Replace new gasket and the plug after draining the automatic transaxle fluid by removing the drain plug. (Refer to "Automatic transaxle system" in this group.)
4. Remove the valve body cover (A) and eyebolt (B).

Tightening torque:


- (A) 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)
(B) 34.3 ~ 44.1 N.m (3.5 ~ 4.5 kgf.m, 25.3 ~ 32.6 lb-ft)

CAUTION

The gasket of the eyebolt use new one.

NOTE


Remove installation bolts in the engine room first and then remove others under the vehicle.

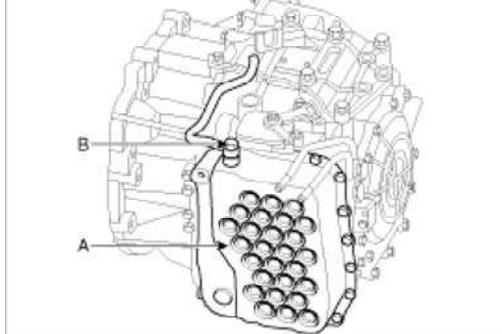

5. Remove the plate and the detend spring (A) after removing the bolt.
-

Tightening torque:


24.5 ~ 35.3 N.m (2.5 ~ 3.6 kgf.m, 18.1 ~ 26.0 lb-ft)

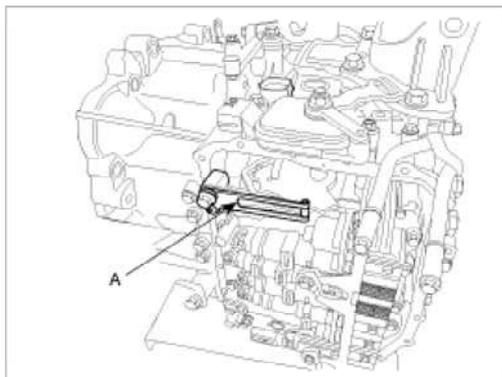

6. Remove the bolt (3ea) after disconnecting the solenoid valve (B) connector and the oil temperature sensor connector (A).
-

Tightening torque:


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

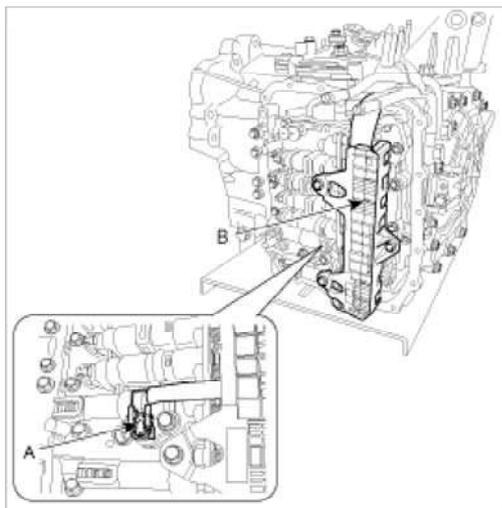

7. Remove the valve body assembly (A).
-

Tightening torque:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

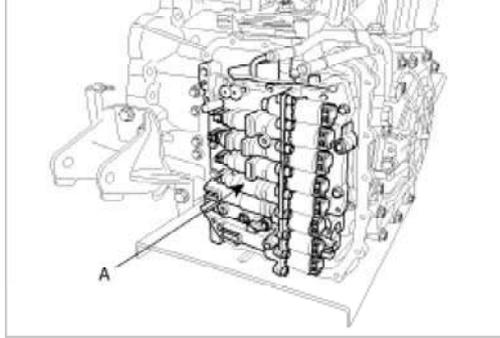

Installation

1. Installation is the reverse of removal.

CAUTION

After replacement or reinstallation procedure of the valve body assembly, must perform procedures below.

- Continue to apply liquid gasket at application points at the valve body cover with $\varnothing 2.5\text{mm}$ (0.0984in.) thickness.

Liquid gasket Part name :

Threebond 1281B or LOCTITE FMD-546

- Adding automatic transaxle fluid. (Refer to "automatic transaxle system" in this group.)

Automatic Transaxle System > Valve Body System > Solenoid valve > Specifications

Specification

| Item | Function | Piece | Specification |
|--------|--------------------------|-------|---|
| VFS | 26/B T/Con | 2 | Control pressure: 9.81~500.14kpa (0.1~5.1kgf/cm ² , 1.42~72.54 psi) Current value: 50~850mA Low Type, 5.1 Ω |
| | Line pressure control | 1 | Control pressure: 500.14~9.81kpa (5.1~0.1kgf/cm ² , 72.54~1.42psi) Current value: 50~850mA High Type, 5.1 Ω |
| | 35R UD OD | 3 | Control pressure: 500.14~9.81kpa (5.1~0.1kgf/cm ² , 72.54~1.42psi) Current value: 50~850mA High Type, 5.1 Ω |
| On/Off | SS-A SS-B | 2 | Control pressure: 490.33kpa (5.0kgf/cm ² , 71.12psi) 10~11 Ω Low Type |

Solenoid Valve Operation Table


| | SS-A | SS-B | UD-VFS | OD-VFS | 35R-VFS | 26-VFS |
|------|----------|------|--------|----------|---------|--------|
| | | | N/H | N/H | N/H | N/L |
| N, P | • | | • | | • | |
| 1 | Δ | | | Δ | • | |
| 2 | | | | • | • | • |
| 3 | | • | | • | | |
| 4 | | | | | • | |
| 5 | | • | • | | | |

| | | | | | | |
|---|---|---|---|--|---|--|
| L | • | | | | • | |
| R | • | • | • | | | |

Automatic Transaxle System > Valve Body System > Solenoid valve > Repair procedures

Removal

1. Remove the battery and the battery tray. (Refer to "Charging system" in EE group.)
2. Remove the under cover (A).

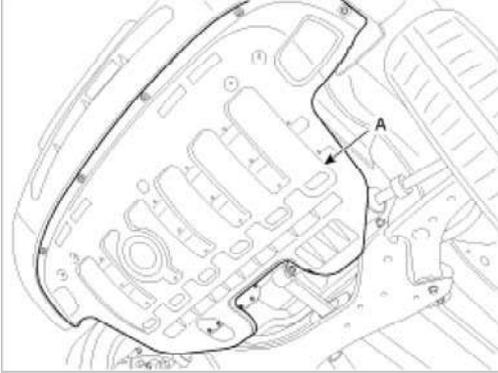

3. Replace new gasket and the plug after draining the automatic transaxle fluid by removing the drain plug. (Refer to "Automatic transaxle system" in this group.)
4. Remove the valve cover (A) and eyebolt (B).

Tightening torque:


- (A) 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)
 (B) 34.3 ~ 44.1 N.m (3.5 ~ 4.5 kgf.m, 25.3 ~ 32.6 lb-ft)

CAUTION

The gasket of the eyebolt use new one.

NOTE


Remove installation bolts in the engine room first and then remove others under the vehicle.

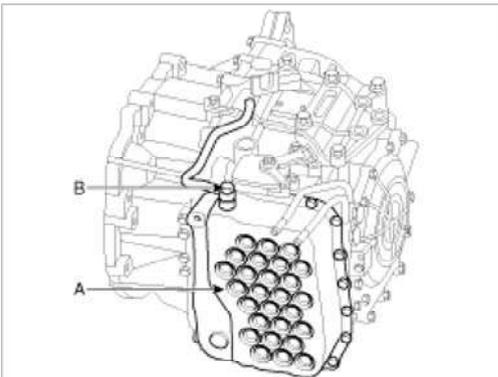


5. Remove the bolt (3ea) after disconnecting the solenoid valve connector (B) and the oil temperature sensor connector (A).

Tightening torque:

- 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

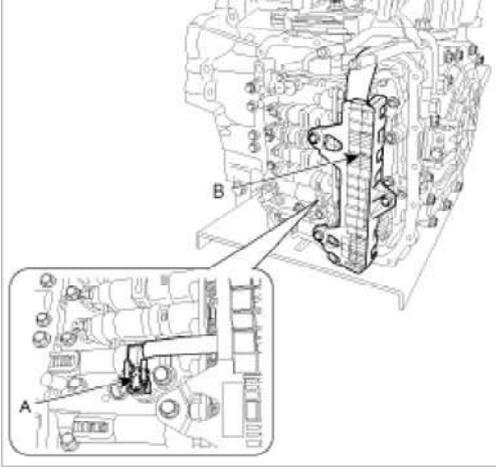

6. Remove the solenoid valve (A) after removing the solenoid support.

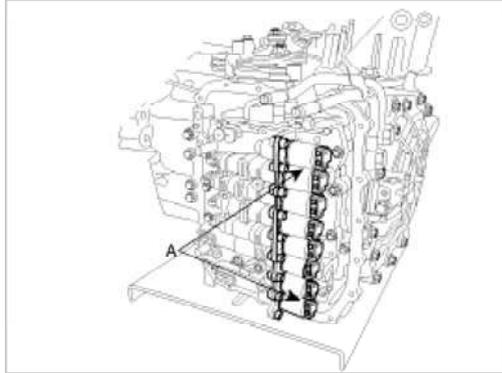

CAUTION

When installing, apply the ATF oil or White Vaseline to the O-ring not to be damaged.

Installation

1. Installation is the reverse of removal.

CAUTION

After replacement or reinstallation procedure of the valve body assembly, must perform procedures below.





- Continue to apply liquid gasket at application points at the valve body cover with $\text{Ø}2.5\text{mm}$ (0.0984in.) thickness.

Liquid gasket Part name :
Threebond 1281B or LOCTITE FMD-546

- Adding automatic transaxle fluid. (Refer to "automatic transaxle system" in this group.)

Automatic Transaxle System > Automatic Transaxle Control System > Components and Components Location

Components Location

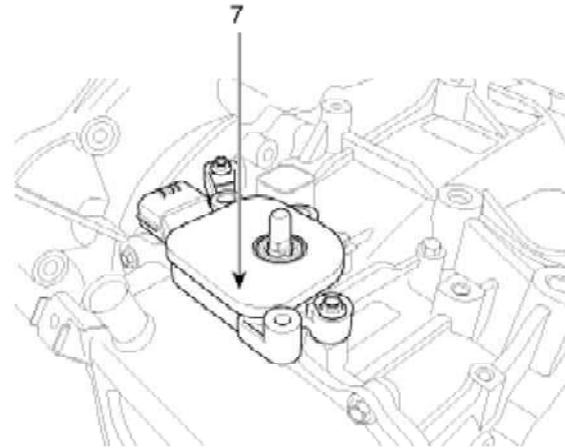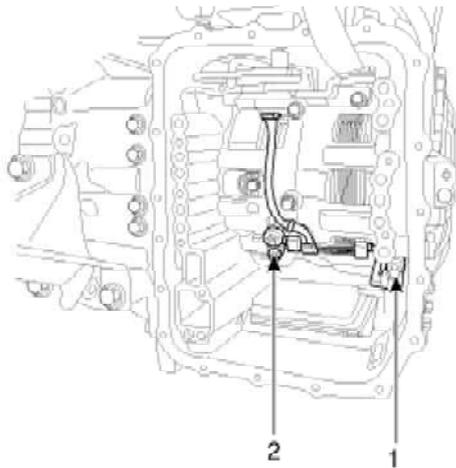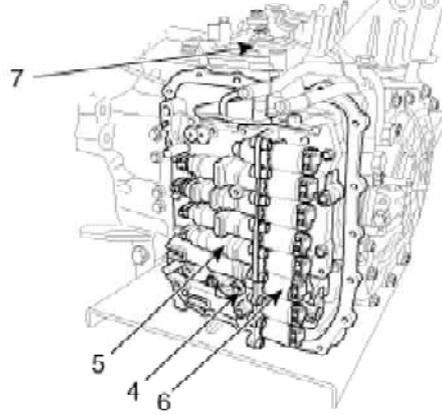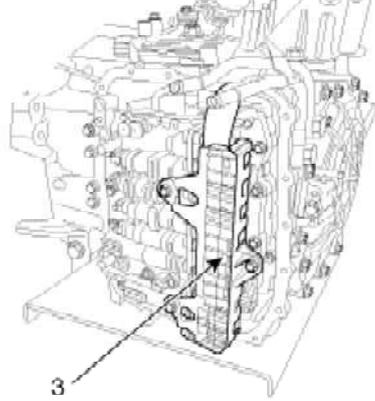


1. Input speed sensor
2. Output speed sensor
3. Solenoid valve connector
4. Oil temperature sensor

5. Valve body assembly
6. Solenoid valve
7. Inhibitor switch

Automatic Transaxle System > Automatic Transaxle Control System > Shift Lever > Components and Components Location

Components

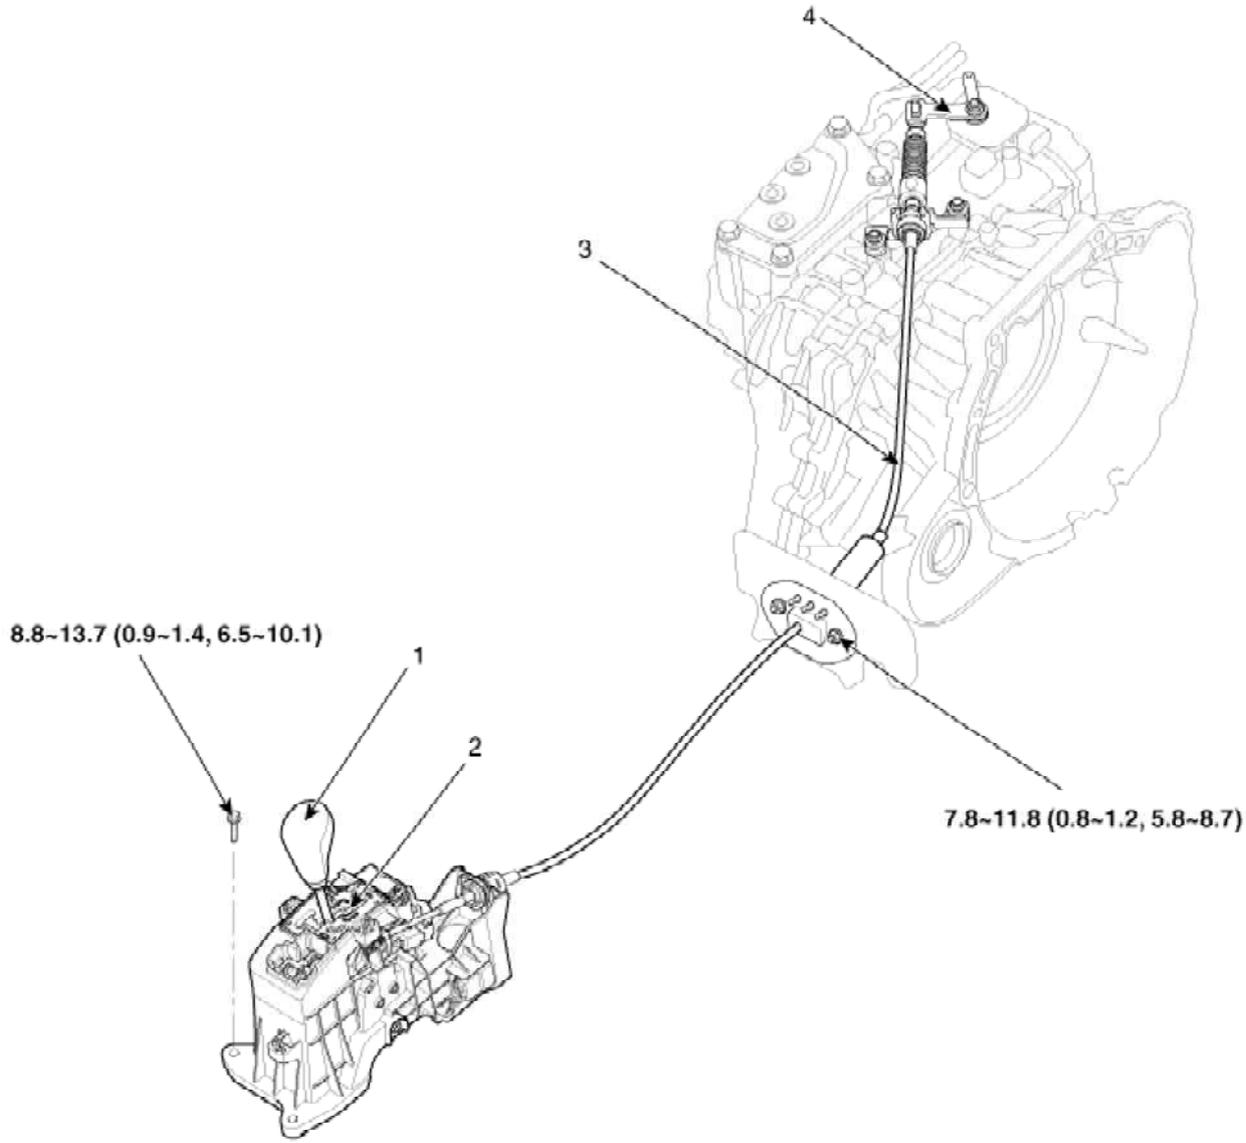

Torque : N.m (kgf.m, lb-ft)


1. Shift lever knob
2. Shift lever assembly

3. Control cable assembly
4. Shift lever assembly(AT side)


Automatic Transaxle System > Automatic Transaxle Control System > Shift Lever > Repair procedures

Removal


1. Pull the gear knob (A) in the direction of the "F" and remove it, and then remove the console upper cover (B). (Refer to "Interior" in BD group)

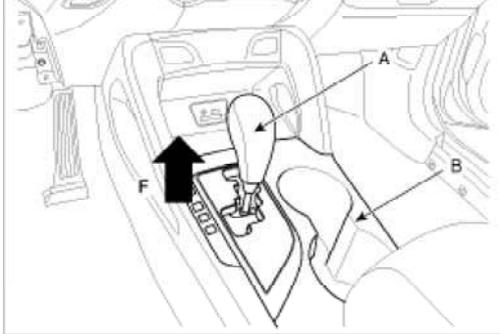

2. Remove the center console assembly. (Refer to "Interior" in BD group.)
3. Take off the clip (A) and the clamp (B) and then remove the shift cable (C).

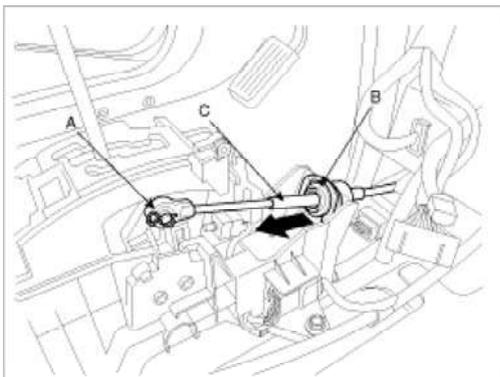


4. Disconnect sports mode connector (A).

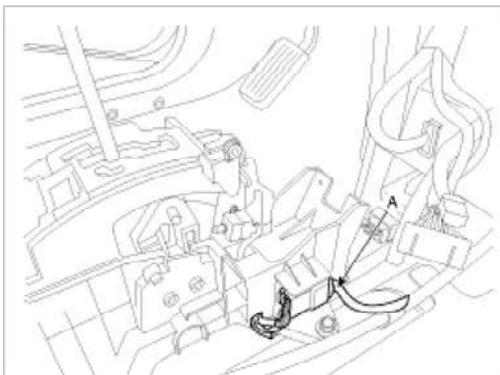

5. Remove the shift lever assembly (B) by removing the bolts (A-4ea).


Tightening torque:

8.8 ~ 13.7 N.m (0.9 ~ 1.4 kgf.m, 6.5 ~ 10.1 lb-ft)

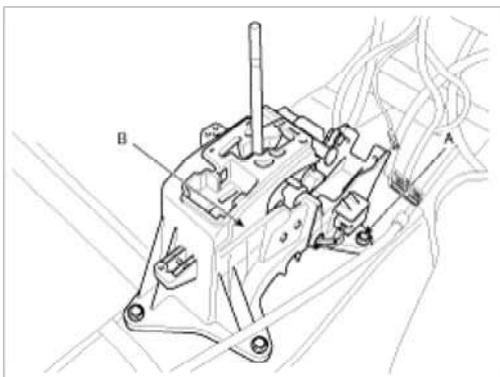

6. Remove the shift cable assembly in the vehicle after removing the nuts (B) and the retainer (A).

Tightening torque:

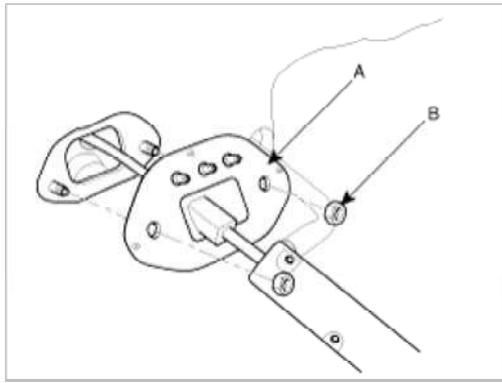

7. Remove the cable from the bracket at transaxle assembly side (Refer to "Automatic Transaxle" in this group).
8. Remove the shift cable at cabin room.

Inspection

1. Check the damage and operation of the control cable.
2. Check the damage of the boot.
3. Check the damage and corrosion of the bushing.
4. Check the damage or weakening of the spring.


Adjustment

Adjusting method for T/M control cable

1. Set room side lever and T/M side lever to "N" position.
2. Connect room side lever and shift cable.
3. Push cable to "F" direction shown to eliminate FREE PLAY.
4. Tighten adjusting nut (A).

Tightening torque:

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)

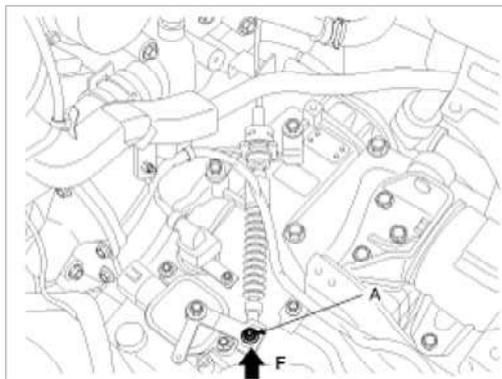

5. After adjusting according Check to be sure that this part operates surely at each range of T/M side corresponding to each position of room lever.


Installation

1. Installation is the reverse of removal.

CAUTION

Set room side lever and T/M side lever to "N" position.

1. TCM connector and terminal function

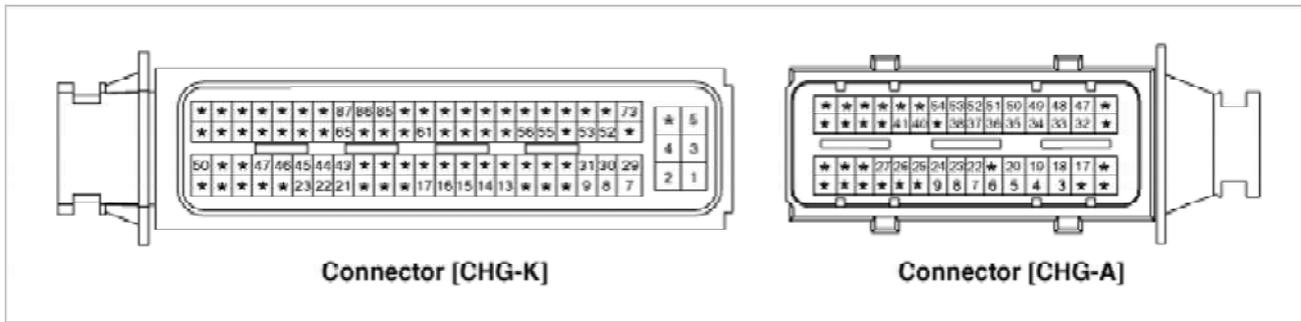

2. TCM terminal function

Connector [CHG-A]

| Pin | Description | Pin | Description |
|-----|--|-----|----------------------------------|
| 1 | - | 31 | - |
| 2 | - | 32 | Shift solenoid F(SS-B) |
| 3 | Pressure control solenoid A(VFS-LINE) | 33 | Shift solenoid E(SS-A) |
| 4 | Torque Converter Clutch solenoid (VFS-T/Con) | 34 | Ground (Power 1) |
| 5 | Shift solenoid C(35R_VFS) | 35 | Ground (Power 2) |
| 6 | Input speed sensor power | 36 | Sports mode down switch |
| 7 | Output speed sensor power | 37 | Sports mode up switch |
| 8 | Input speed sensor signal | 38 | Sports mode Select switch |
| 9 | Output speed sensor signal | 39 | - |
| 10 | - | 40 | Inhibitor switch signal (S1) |
| 11 | - | 41 | - |
| 12 | - | 42 | - |
| 13 | - | 43 | - |
| 14 | - | 44 | - |
| 15 | - | 45 | - |
| 16 | - | 46 | - |
| 17 | Shift solenoid A(VFS-UD) | 47 | Solenoid supply power 1 |
| 18 | Shift solenoid B(VFS-26) | 48 | Solenoid supply power 2 |
| 19 | Shift lock solenoid | 49 | TCM Input power 1 (For solenoid) |
| 20 | Shift solenoid D(VFS-OD) | 50 | TCM Input power 2 (For solenoid) |
| 21 | - | 51 | Reserved |
| 22 | Rear lamp relay | 52 | Reserved |
| 23 | - | 53 | Oil temperature sensor (-) |
| 24 | Start relay | 54 | Oil temperature sensor (+) |
| 25 | Inhibitor switch signal (S2) | 55 | - |
| 26 | Inhibitor switch signal (S3) | 56 | - |
| 27 | Inhibitor switch signal (S4) | 57 | - |
| 28 | - | 58 | - |
| 29 | - | 59 | - |




Connector [CHG-K]

| Pin | Description | Pin | Description |
|-----|--------------------|-----|--------------------|
| 1 | Power ground | 31 | Power ground |
| 2 | Battery power (B+) | 32 | Battery power (B+) |
| 3 | Power ground | 33 | CAN High |
| 4 | Battery power (B+) | 34 | CAN Low |

3. TCM Terminal input/ output signal

Connector [CHG-A]

| Pin | Description | Condition | Type | Level | Test result |
|-----|--|-----------|--------|----------------------------------|-------------|
| 1 | - | | | | |
| 2 | - | | | | |
| 3 | Pressure control solenoid A (VFS-LINE) | | Output | 0V/Battery voltage level | |
| | | | | 9V < Battery voltage level < 16V | |
| 4 | Torque Converter Clutch solenoid (VFS-T/Con) | | Output | 0V/Battery voltage level | |
| | | | | 9V < Battery voltage level < 16V | |
| 5 | Shift solenoid C(35R_VFS) | | Output | 0V/Battery voltage level | |
| | | | | 9V < Battery voltage level < 16V | |
| 6 | Input speed sensor power | ON | Power | 0V/7.5V | 7.5V |
| | | OFF | | | 0.3 V |
| 7 | Output speed sensor power | ON | Power | 0V/7.5V | 7.5V |
| | | OFF | | | 0.3 V |
| 8 | Input speed sensor signal | High | Input | 0.7V/1.4V | |
| | | Low | | | |
| 9 | Output speed sensor signal | High | Input | 0.7V/1.4V | |
| | | Low | | | |
| 10 | - | | | | |
| 11 | - | | | | |
| 12 | - | | | | |
| 13 | - | | | | |
| 14 | - | | | | |
| 15 | - | | | | |
| 16 | - | | | | |
| | | | | 0V/Battery voltage level | |
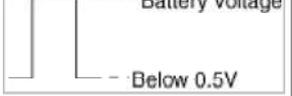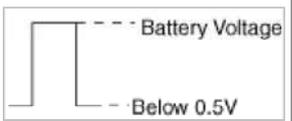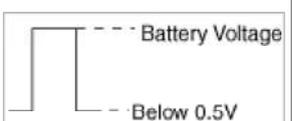
| | | | | | |
|----|------------------------------|------------|--------|----------------------------------|---|
| 17 | Shift solenoid A(VFS-UD) | | Output | Power supply : V_SOL2 |  |
| 18 | Shift solenoid B(VFS-26) | | Output | 0V/Battery voltage level |  |
| | | | | 9V < Battery voltage level < 16V | |
| | | | | Power supply : V_SOL2 | |
| 19 | Shift lock solenoid | High | Output | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |
| 20 | Shift solenoid D(VFS-OD) | | Output | 0V/Battery voltage level |  |
| | | | | 9V < Battery voltage level < 16V | |
| | | | | Power supply : V_SOL1 | |
| 21 | - | | | | |
| 22 | Rear lamp relay | R ON | Output | 0V/Battery voltage level | 0.3V |
| | | Other | | 9V < Battery voltage level < 16V | Battery voltage level |
| 23 | - | | | | |
| 24 | Start relay | High | Output | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |
| 25 | Inhibitor switch signal (S2) | High | Input | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |
| 26 | Inhibitor switch signal (S3) | High | Input | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |
| 27 | Inhibitor switch signal (S4) | High | Input | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |
| 28 | - | | | | |
| 29 | - | | | | |
| 30 | - | | | | |
| 31 | - | | | | |
| 32 | Shift solenoid F(SS-B) | High | Output | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |
| 33 | Shift solenoid E(SS-A) | High | Output | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |
| 34 | Ground (Power 1) | | Ground | 0V | 0V |
| 35 | Ground (Power 2) | | Ground | 0V | 0V |
| 36 | Sports mode down switch | Down ON | Input | 0V/Battery voltage level | 0.3V |
| | | Other | | 9V < Battery voltage level < 16V | Battery voltage level |
| 37 | Sports mode up switch | Up ON | Input | 0V/Battery voltage level | 0.3V |
| | | Other | | 9V < Battery voltage level < 16V | Battery voltage level |
| 38 | Sports mode select switch | Sport mode | Input | 0V/Battery voltage level | 0.3V |
| | | Other | | 9V < Battery voltage level < 16V | Battery voltage level |
| 39 | - | | | | |
| 40 | Inhibitor switch signal (S1) | High | Input | 0V/Battery voltage level | Battery voltage level |
| | | Low | | 9V < Battery voltage level < 16V | 0.3 V |

| | | | | | |
|----|-------------------------------------|-----|--------|----------------------------------|---------------------------|
| 42 | - | | | | |
| 43 | - | | | | |
| 44 | - | | | | |
| 45 | - | | | | |
| 46 | - | | | | |
| 47 | Solenoid supply power 1 | ON | Power | 0V/Battery voltage level | Battery voltage level |
| | | OFF | | 9V < Battery voltage level < 16V | 0.3 V |
| 48 | Solenoid supply power 2 | ON | Power | 0V/Battery voltage level | Battery voltage level |
| | | OFF | | 9V < Battery voltage level < 16V | 0.3 V |
| 49 | TCM Input power 1 (For solenoid) | | Power | Battery voltage level | Battery voltage level |
| | | | | 9V < Battery voltage level < 16V | |
| 50 | TCM Input power 2 (For solenoid) | | Power | Battery voltage level | Battery voltage level |
| | | | | 9V < Battery voltage level < 16V | |
| 51 | - | | | | |
| 52 | - | | | | |
| 53 | Oil temperature sensor (-) | | Ground | 0V | 0V |
| 54 | Oil temperature sensor (+) | ON | Input | 0V/3.3V | Sensor level (0V~3.3V) |
| | | OFF | | | 0.3V |
| 54 | - | | | | |
| 55 | - | | | | |
| 56 | - | | | | |
| 57 | - | | | | |
| 58 | - | | | | |
| 59 | - | | | | |
| 60 | - | | | | |

Connector [CHG-K]


| Pin | Description | Condition | Type | Level | Test result |
|-----|--------------------|-----------|--------|----------------------------------|-----------------------|
| 1 | Power ground | | Ground | 0V | 0V |
| 2 | Battery power (B+) | ON | Power | 0V/Battery voltage level | Battery voltage level |
| | | OFF | | 9V < Battery voltage level < 16V | 0.3 V |
| 3 | Power ground | | Ground | 0V | 0V |
| 4 | Battery power (B+) | ON | Power | 0V/Battery voltage level | Battery voltage level |
| | | OFF | | 9V < Battery voltage level < 16V | 0.3 V |
| 5 | Power ground | | Ground | 0V | 0V |
| 6 | Battery power (B+) | | Power | Battery voltage level | Battery voltage level |
| | | | | 9V < Battery voltage level < 16V | |

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Control Module (TCM) > Repair procedures

Replacement

NOTE
In the case of the vehicle equipped with immobilizer or button engine start system, perform "Key Teaching" procedure together (Refer to "Immobilizer" or "Button Engine Start System in BE group).

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the TCM Connector (A).

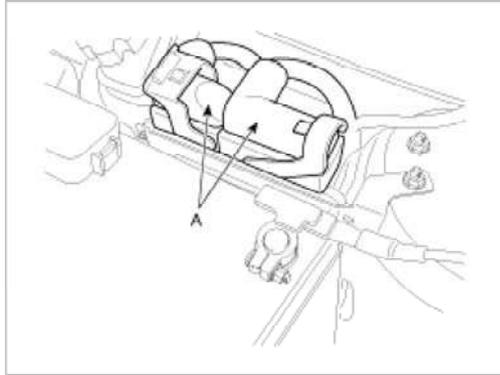


3. Remove the battery (Refer to "Chargin System" in EE group).
4. Remove the mounting bolts (A) and nut (B), and then remove the TCM (C).

Tightening torque:

(A) 21.6 ~ 32.4 N.m (2.2 ~ 3.3 kgf.m, 15.9 ~ 23.9 lb-ft)

(B) 9.8 ~ 14.7 N.m (1.0 ~ 1.5 kgf.m, 7.2 ~ 10.9 lb-ft)

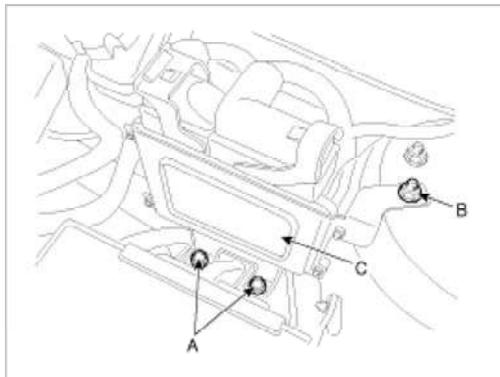

TCM Problem Inspection Procedure

1. TEST TCM GROUND CIRCUIT: Measure resistance between TCM and chassis ground using the backside of TCM harness connector as TCM side check point. If the problem is found, repair it.

Specification: Below 1Ω

2. TEST TCM CONNECTOR: Disconnect the TCM connector and visually check the ground terminals on TCM side and harness side for bent pins or poor contact pressure. If the problem is found, repair it.
3. If problem is not found in Step 1 and 2, the TCM could be faulty. If so, make sure there were no DTC's before swapping the TCM with a new one, and then check the vehicle again. If DTC's were found, examine this first before swapping TCM.
4. RE-TEST THE ORIGINAL TCM: Install the original TCM (may be broken) into a known-good vehicle and check the vehicle. If the problem occurs again, replace the original TCM with a new one. If problem does not occur, this is intermittent problem (Refer to "Intermittent Problem Inspection Procedure" in Basic Inspection Procedure).

Adjustment

TCM Learning


When shift shock is occurred or parts related with the transaxle are replaced, TCM learning should be performed.

- Transaxle assembly replacement
 - TCM replacement
 - TCM upgrading
1. TCM learning condition
 - ATF temperature: 60~115°C (140~239°F)

2. TCM learning procedure

A. Stop learning

Repeat the below shift pattern four times or more with stepping on the brake.

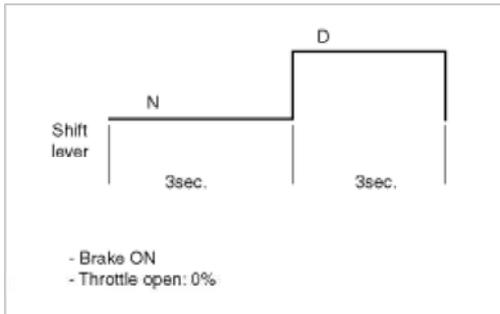

B. Driving learning

1. Drive the vehicle through all gears at D range. Drive from stop to 1st to 2nd to 3rd to 4th to 5th to 6th with keeping fixed throttle open.
2. Down shift from 6th to 5th, 5th to 4th, 4th to 3rd, 3rd to 2nd, 2nd to 1st.
3. Repeat the above driving pattern four times or more.

NOTE
Up-shift throttle open : 15~30%

Automatic Transaxle System > Automatic Transaxle Control System > Input Speed Sensor > Description and Operation

Description

- Integrated one unit for input & output speed sensor
- Differential current type (low: 7mA, high: 14mA)
- Failsafe: 4th gear hold (D), 2nd ~ 4th manual shift (S)

Automatic Transaxle System > Automatic Transaxle Control System > Input Speed Sensor > Specifications


Specification

| Item | Specification |
|---------------------|---|
| Type | Hall Effect Sensor, 2pins (Power: 9V, Signal) |
| Operation condition | -40 ~150°C [-40 ~ 302°F] |
| Sensor length | 52.7~52.9mm (2.0748~2.0827in.) |
| Air gap | 0.95~1.65mm (0.0374~0.0650in.) |

Automatic Transaxle System > Automatic Transaxle Control System > Input Speed Sensor > Repair procedures

Removal

1. Remove the battery and the battery tray. (Refer to "Charging system" in EE group.)
2. Remove the under cover (A).

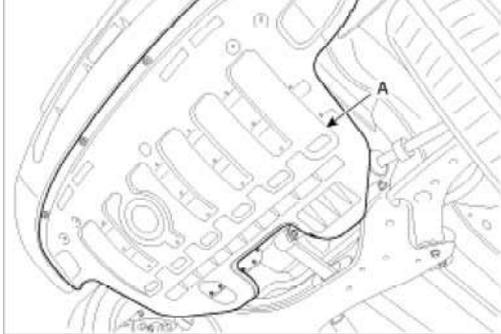

3. Replace new gasket and the plug after draining the automatic transaxle fluid by removing the drain plug.
(Refer to "Automatic transaxle system" in this group.)
4. Remove the valve body cover (A) and eyebolt (B).

Tightening torque:

(A) 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)


(B) 34.3 ~ 44.1 N.m (3.5 ~ 4.5 kgf.m, 25.3 ~ 32.6 lb-ft)

CAUTION

The gasket of the eyebolt use new one.

NOTE


Remove installation bolts in the engine room first and then remove others under the vehicle.

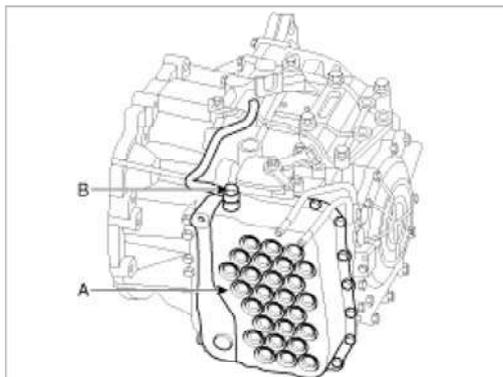

5. Remove the plate and the detent spring (A) after removing the bolt.

Tightening torque:


24.5 ~ 35.3 N.m (2.5 ~ 3.6 kgf.m, 18.1 ~ 26.0 lb-ft)

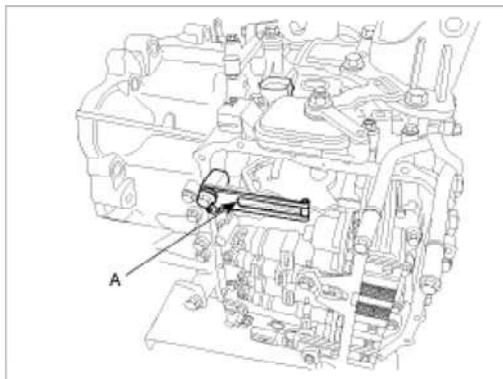

6. Remove the bolt (3ea) after disconnecting the solenoid valve connector (A) and the oil temperature sensor connector (B).
-

CAUTION


Be careful not to damage the harness lock connector.

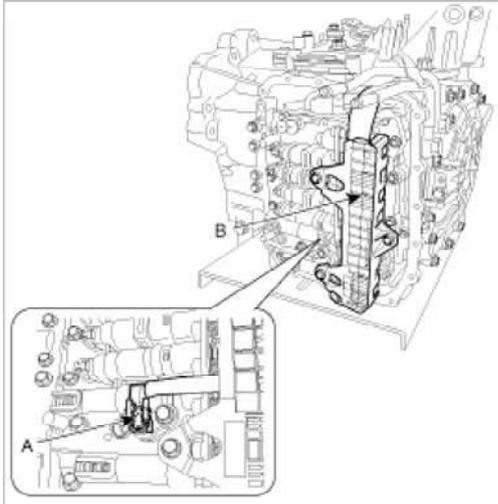

7. Remove the valve body assembly (A).

Tightening torque:


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

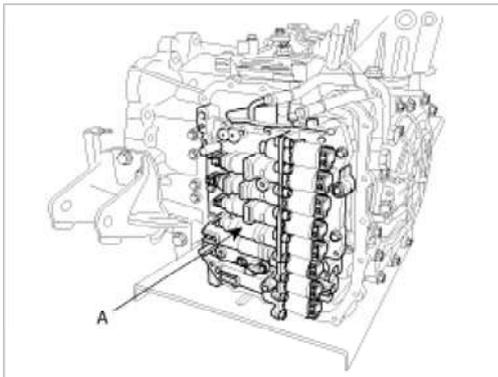

8. Disconnect the input & output speed sensor connector(A).
9. Remove the input & output speed sensor (B) after removing the bolts(2ea).

Tightening torque:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

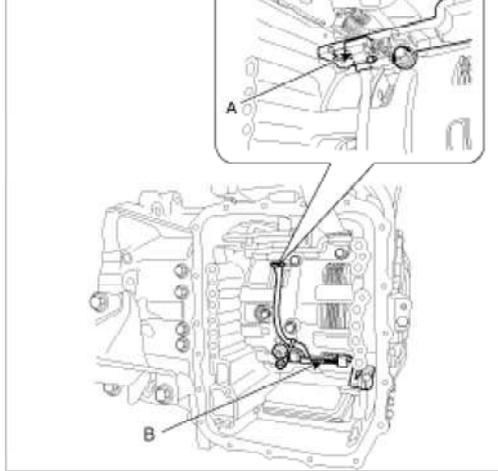

Installation

1. Installation is the reverse of removal.

CAUTION

After replacement or reinstallation procedure of the valve body assembly, must perform procedures below.

- Continue to apply liquid gasket at application points at the valve body cover with $\varnothing 2.5\text{mm}$ (0.0984in.) thickness.

Liquid gasket Part name :

Threebond 1281B or LOCTITE FMD-546

- Adding automatic transaxle fluid. (Refer to "automatic transaxle system" in this group.)

Automatic Transaxle System > Automatic Transaxle Control System > Output Speed Sensor > Description and Operation

Description

- Integrated one unit for input & output speed sensor
- Differential current type (low: 7mA, high: 14mA)
- Failsafe: 4th gear hold (D), 2nd ~ 4th manual shift (S)

Automatic Transaxle System > Automatic Transaxle Control System > Output Speed Sensor > Specifications


Specification

| Item | Specification |
|---------------------|--|
| Type | Hall Effect Sensor, 2pins (Power: 9V, Signal) |
| Operation condition | -40 ~150°C [-40 ~ 302°F] |
| Sensor length | 33.6~33.8mm (1.3228~1.3307in.) |
| Air gap | 0.25~1.9mm (0.0098~0.0748in.) |

Automatic Transaxle System > Automatic Transaxle Control System > Output Speed Sensor > Repair procedures

Removal

2. Remove the under cover (A).

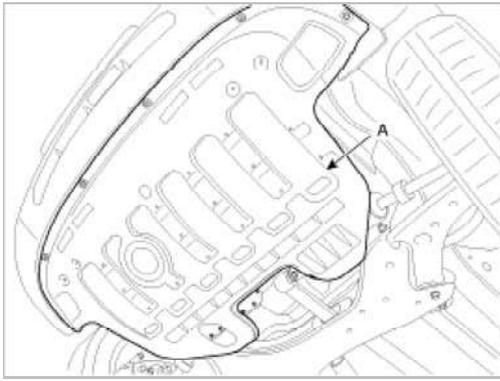

3. Replace new gasket and the plug after draining the automatic transaxle fluid by removing the drain plug. (Refer to "Automatic transaxle system" in this group.)
4. Remove the valve body cover (A) and eyebolt (B).

Tightening torque:

(A) 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)


(B) 34.3 ~ 44.1 N.m (3.5 ~ 4.5 kgf.m, 25.3 ~ 32.6 lb-ft)

CAUTION

The gasket of the eyebolt use new one.

NOTE


Remove installation bolts in the engine room first and then remove others under the vehicle.

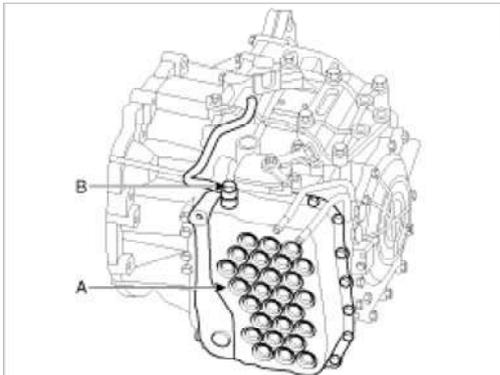

5. Remove the plate and the detend spring (A) after removing the bolt.

Tightening torque:

24.5 ~ 35.3 N.m (2.5 ~ 3.6 kgf.m, 18.1 ~ 26.0 lb-ft)

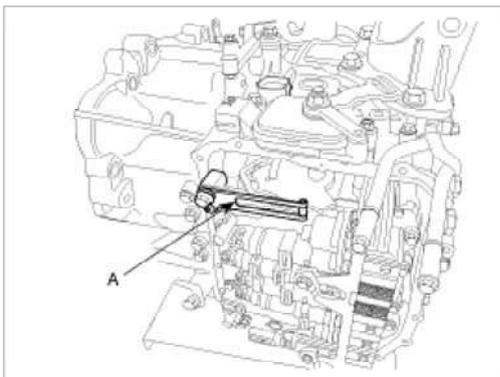


6. Remove the bolt (3ea) after disconnecting the solenoid valve connector (A) and the oil temperature sensor connector

Tightening torque:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

CAUTION


Be careful not to damage the harness lock connector.

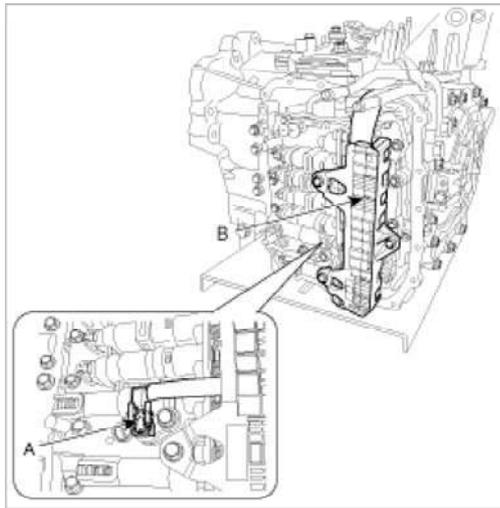

7. Remove the valve body assembly (A).
-

Tightening torque:


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

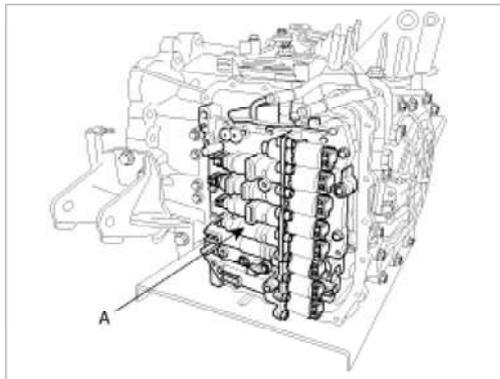

8. Disconnect the input & output speed sensor connector (A).
9. Remove the input & output speed sensor (B) after removing the bolts(2ea).
-

Tightening torque:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

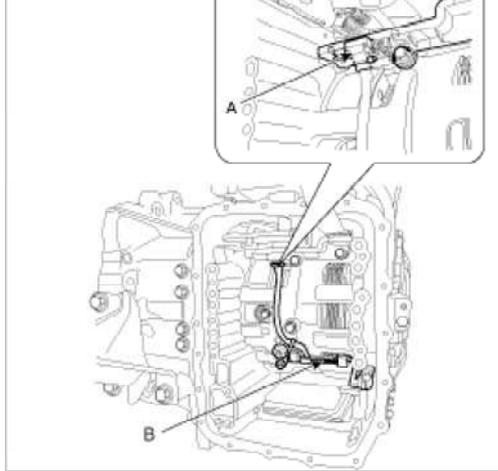

Installation

1. Installation is the reverse of removal.

CAUTION

After replacement or reinstallation procedure of the valve body assembly, must perform procedures below.

- Continue to apply liquid gasket at application points at the valve body cover with $\varnothing 2.5\text{mm}$ (0.0984in.) thickness.

Liquid gasket Part name :
Threebond 1281B or LOCTITE FMD-546

- Adding automatic transaxle fluid. (Refer to "automatic transaxle system" in this group.)

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Oil Temperature Sensor > Specifications


Specification

| Item | Specification |
|-----------------------|--|
| Type | Negative Thermal Coefficient Type |
| Operation temperature | -40~165°C [-40~329°F] |
| Resistance | 4.81k Ω ~39 Ω |
| Failsafe | Oil temperature set to default value [80°C(176°F)] |

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Oil Temperature Sensor > Repair procedures

Removal

1. Remove the battery and the battery tray. (Refer to "Charging system" in EE group.)
2. Remove the under cover (A).

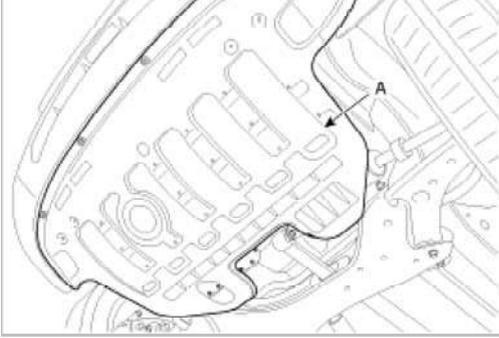

3. Replace new gasket and the plug after draining the automatic transaxle fluid by removing the drain plug.
(Refer to "Automatic transaxle system" in this group.)
4. Remove the valve body cover (A) and eyebolt (B).

Tightening torque:

(A) 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)


(B) 34.3 ~ 44.1 N.m (3.5 ~ 4.5 kgf.m, 25.3 ~ 32.6 lb-ft)

CAUTION


The gasket of the eyebolt use new one.

NOTE

Remove installation bolts in the engine room first and then remove others under the vehicle.

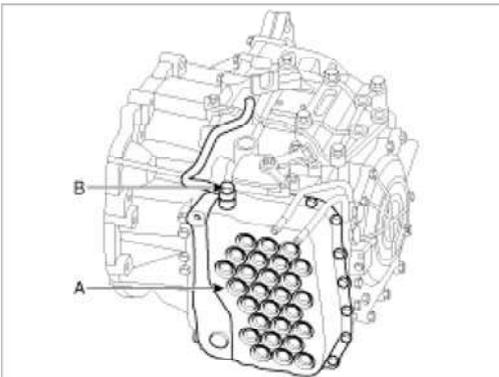

5. Disconnect the oil temperature sensor connector (A).

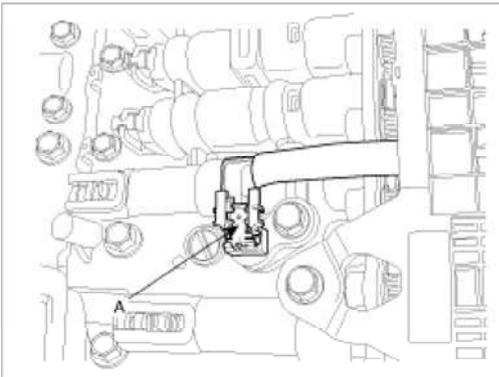


6. Remove the oil temperature sensor (A) after removing a bolt.

Tightening torque:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

CAUTION

Be careful not to damage the harness lock connector.

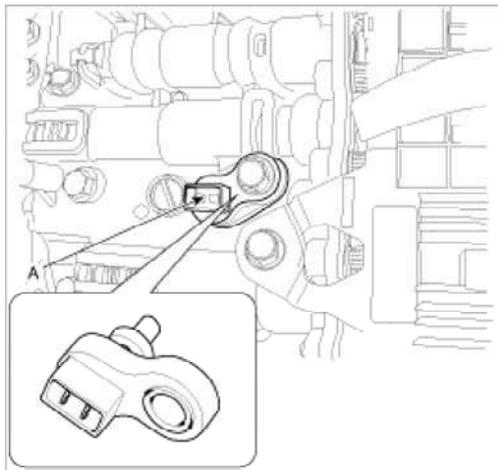

Installation

1. Installation is the reverse of removal.

CAUTION

After replacement or reinstallation procedure of the valve body assembly, must perform procedures below.

- Continue to apply liquid gasket at application points at the valve body cover with $\varnothing 2.5\text{mm}$ (0.0984in.) thickness.

Liquid gasket Part name :

Threebond 1281B or LOCTITE FMD-546

- Adding automatic transaxle fluid. (Refer to "automatic transaxle system" in this group.)

Automatic Transaxle System > Automatic Transaxle Control System > Inhibiter Switch > Description and Operation


Description

| Item | Specification |
|-----------------|--|
| Type | Combination of output signals from 4 terminals |
| Power supply | 12V |
| Range detection | 7-position (P, R, N, D, X, Y, Z) |
| Failsafe | 1st, 2nd gear is prohibited. |


Automatic Transaxle System > Automatic Transaxle Control System > Inhibiter Switch > Repair procedures

Removal

1. Set room side lever and T/M side lever to "N" position.
2. Remove the battery and the battery tray. (Refer to "Charging system" in EE group.)
3. Remove the air cleaner assembly. (Refer to "Intake manifold" in EM group.)
4. Remove the shift cable mounting nut (B).
5. Disconnect the inhibitor switch connector (A).

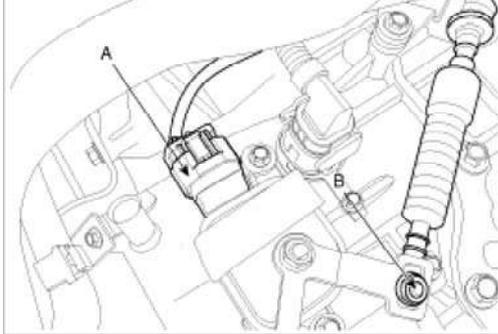

6. Remove the manual control lever (A) and the washer (B) after removing a nut (C).

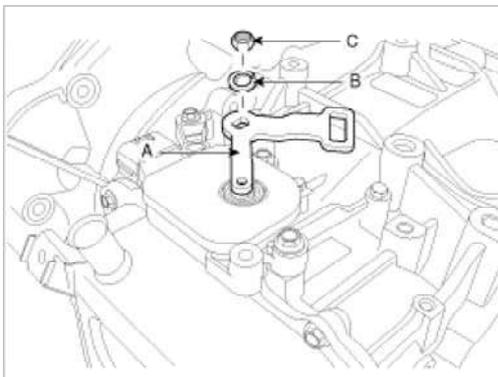


CAUTION

When installing, fix the manual control lever and the inhibitor switch with $\varnothing 5\text{mm}$ (0.1969in.) fixing jig. And then tighten the inhibitor assembly mounting bolts.

7. Remove the inhibitor assembly (A) after removing the bolts (2ea).

Tightening torque:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

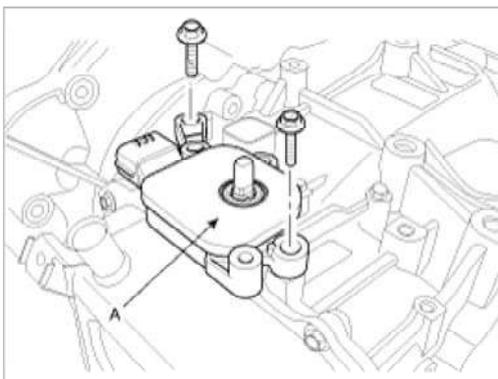

CAUTION

When installing, tighten the inhibitor assembly mounting bolt lightly.

Installation

1. Installation is the reverse of removal.